 
 


CanadaDocksTM

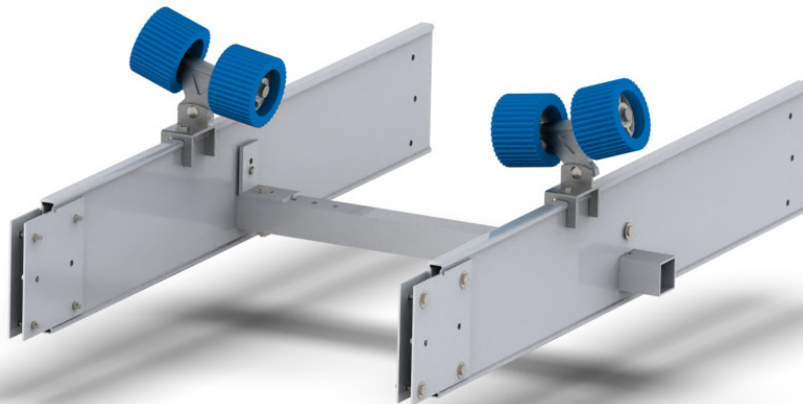

Where *fun* on the water *begins!*

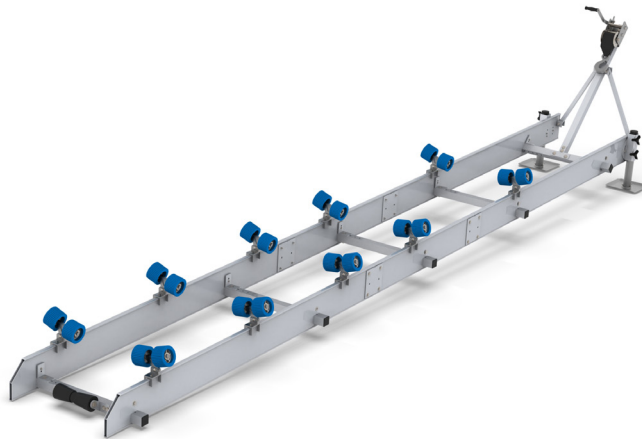

Roller Ramp Additional 4FT Extension

Read this manual and related assembly instructions before attempting to assemble the parts enclosed to ensure that your new CanadaDocks System is assembled safely and correctly.

PRODUCT WARRANTY

- CanadaDocks Inc. Warrants all products to be free of defects in workmanship and material under normal conditions and for which use they are intended. CanadaDocks Inc. Shall not be liable for any incidental, consequential or special damages, without limitation any lost profits, business interruption, loss of opportunity or loss of revenue, resulting from the misuse of CanadaDocks Inc. Products and does not assume any liability of purchaser or others for injury to persons or property. CanadaDocks Inc. Makes no express or implied warranties other than the warranties set forth herein, including without limitation, the warranties of merchantability, fitness for a particular purpose, or from any trade usage.
- CanadaDocks Inc. Warrants its CanadaDocks Roller Ramp, purchased new, to be free of defects in its structure for 5 years. This warranty covers defective parts on the CanadaDocks aluminum Stringers only (cross members, square aluminum legs and bracing). Any defective product must be returned with a Return Goods Authorization # before being delivered to CanadaDocks Inc. A copy of the original sales receipt must accompany all claims. The freight on the defective goods is the responsibility of the consumer. Obligation under this warranty is limited to repair, replacement, or credit for the defective product, provided that CanadaDocks Inc. Determines that the product defect was not the result of misuse or neglect. Freight on the repaired or replaced products is the responsibility of the consumer.
- Some States and/or Provinces do not allow the limitation of incidental or consequential damages or on the duration of an implied warranty so the above limitations or exclusions may not apply to you. This warranty may vary from State to State or Province to Province. This warranty gives you specific legal rights and you may also have other rights which vary from State to State or Province to Province.
- This warranty does not extend to anyone except the original buyer. This warranty does not apply to wobble wheels, winch, winch strap and clasp, fasteners, hardware, galvanized inner tubing for legs, and footpads. Labour is not covered by warranty.
- Before installing your CanadaDocks Roller Ramp examine the lake bottom carefully to ensure that the lake bottom is stable where the feet or bottom of the stringers of the CanadaDocks Roller Ramp will rest. Always wear clothing appropriate to conditions when installing, repairing or removing your CanadaDocks Roller Ramp. Monitor children carefully on or about the Roller Ramp. It is the owner's responsibility to inspect and properly maintain the Roller Ramp and surrounding area.
- The Roller Ramp is rated to take, evenly spread, up to 2500 lbs (1134 kilograms) in weight per 16' section. CanadaDocks Roller Ramp capacity is based on the total weight of the boat, motor, gasoline, and extras. Do not overload the Roller Ramp. Your warranty will not apply if your CanadaDocks Roller Ramp is improperly assembled. This warranty does not apply to damage caused by improper installation, overloading, impact by boats or other objects in the water, damage by severe weather conditions including snow or ice, or other Acts of God. CanadaDocks Inc. Recommends removing the Roller Ramp for winter storage. The warranty will not extend to repairs made by anyone other than CanadaDocks Inc.
- To receive more information or to service the obligations under this warranty, contact CanadaDocks Inc. at 1-877-434-0359 or the following mailing address:
CanadaDocks Inc.™ 3690 Adjala-Tecumseth Townline RR2 Beeton, Ontario Canada L0G 1A0
Website: www.canadadocks.ca
Email: info@canadadocks.ca

TRADEMARK


CanadaDocks ™ logo is a trademark of CanadaDocks Inc.

IN ORDER TO VALIDATE PLEASE VISIT OUR WEBSITE:

www.canadadocks.ca/warranty


INCLUDED IN KIT:

RRA1  1x

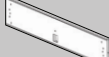
ER4F  2x


B3  2x


NL38  4x


RKB1  2x


B175  10x

RRCB1  4x

SRA1  2x

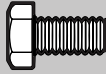B575  2x


CAB1  2x

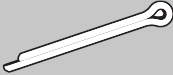CPP2  4x

CB15S  2x

W7838  12x

 
WG278  8x

RRW1  4x


NLN38  2x

TOOLS REQUIRED:


5/16" SOCKET WITH RATCHET TO
SUIT OR 5/16" WRENCH



 9/16" SOCKET WITH RATCHET TO
SUIT OR 9/16" WRENCH



 7/16" SOCKET WITH RATCHET TO
SUIT OR 7/16" WRENCH



NEEDLE-NOSE PLIERS



HACKSAW

 
 
 


Safety Protection



1


Remove half of the hardware from both connection points and loosen other side. Save removed hardware for use in **STEP 3**.

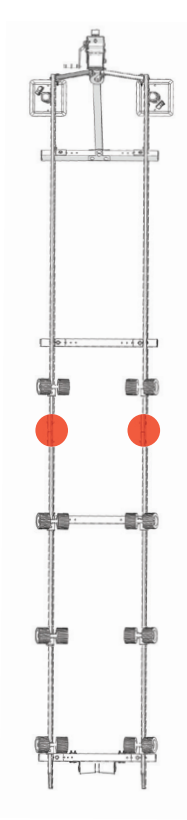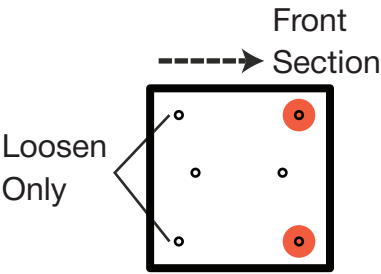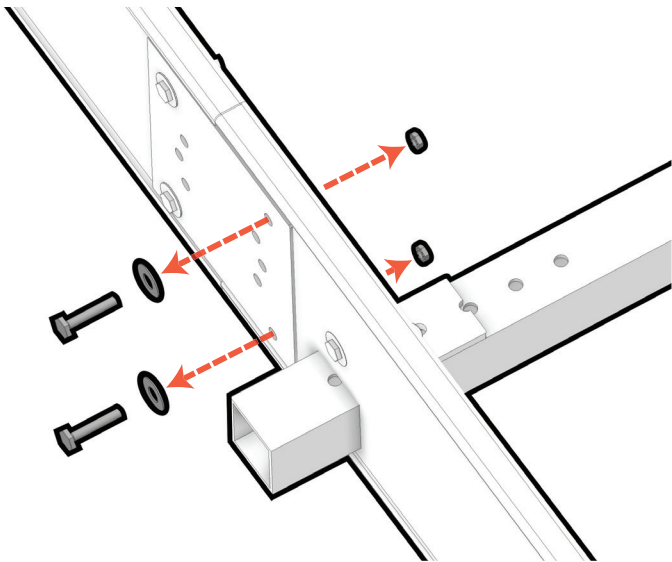

Repeat the above process by removing the remaining hardware from the opposite side.

2

 After removing the hardware, separate the 2 sections.

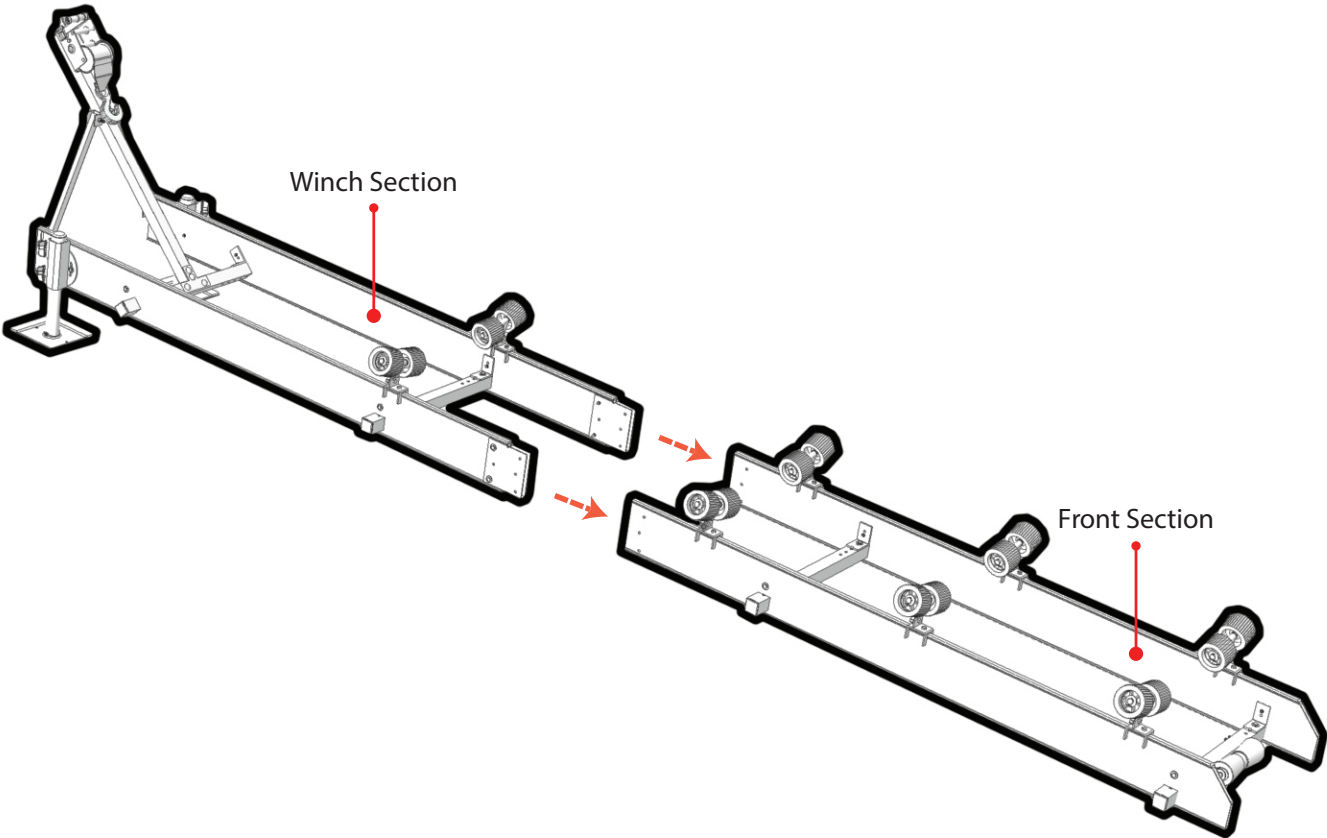


3

Connect extension rails to the existing **Winch Section** as shown below by sliding the rails in between the joiner plates.

ER4F



 2x

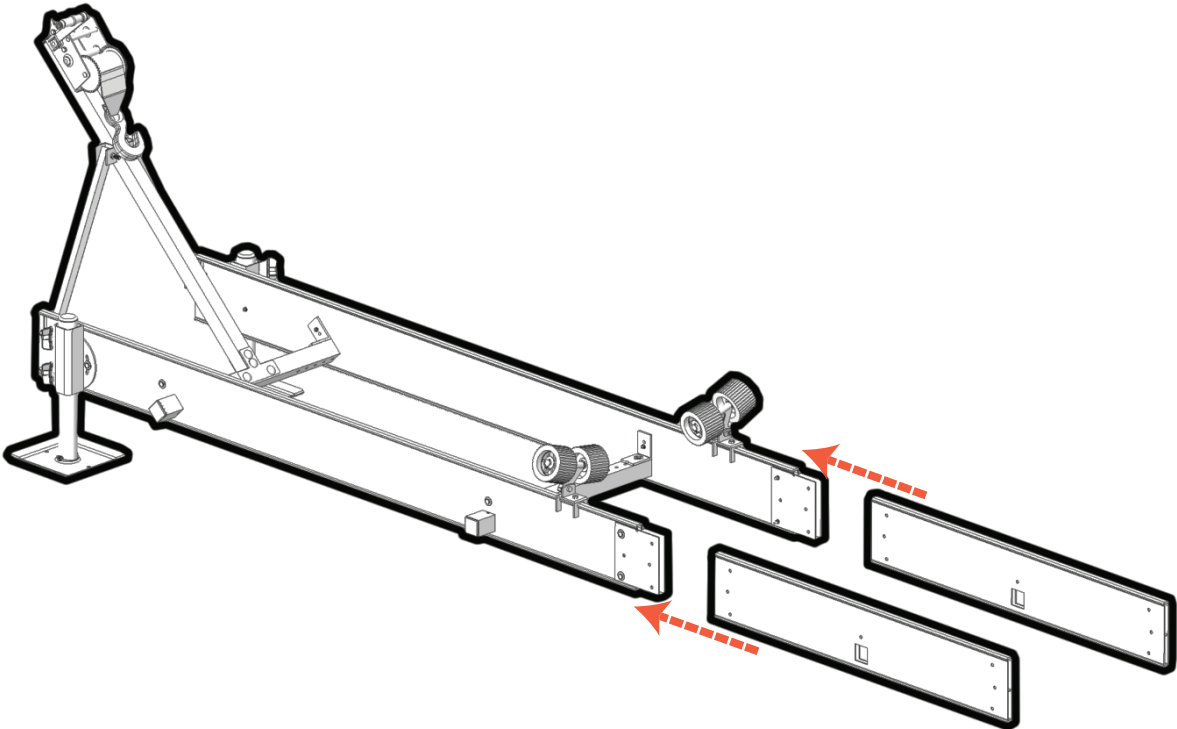


4


Using the previously removed hardware in **STEP 1**, fasten the new 4' extension rails. (Finger tighten only)

Re-Attach Outside Hardware

 Re-Attach Inside Hardware

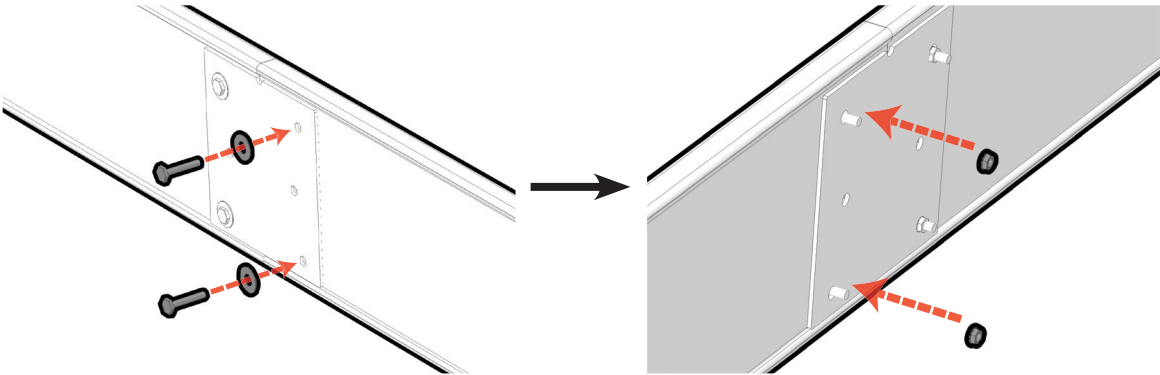

Repeat **STEP 4** on the opposite side.

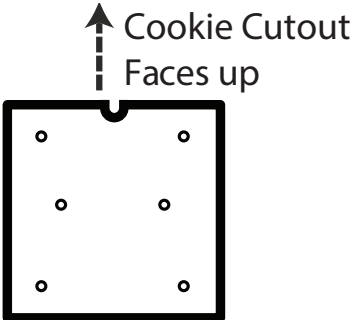 


5

Insert the cross arm into the extension rails. Ensure the cross arm is evenly spaced between the support rails and that the spacing mirrors the cross arms on the **Winch Section**.

RRA1



 
1x

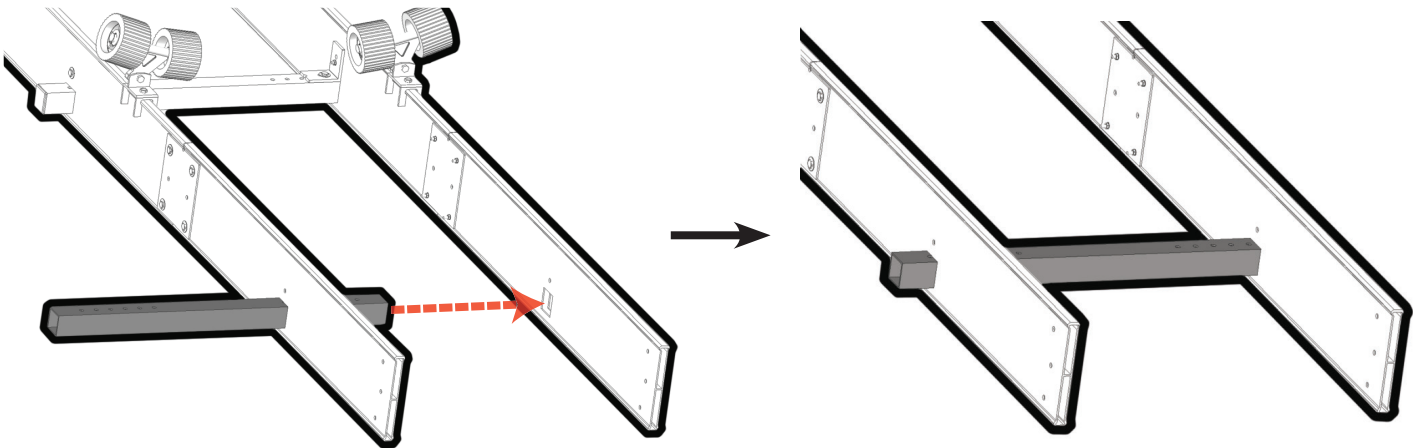

6


Attach cross arm brackets to each of the 2 extension rails as seen below.

B175




2x

W7838




2x

CAB1





2x

NL38



  2x

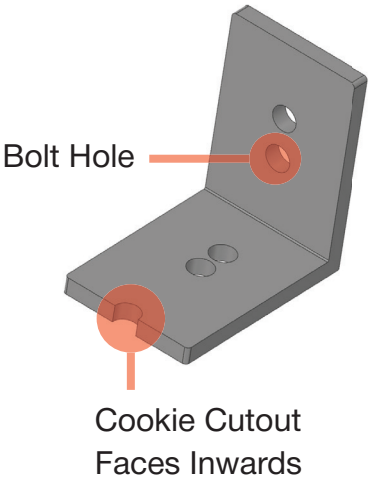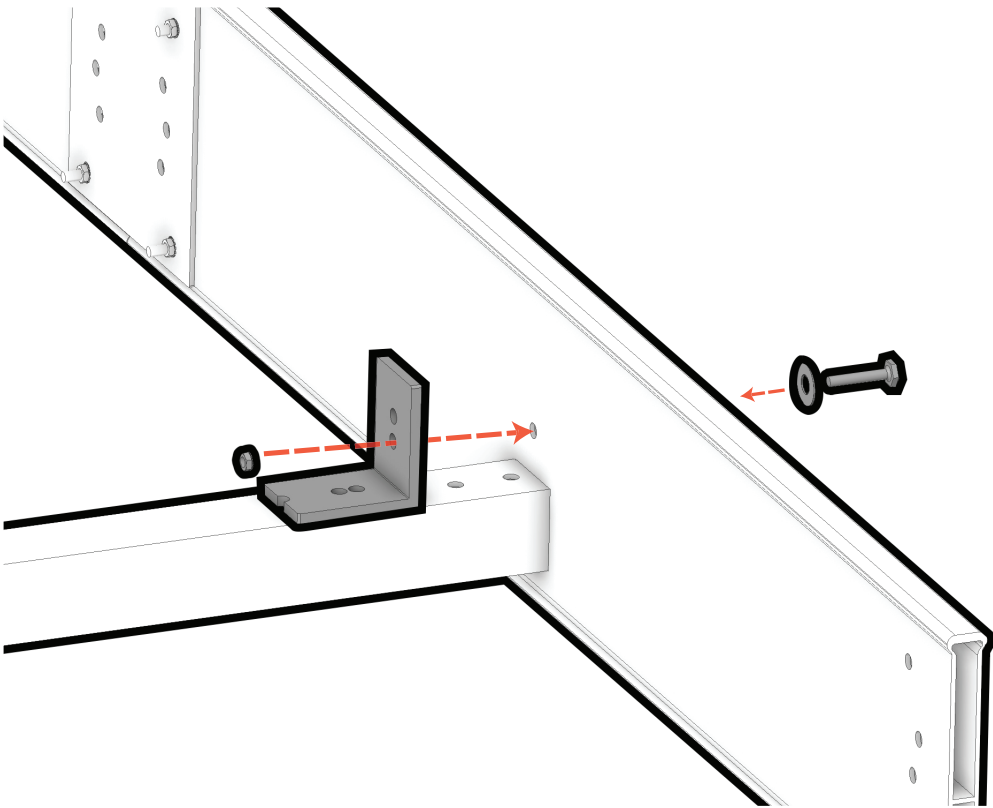




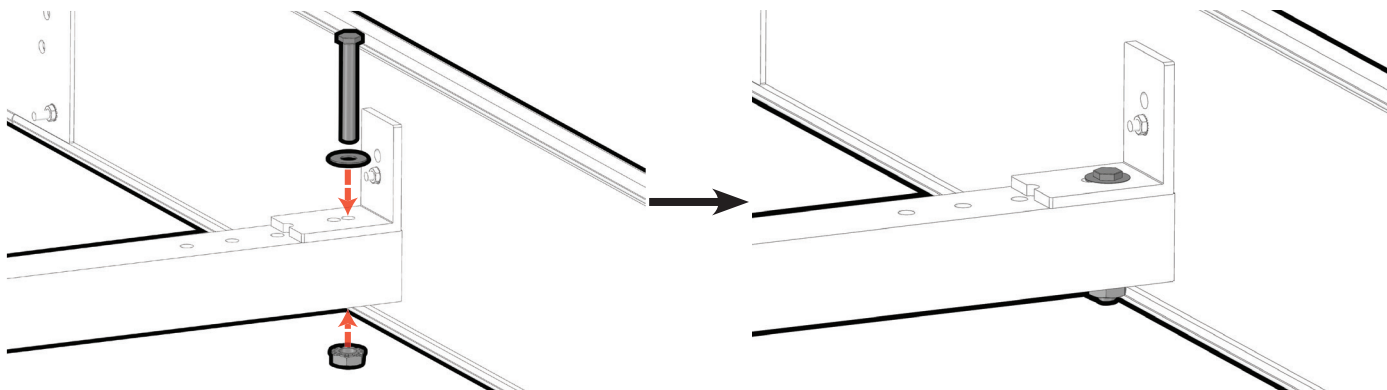 
Repeat this process on the other side and leave finger tight to allow for adjustment in **Step 7**.

7

Complete the cross arm installation by fastening the arms to the previously installed brackets from **STEP 6**.





Repeat **STEP 7** for the remaining connection points.


B3		2x
W7838		2x
NL38		2x



8

 Begin assembling the roller wheels (x2) side by side.

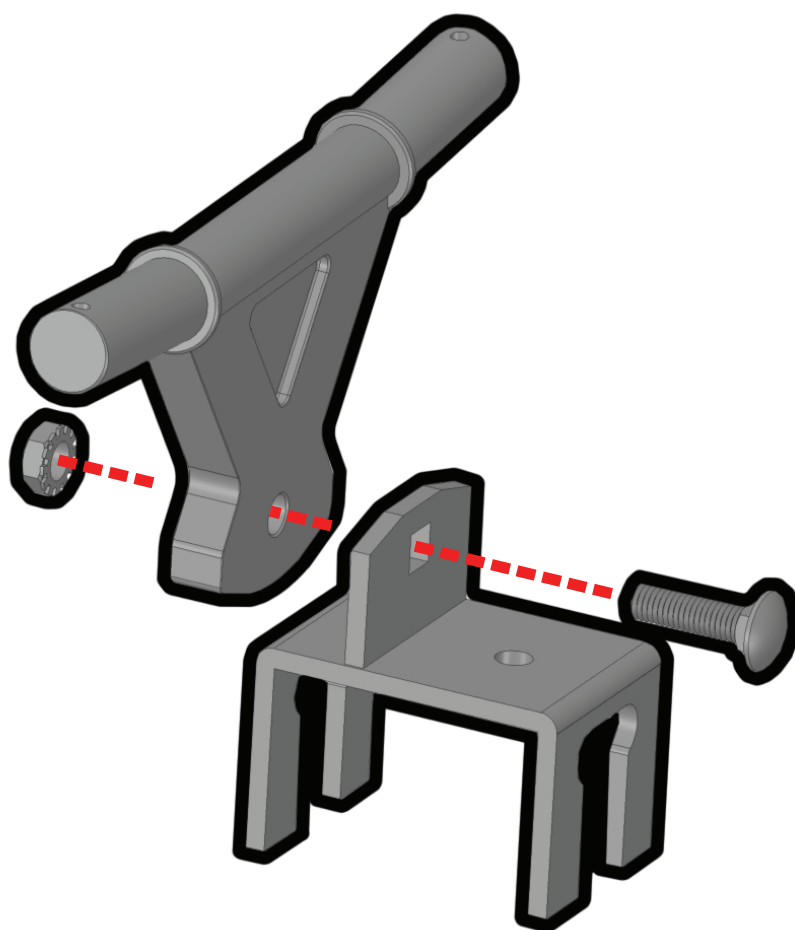

NLN38		2x
SRA1		2x
RKB1		2x
CB15S		2x




Repeat **STEP 8** for the second roller assembly.

9

Install wheels and provided washers onto the axles (**SRA1**).


RRW1		4x
WG278		8x

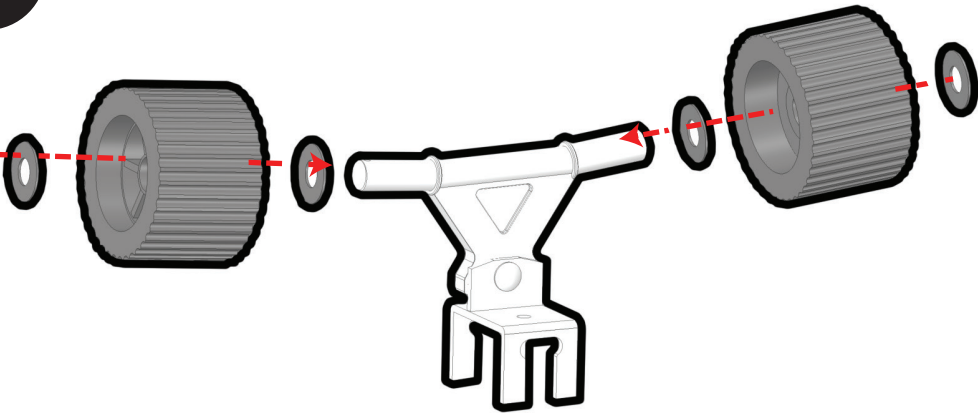 


Repeat **STEP 9** for the second roller assembly.

10

Ensure you bend both cotter pins on the sides of **each wheel** to secure it.

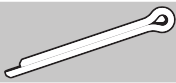CPP2		4x
------	---	----


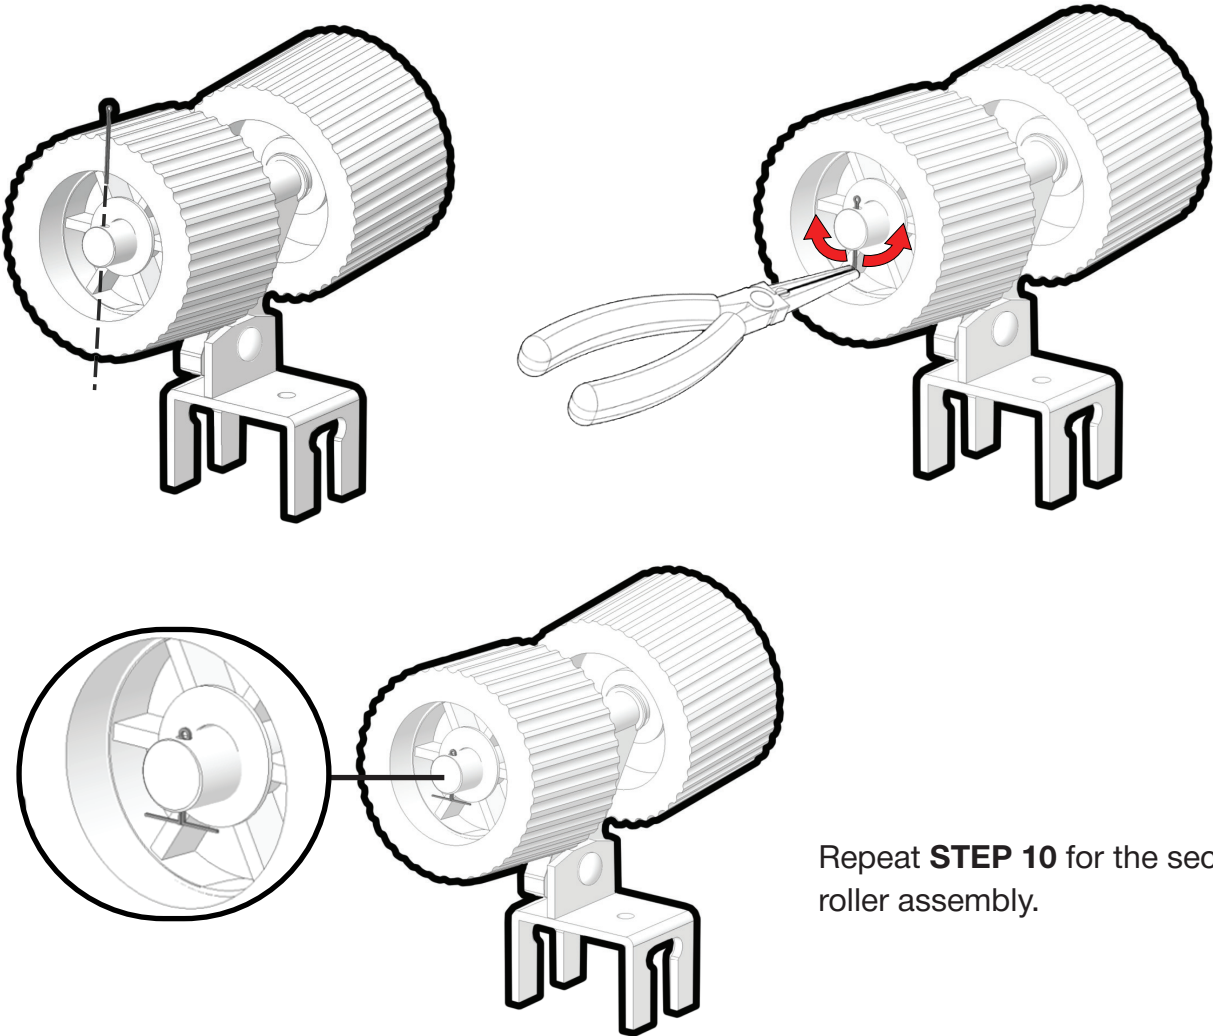 


Repeat **STEP 10** for the second roller assembly.


11

Install assembled rollers on each of the newly installed rails as seen below.

  Slide Roller Assembly 2x

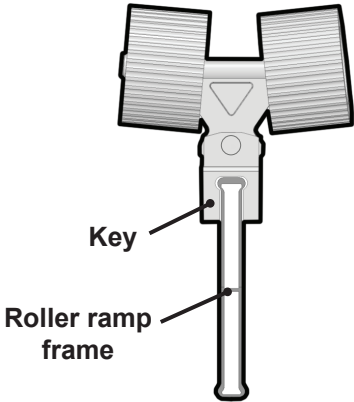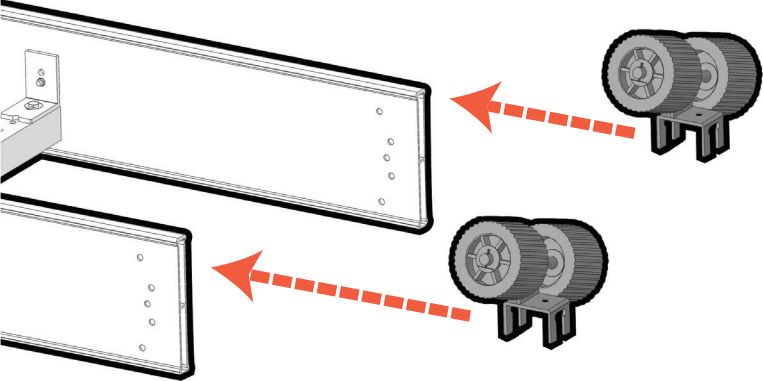



 
Position slide roller assembly onto the track by using the key at the bottom of the slide roller assembly.

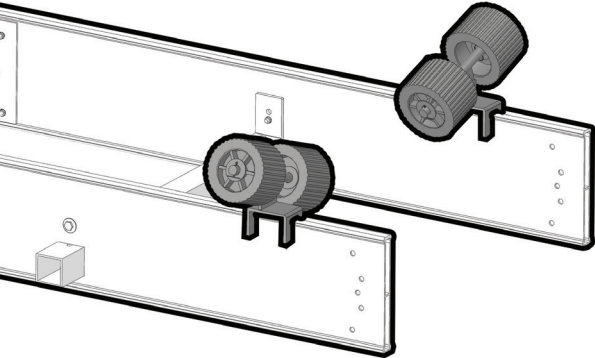

12

After sliding each slide roller assembly in place, tighten the bolt for each as seen below.

   
B575 2x

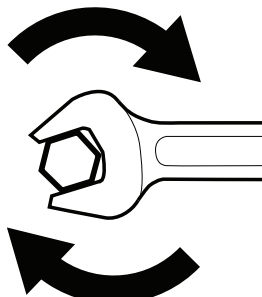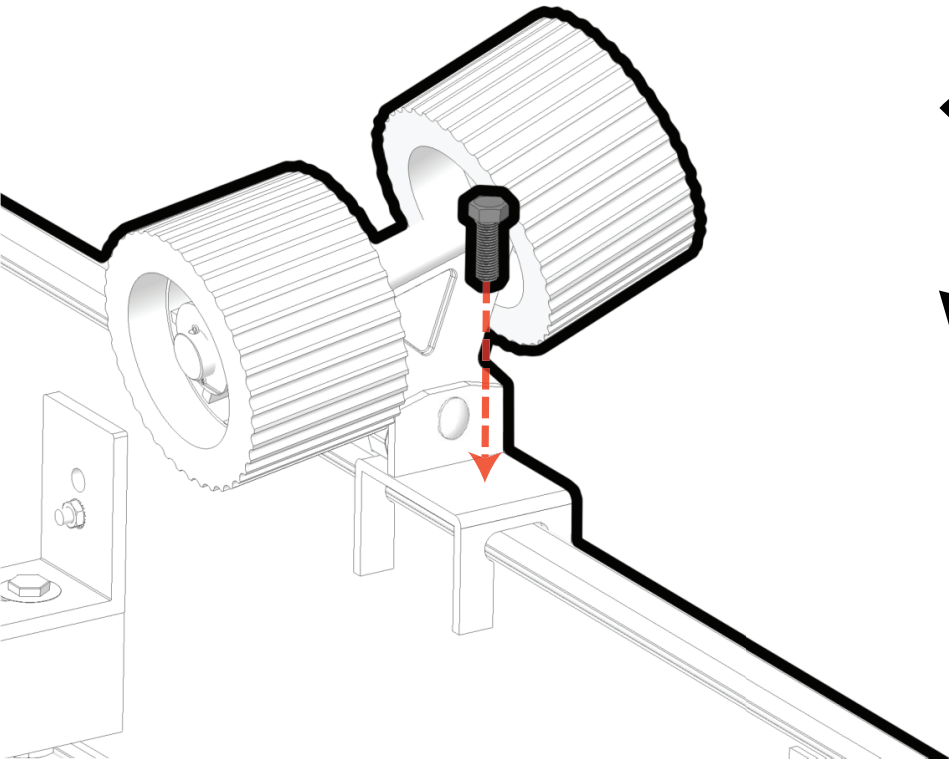





Do Not Over tighten

 13

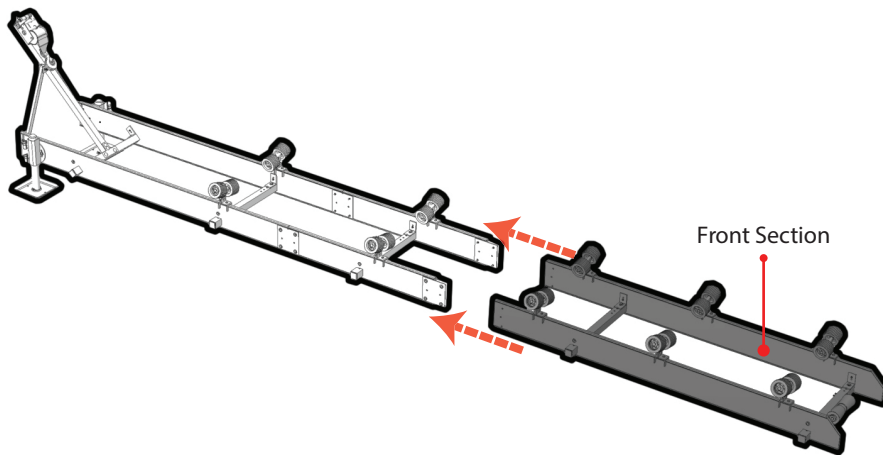 
Re-attach the **front section** that was previously put aside in **STEP 2**, to the newly assembled extension.




B175		8x
W7838		8x
RRCB1		4x
NL38		8x

Fasten the **front section** to the extended roller ramp with the provided joiner plates and hardware to complete the assembly.

 Outside Joiner Plate

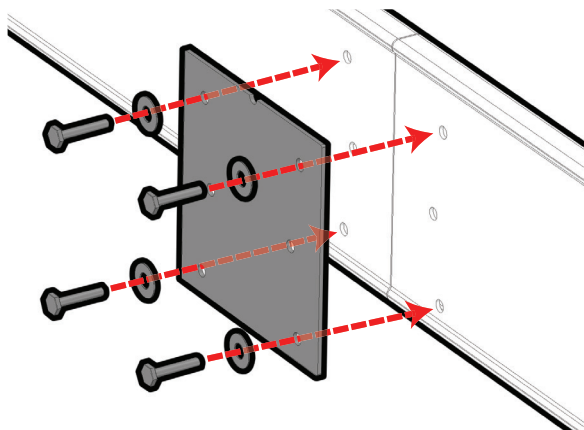

Inside Joiner Plate

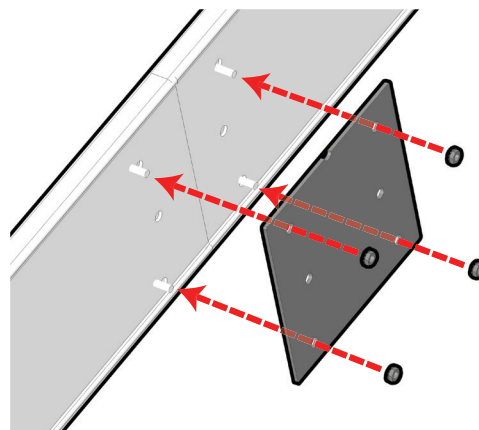 


Repeat the above images on the opposite side.

14


After all sections are fastened together make sure to go over and tighten all nuts and bolts with a wrench or ratchet that were installed to ensure nothing is loose.

 Locations to be tightened can be seen below.

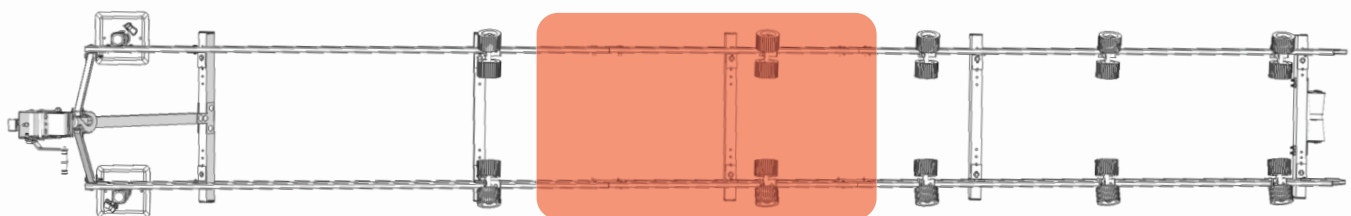


Optional Support Legs:

 Optional support legs are sold separately, if needed. See below for reasons why your Roller Ramp location may require them based on terrain conditions.

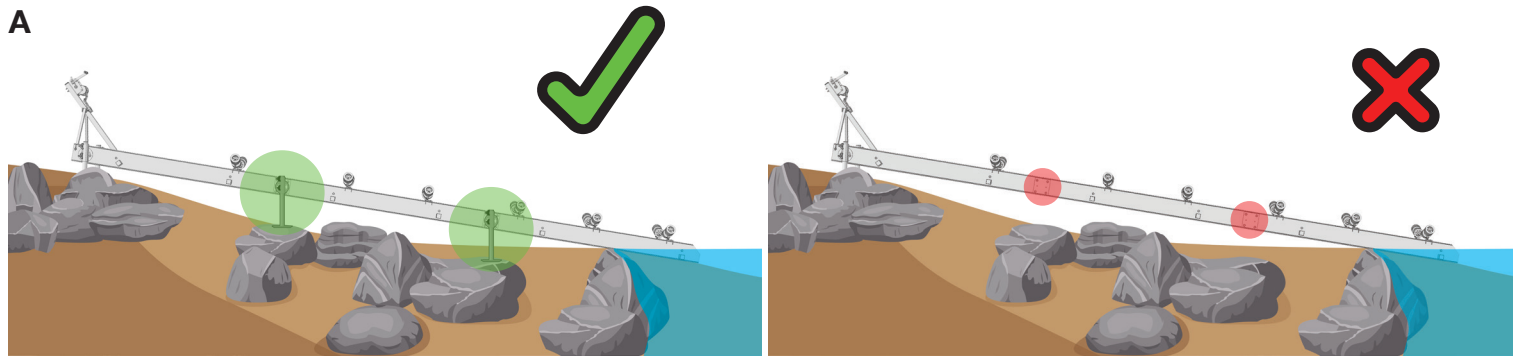

 The support legs are used in situations where there is elevated space between the terrain surface and the connection plates shown in scenario **(A)**. The legs are used for extra stability in these situations where the terrain is not as flat as in scenario **(B)**.

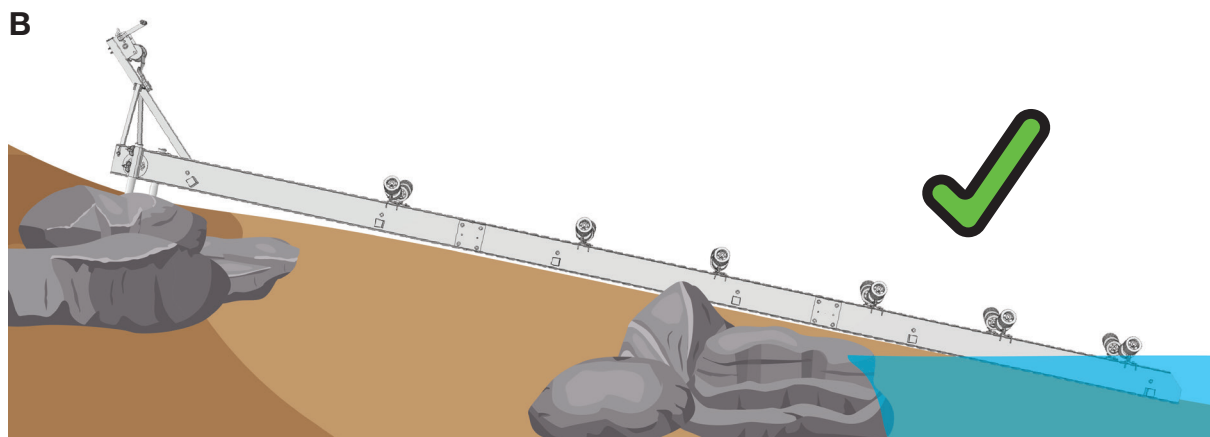

Scenario **(B)** doesn't require the optional legs as the terrain under the roller ramp is fairly flat and doesn't need the extra stability.

Where *fun* on the water *begins!*

Please leave us a **Google review**



We'd love to hear from
you and see your photos!



Phone

705.434.0359

1.877.434.0359



Email

info@canadadocks.ca



Address

3690 Adjala-Tecumseth Tl,
Beeton ON L0G 1A0

Rev 05 07.03.25

CanadaDocks.ca

