

INCLUDED IN KIT:


TPU1  X2 CB35S  X2 NL38  X2




TOOLS REQUIRED:

9/16 WRENCH OR SOCKET WITH RATCHET TO SUIT

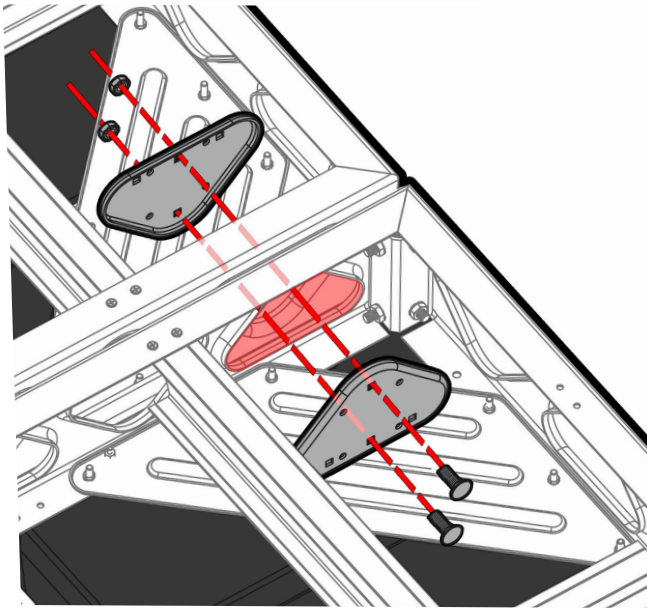


1



TPU1  X2
CB35S  X2
NL38  X2

Triangle plates used for coupling docks can be attached using Carriage Bolts (CB35S) and Locknuts (NL38) (as shown above).

2

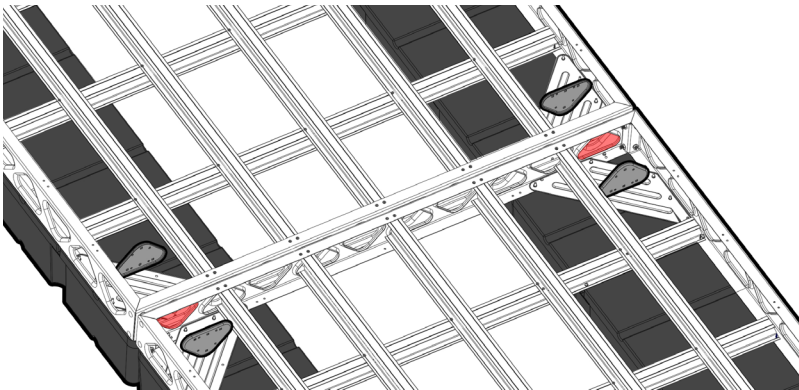

Placement of the triangle plates may depend on the type of project you are looking to do. Consult our experts to best determine where they may be placed.

Please Note: Each kit includes only 2 triangle plates. In the above image 4 triangle plates are shown for illustrative purposes.