


INCLUDED IN KIT:

TPU1



X2

CB35S



X2


NL38



X2

TOOLS REQUIRED:


9/16 WRENCH OR SOCKET WITH RATCHET TO SUIT

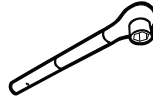

OR



1

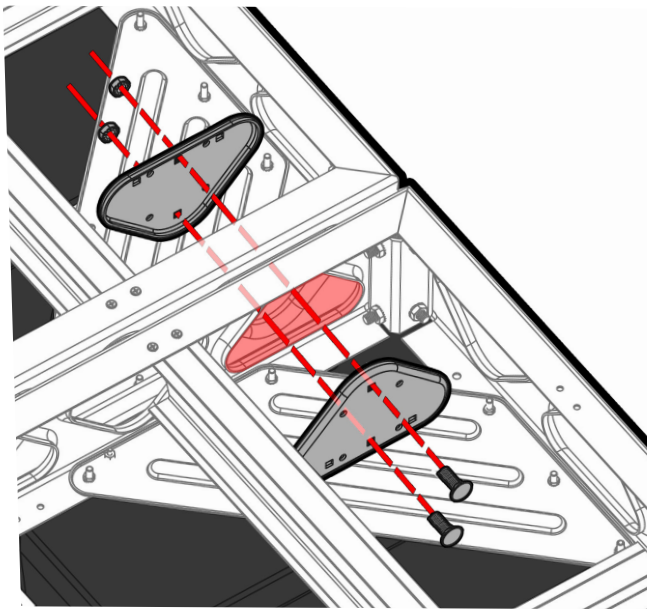

TPU1



X2

CB35S



X2


NL38



X2

Triangle plates used for coupling docks can be attached using Carriage Bolts (CB35S) and Locknuts (NL38) (as shown above).

2

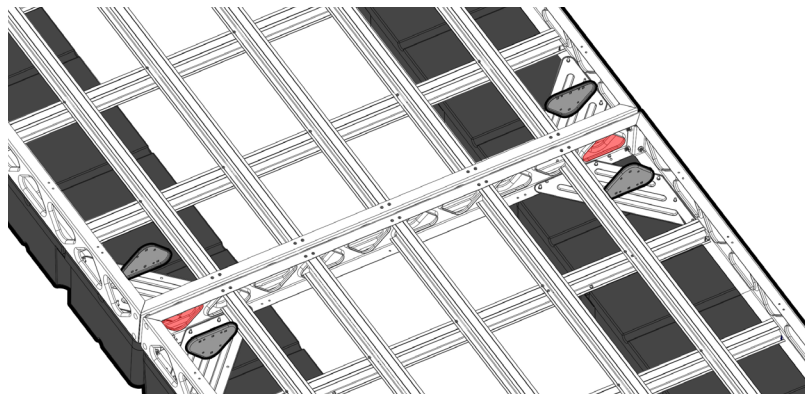

Placement of the triangle plates may depend on the type of project you are looking to do. Consult our experts to best determine where they may be placed.

Please Note: Each kit includes only 2 triangle plates. In the above image 4 triangle plates are shown for illustrative purposes.