


INCLUDED WITH KIT:

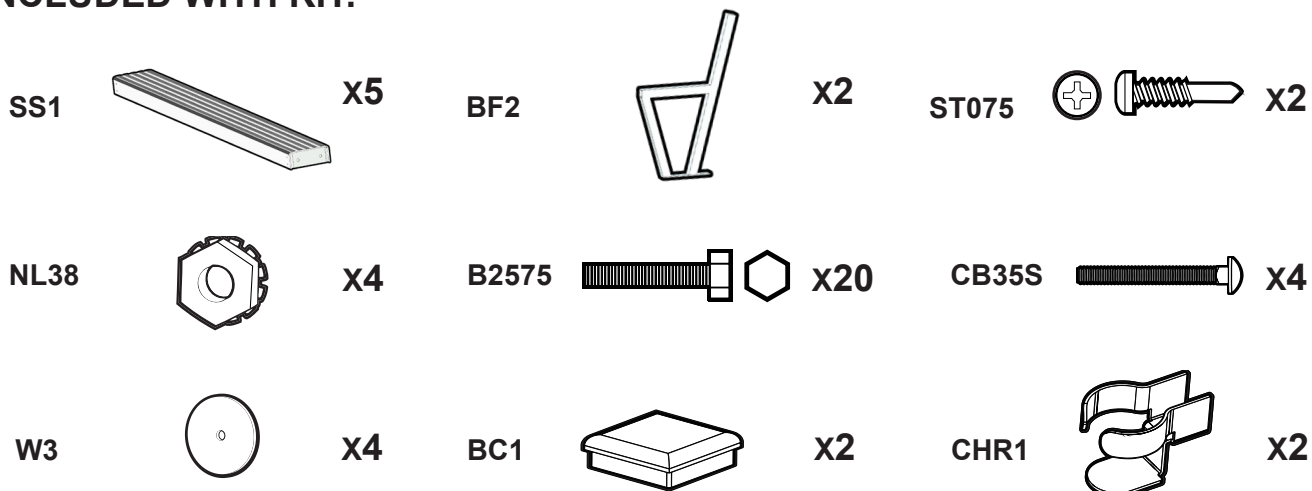

TOOLS REQUIRED :


Socket Wrench with 7/16" & 9/16" Socket

OR



Box Wrench with 7/16" & 9/16" Socket

Driver with #3 Phillips Bit


Drill Bit 13/32"

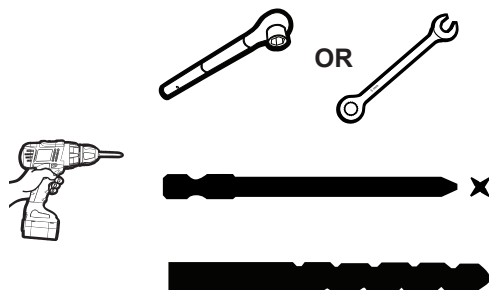


1

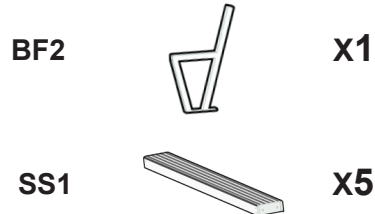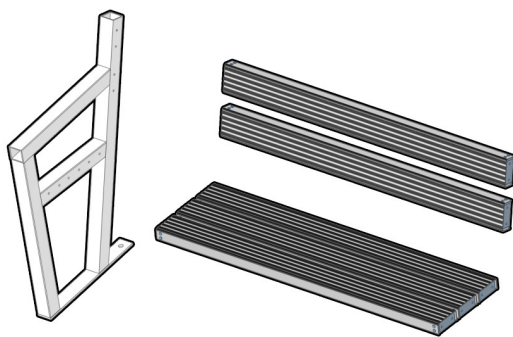

2

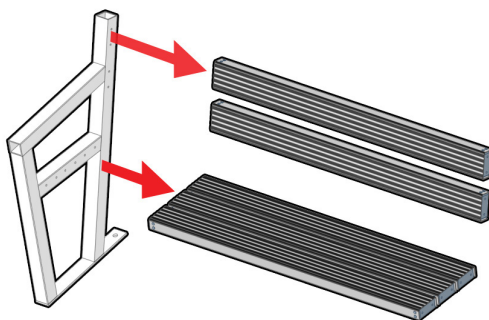


3

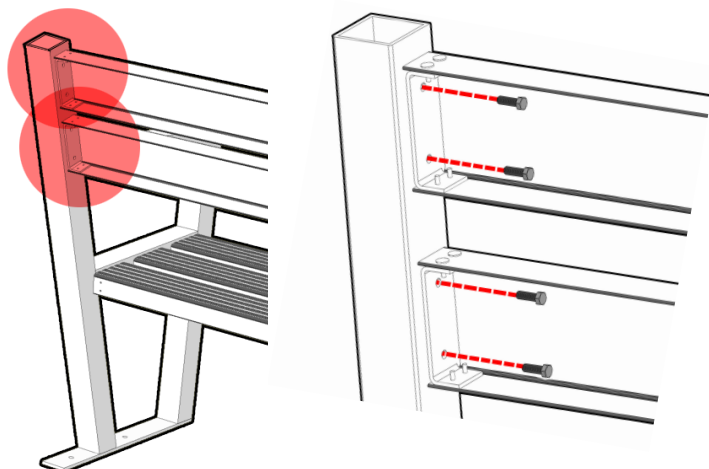


B2575  x4

4

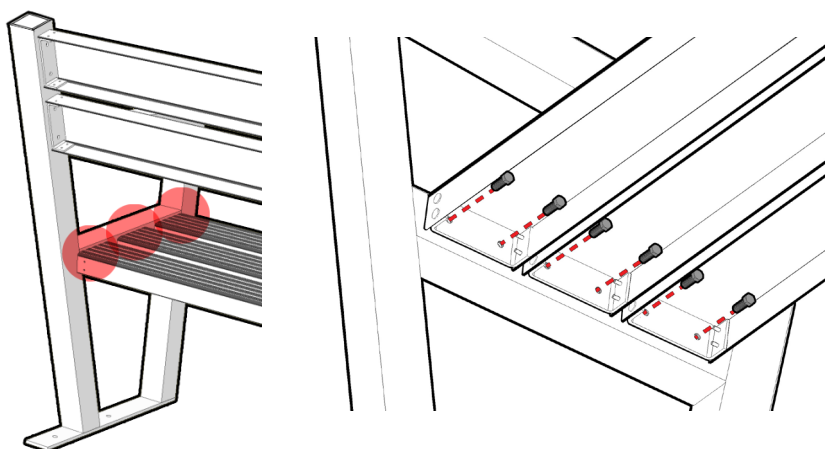

B2575  x6

5


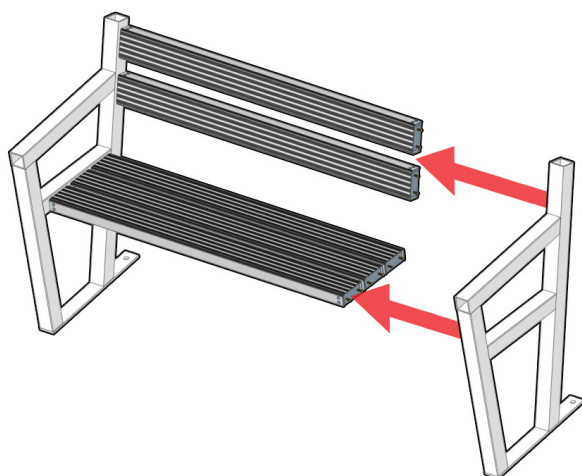


BF2





x1

6

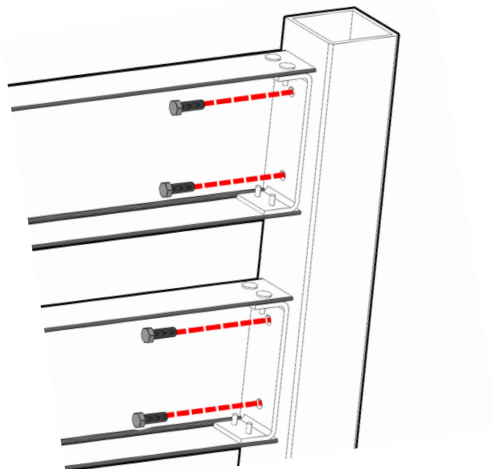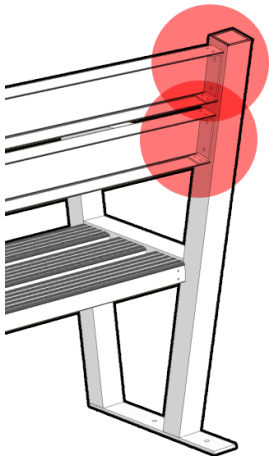


B2575  x4

7

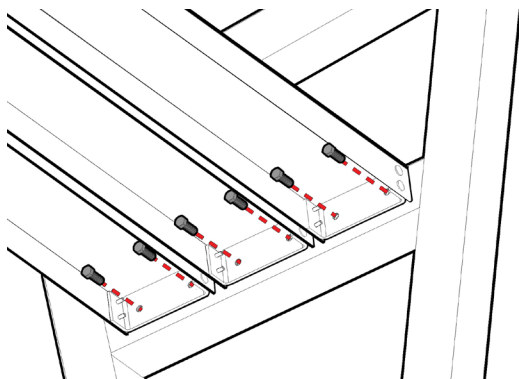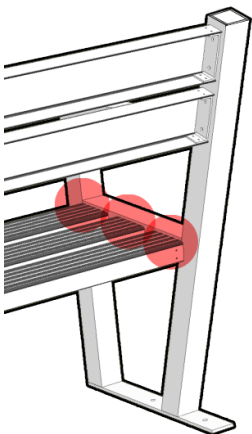

B2575  x6

8

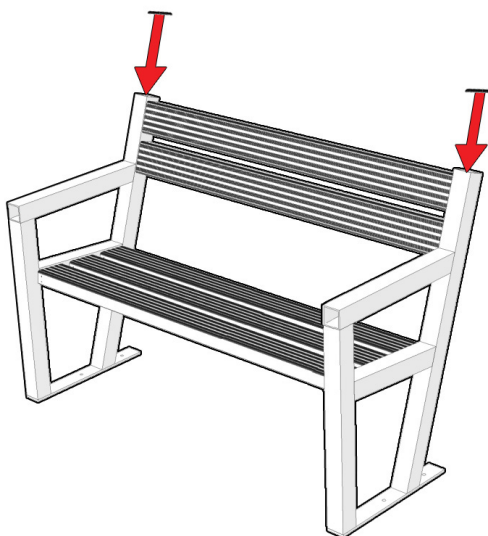


BC1  x2

9

CHR1



X2


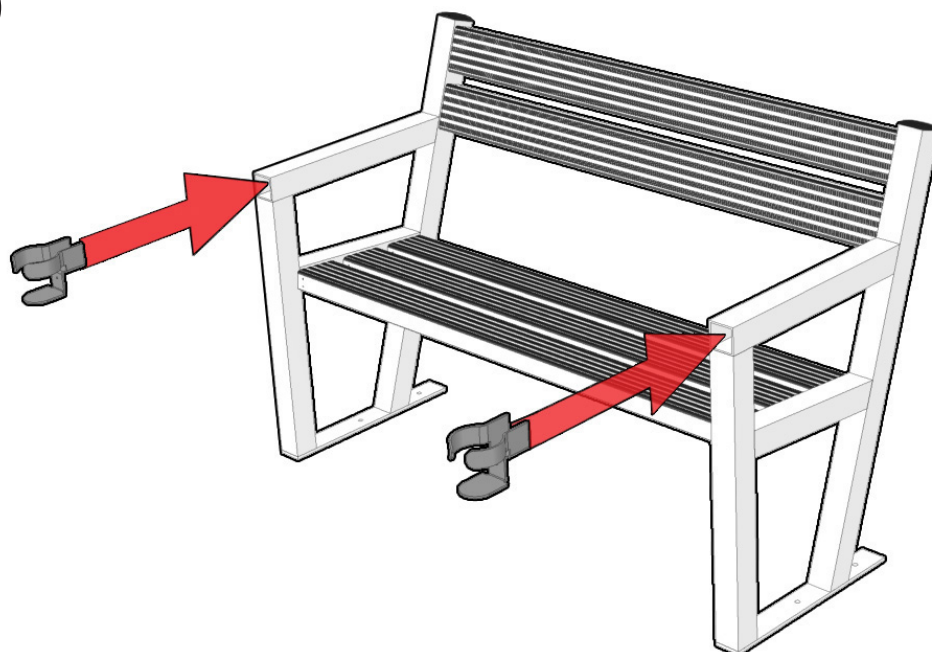


10


ST075



X2

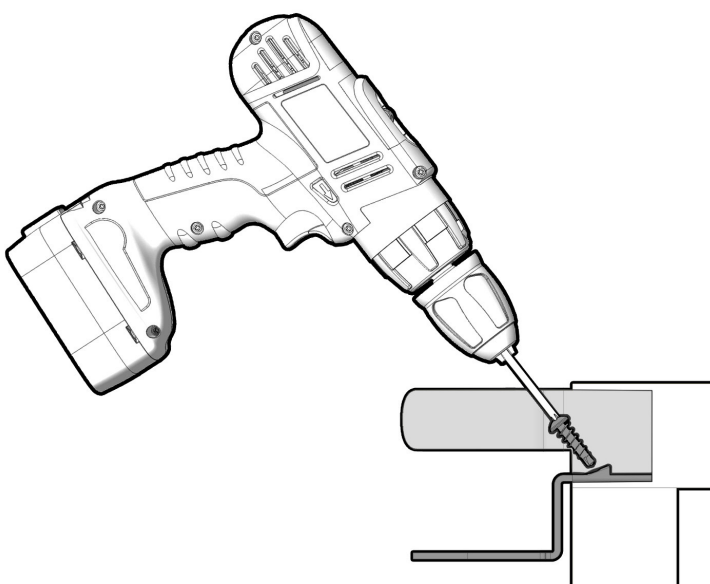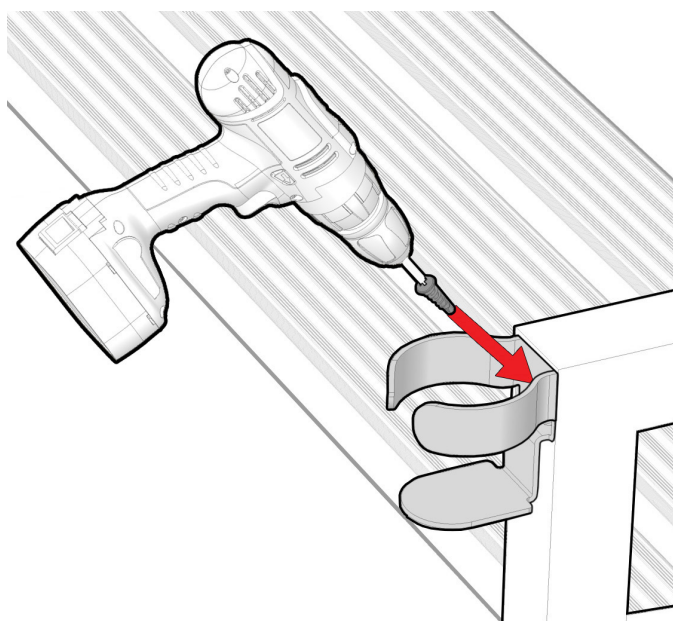


11

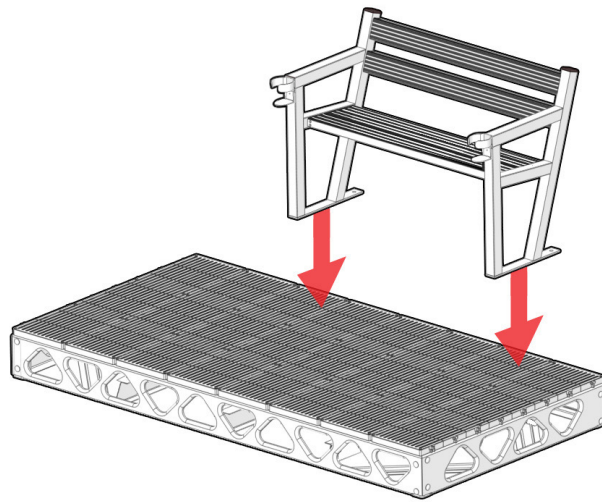

Place bench on dock to your desired location.
Line up holes on bottom bracket to the holes on the decking.


PLEASE NOTE: 4x8 Dock used for demonstration purposes. Instructions are also applicable to 8x8 dock sections.

12

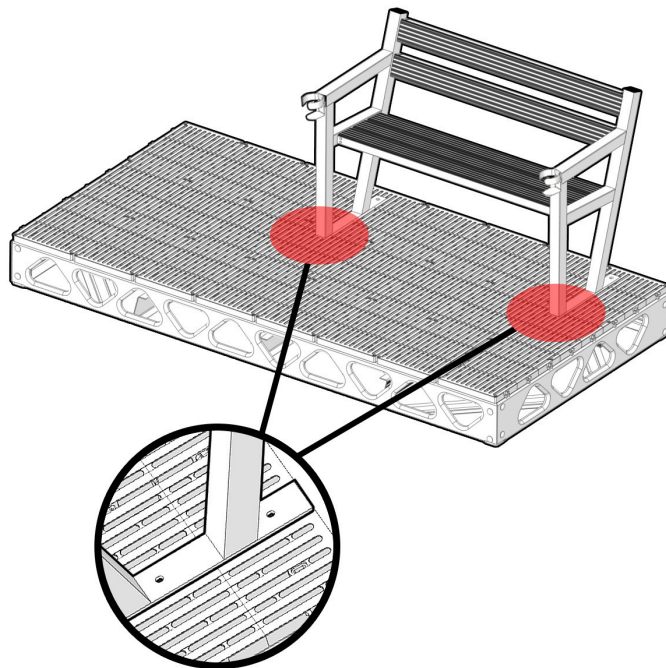

Line up bench bracket holes with slots in decking.

13

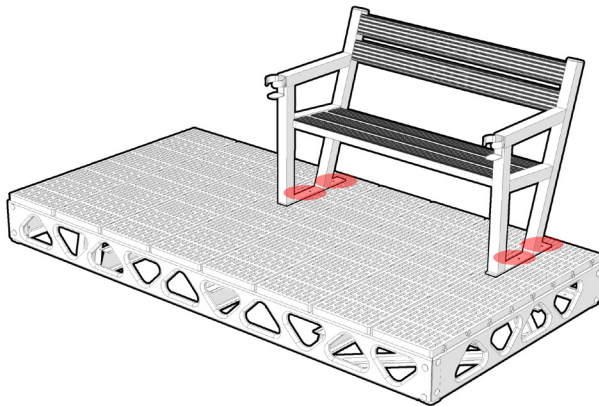

W3



X4

NL38





X4

CB35S




X4

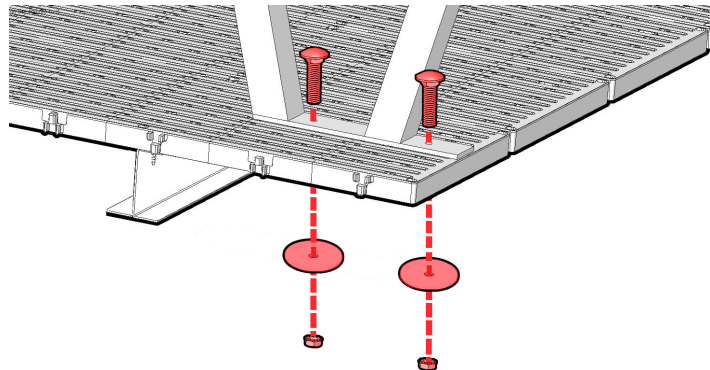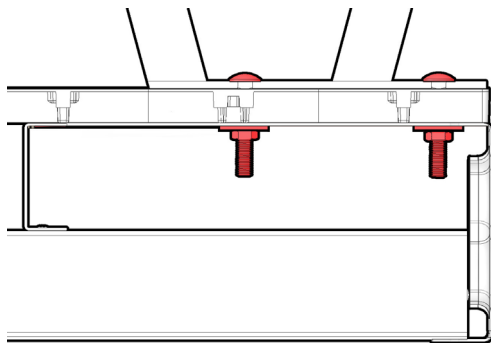

Connect carriage bolts(SB35S) with washers(W3) and lock nuts(NL38) as shown for both sides of bench.

PLEASE NOTE: Some hardware has been removed in the images above to clarify installation.

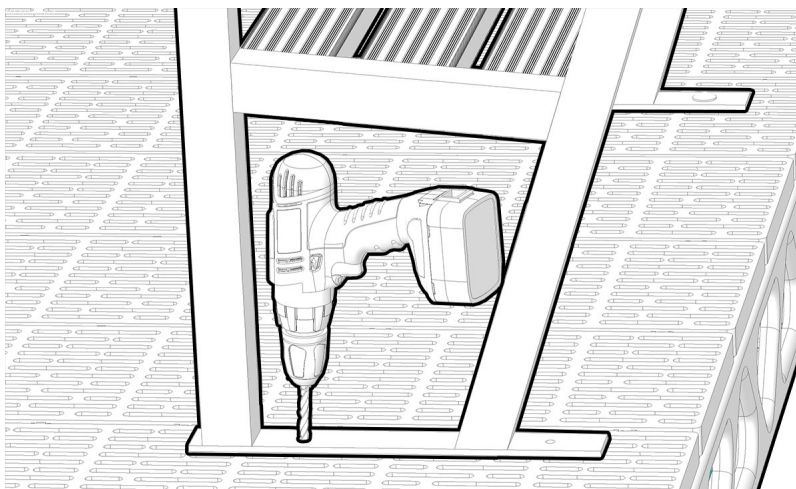

Drill Bit 13/32"



TIP: Sometimes the holes in the decking do not line up with the bench bracket hole. If this happens to you use a driver with a 13/32" drill bit to make a hole in the decking for your bolt.