


CanadaDocksTM



Where *fun* on the water *begins!*

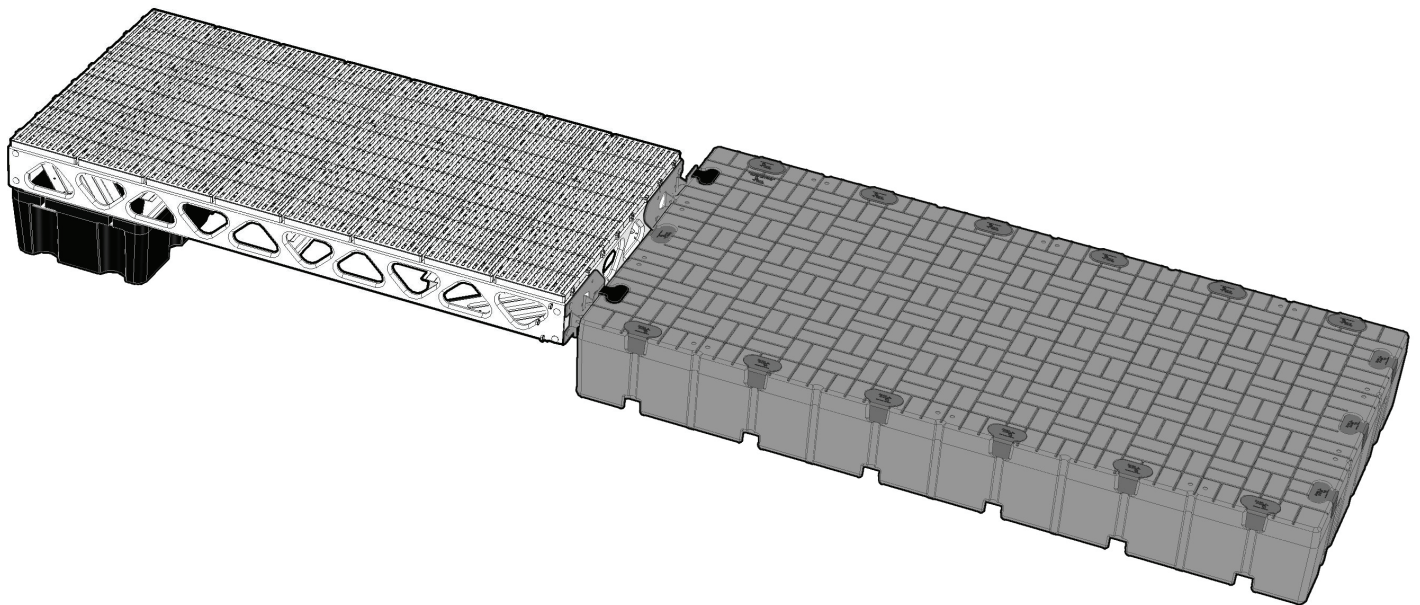


Ramp to Snap Dock Hinge Kit Assembly Instructions

Read this manual and related assembly instructions before attempting to assemble the parts enclosed to ensure that your new CanadaDocks System is assembled safely and correctly.

INCLUDED IN KIT:

SDMB2



2x

CP1




2x

HRP1



2x

SDH2



2x

TPU1



2x

W151116



4x

SDHC1



4x

CB15S



4x

NL38



4x

NNS1



4x

Tools Required:



15/16" SOCKET WITH RATCHET TO
SUIT OR 15/16" WRENCH



OR




1

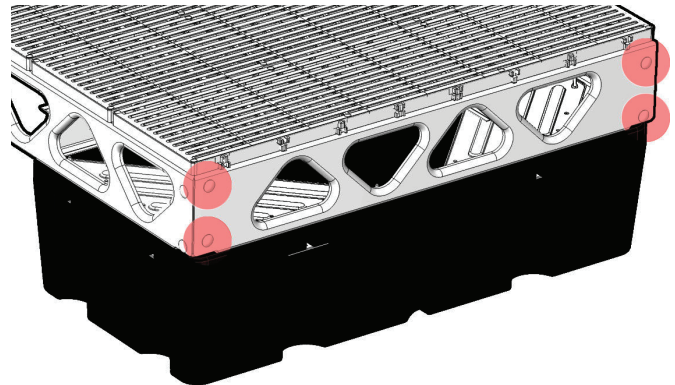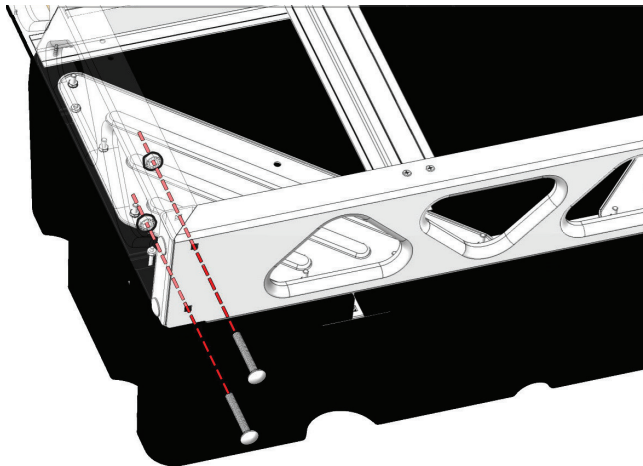





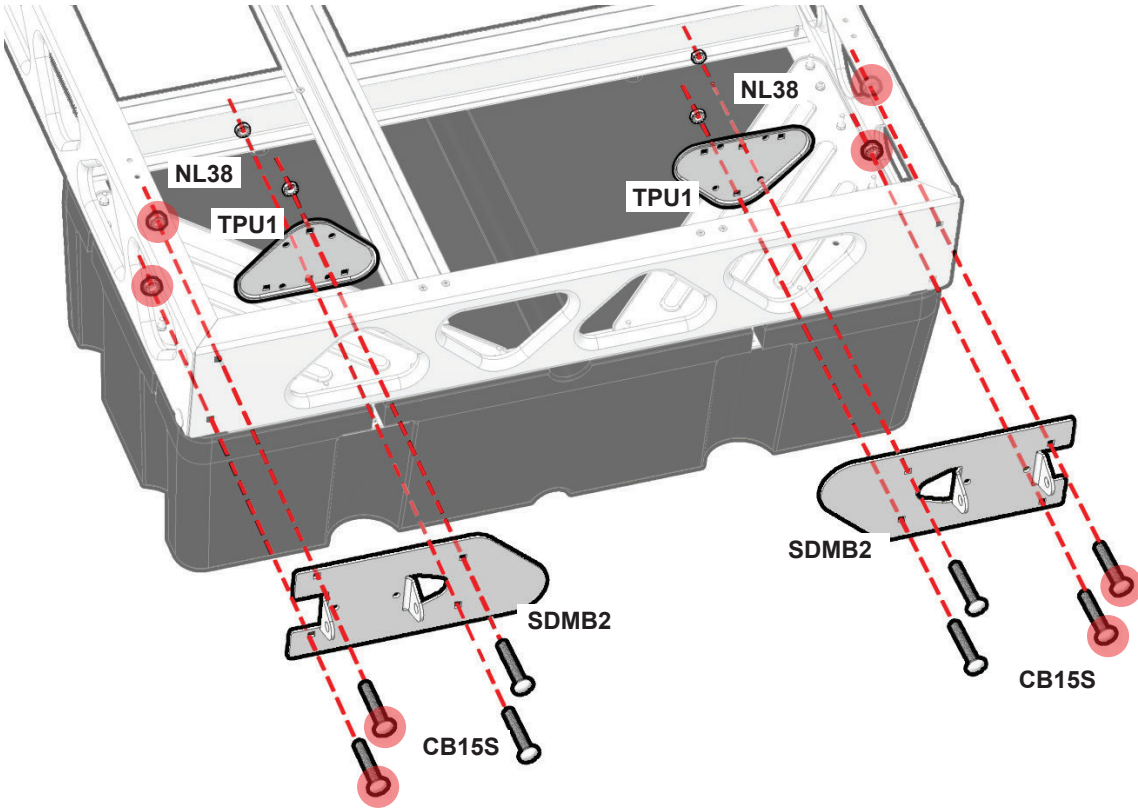
Remove existing carriage bolts to accommodate the mounting bracket (**SDMB2**). Repeat this step for both side of the dock.

PLEASE NOTE: Some dock components have been hidden to better illustration assembly.

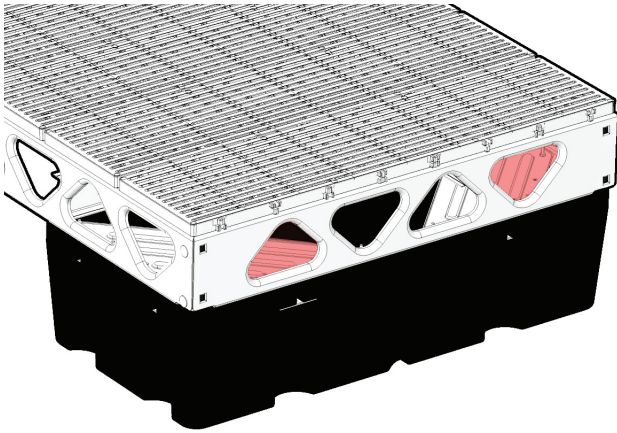2



SDMB2		2x
TPU1		2x
CB15S		4x
NL38		4x




Outside hardware are existing bolts and nuts (circled above).

3

SDHC1



4x

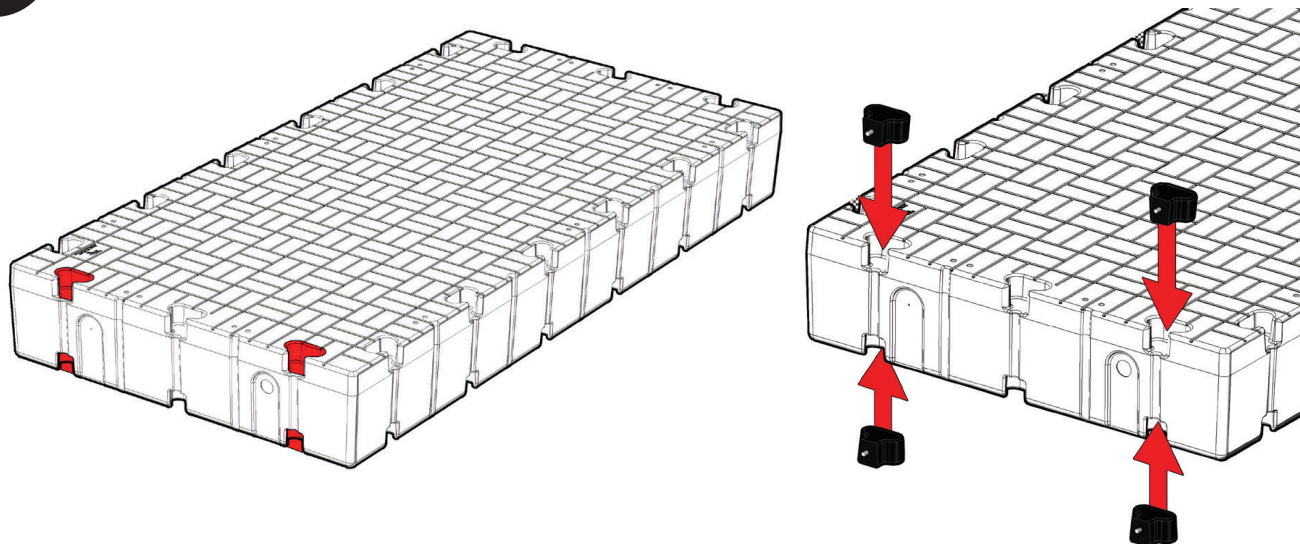

4

SDH2



2x

NNS1





4x


W151116




4x

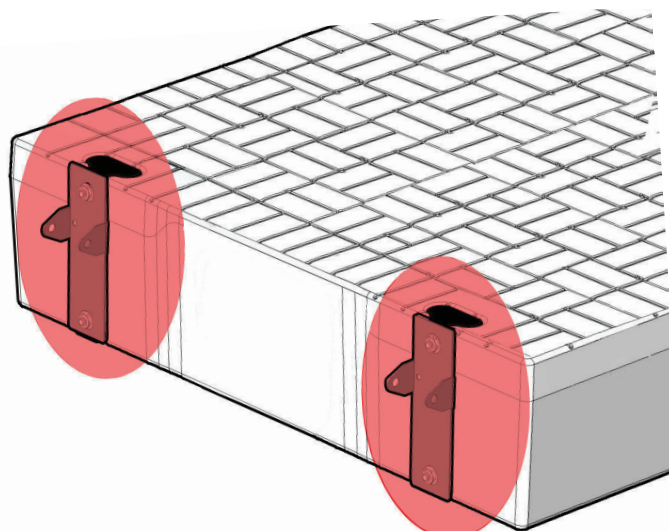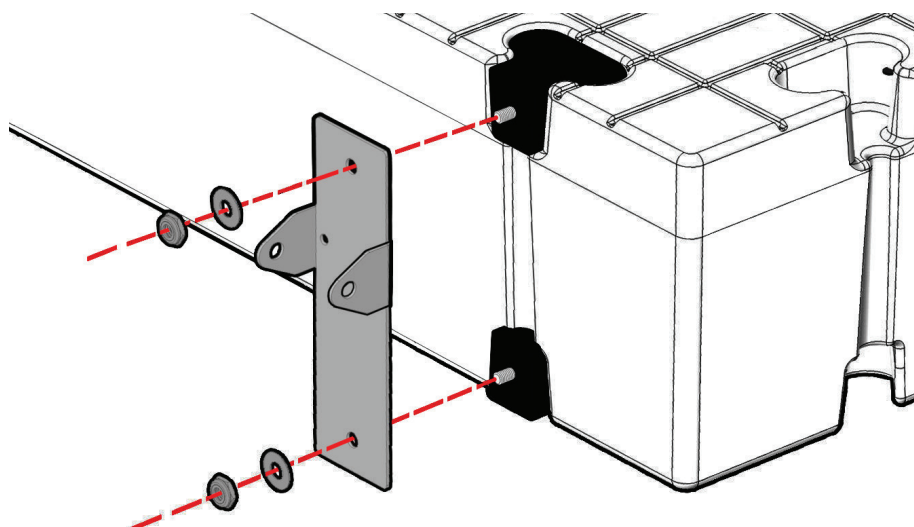

5

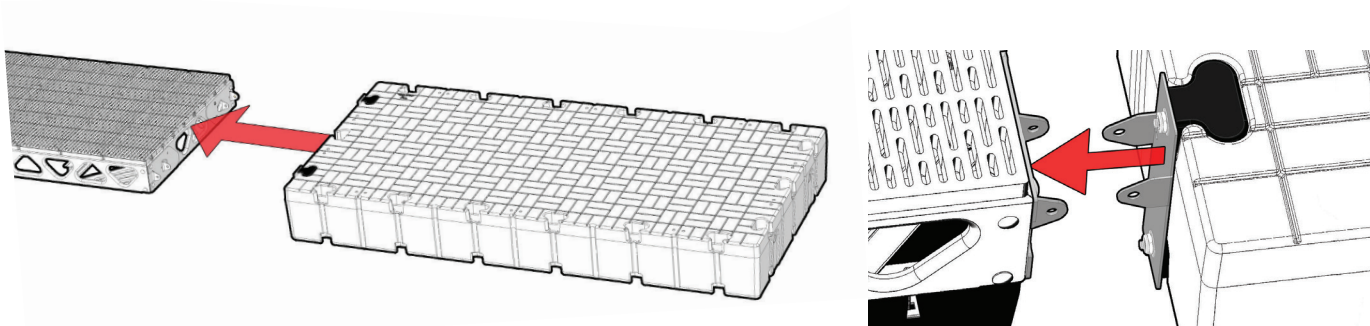


6

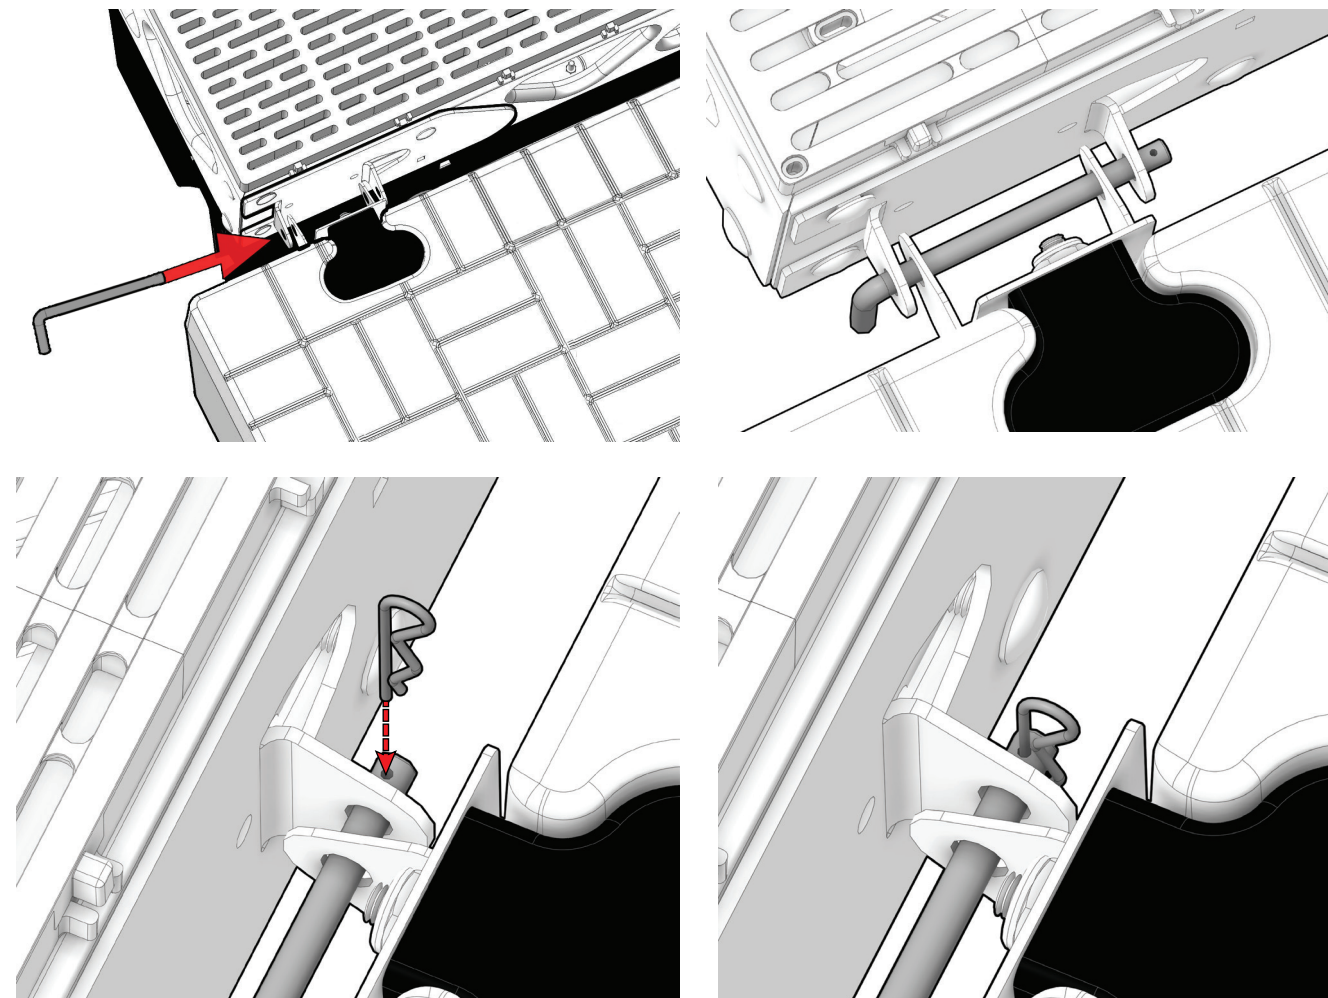

Repeat for both sides.

7

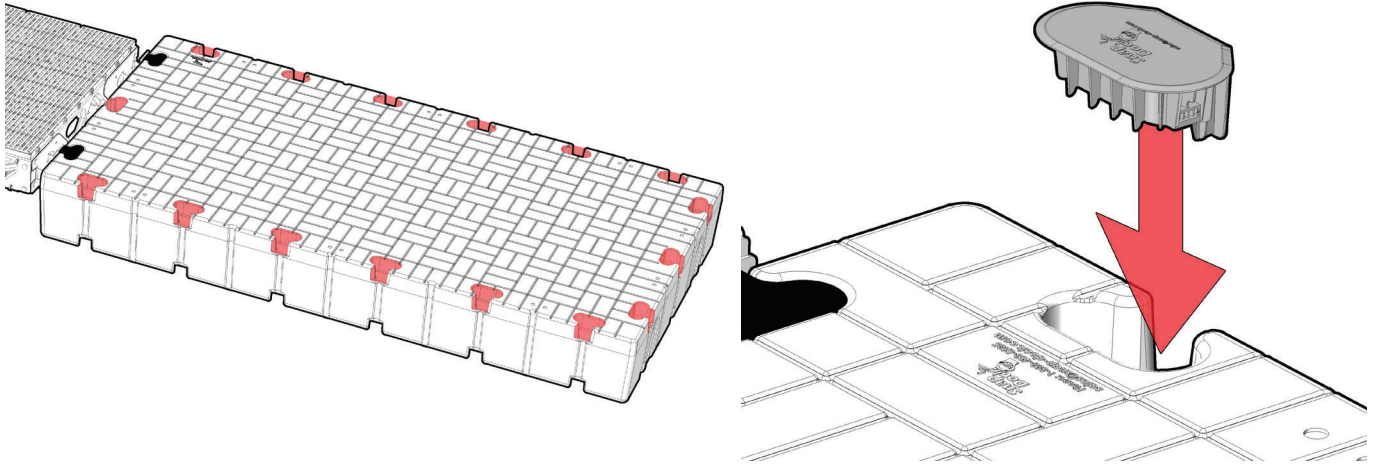

PLEASE NOTE: The amount of Caps (SDC1) used with your setup may vary depending on the layout of your dock.

Where *fun* on the water *begins!*

Please leave us a **Google review**



We'd love to hear from
you and see your photos!



Phone

705.434.0359

1.877.434.0359



Email

info@canadadocks.ca



Address

3690 Adjala-Tecumseth Tl,
Beeton ON L0G 1A0

Rev 06 08.04.25

CanadaDocks.ca

