


INCLUDED IN KIT:

(A) Connector Plate **X2**



(C) 3/8" 3/8"x16 x 1 1/2 Carriage Bolt **X12**



(B) Triangle Backing Plate **X4**



(D) 3/8" Nuts **X12**



TOOLS REQUIRED:

9/16" Socket with Ratchet to suit





or

9/16" Box End Wrench




1 Assemble 2 CanadaDocks 4'x 8' or 8' x8' Ramps per their instructions.

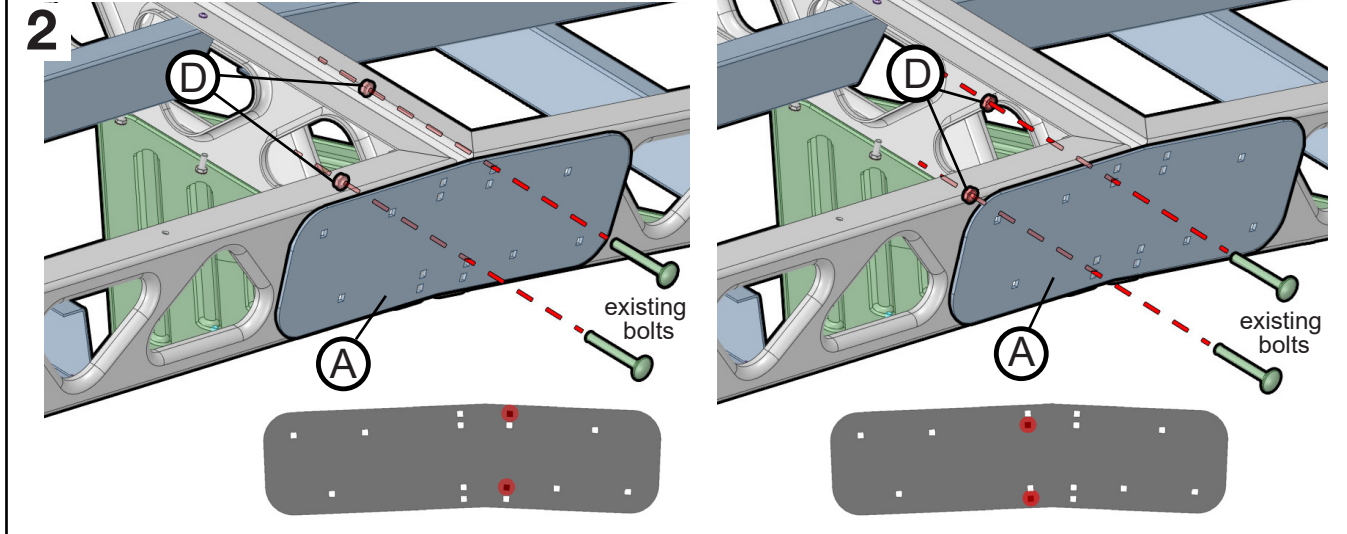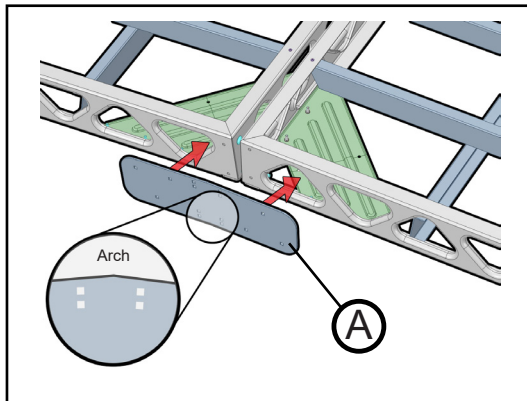

PLEASE NOTE: Connector (A) should have arch facing upwards. Two connected ramps will settle after the initial use to create a straight platform.

Undo 4 Carriage Bolts (3-1/2" long). Fasten Connector Plate (A) with existing 4 Bolts, and Nuts (D). Handtighten at this time. (Repeat on opposite side).

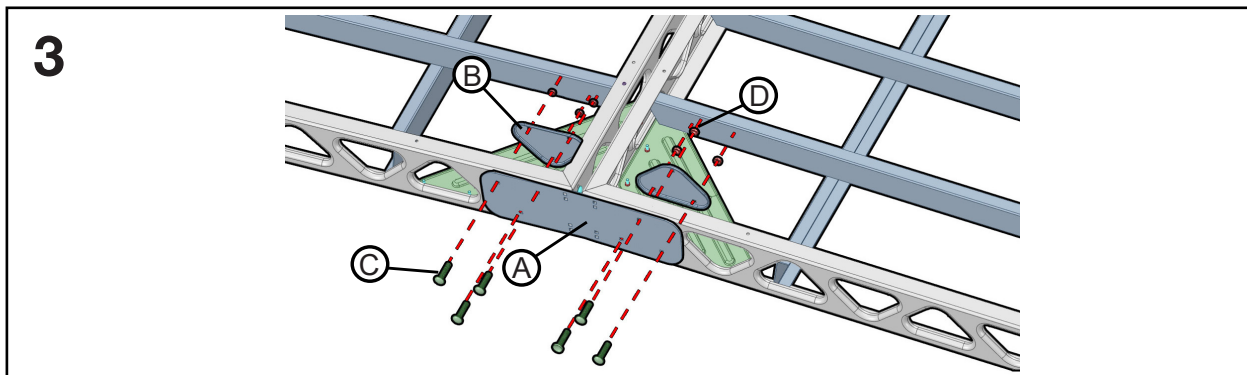

Attach Triangle Backing Plates using Bolts(C) and Nuts (D). Do this for both Connector Plates (A).