


CanadaDocksTM



Where *fun* on the water *begins!*

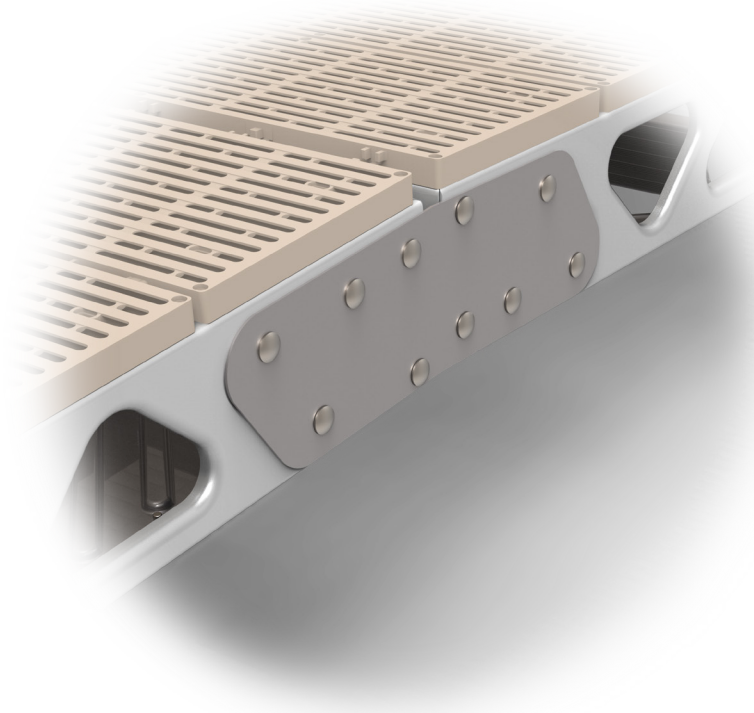


16 FT Ramp Connector Kit

Read this manual and related assembly instructions before attempting to assemble the parts enclosed to ensure that your new CanadaDocks System is assembled safely and correctly.

INCLUDED IN KIT:

CPRP1



2x

CB15S



12x

TPU1



4x

NL38



12x

Tools Required:

9/16" SOCKET WITH RATCHET TO
SUIT OR 9/16" WRENCH



OR




1


Assemble 2 Canadadocks 4'x8' or 8'x8' Ramp sections as per their individual instructions.

2


8X8 Ramp

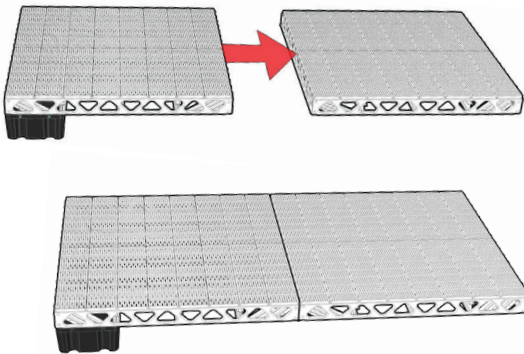


4X8 Ramp

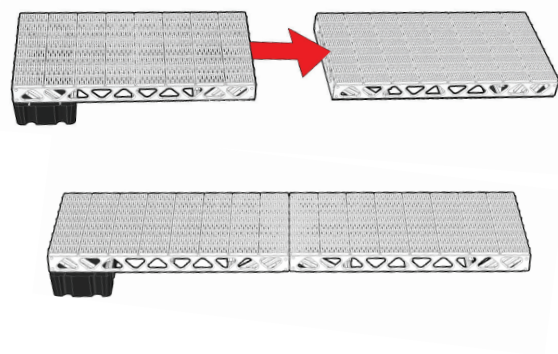

2

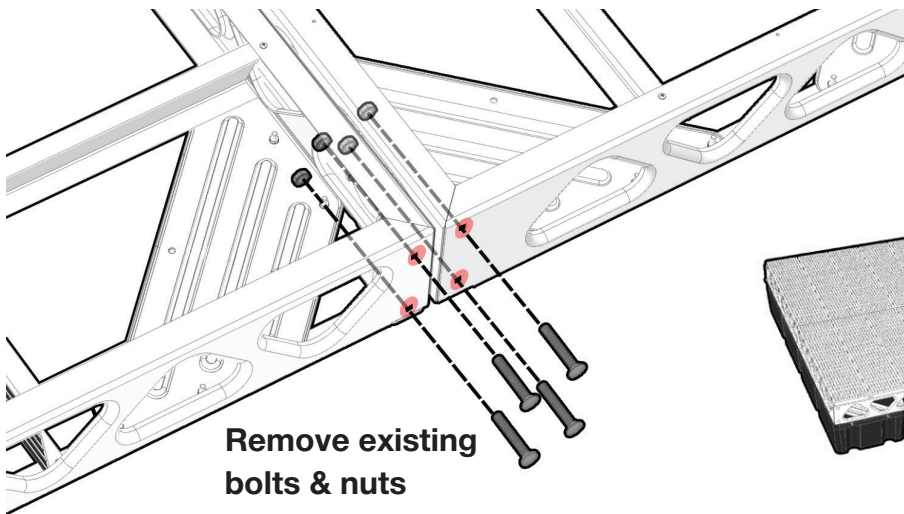



Remove existing
bolts & nuts

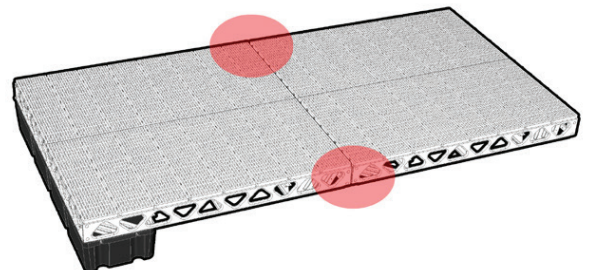


PLEASE NOTE: Some dock elements such as decking have been hidden throughout these instructions to better illustrate assembly.

4

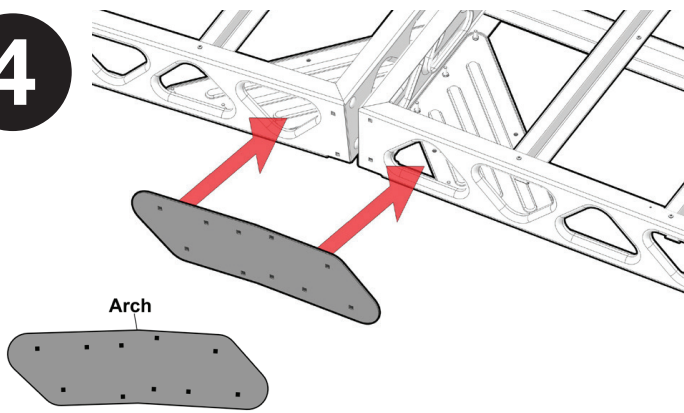


CPRP1  2x


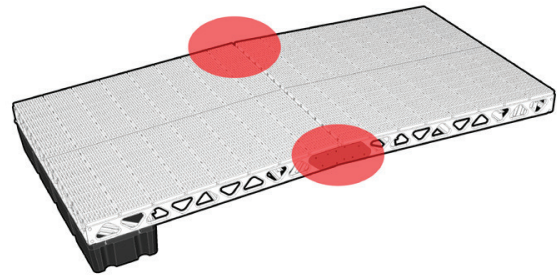


PLEASE NOTE: The arch on Connector (**CPRP1**) should be facing upwards. The two ramps will settle after the initial use to create a straight platform.


5

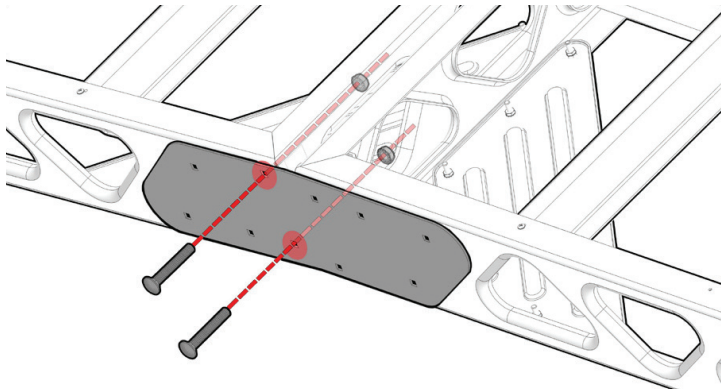

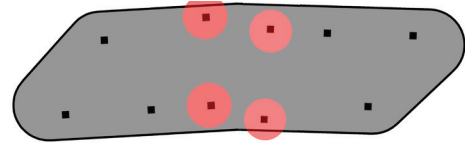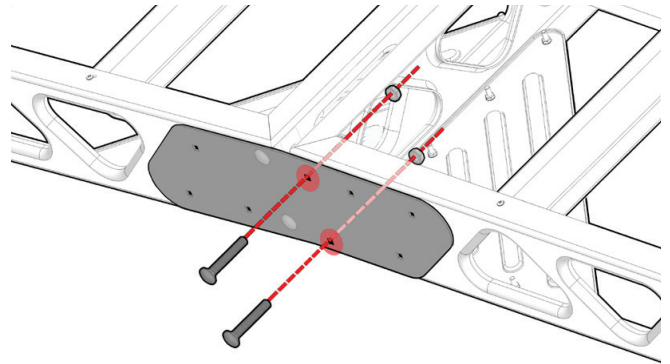


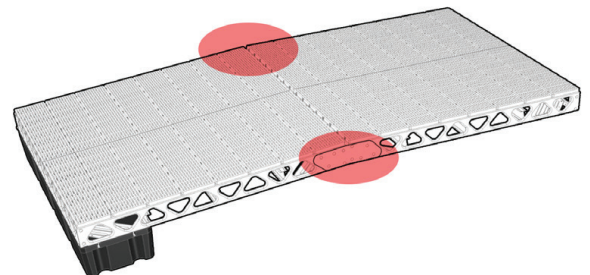
Add existing bolts & nuts that were previously removed in **STEP 2**.

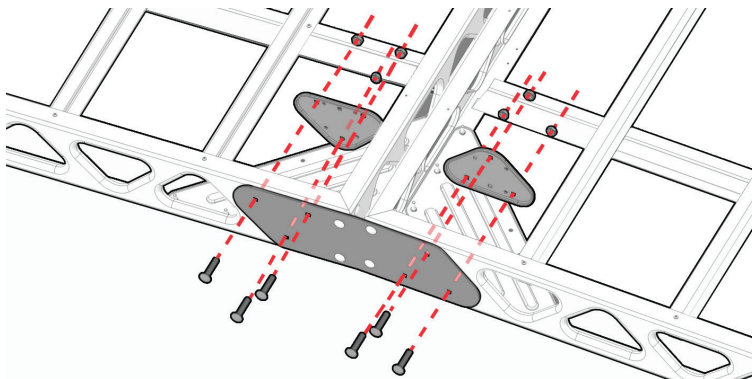

6



NL38  12x
TPU1  4x
CB15S  12x



Follow **STEPS 1-5** for the opposite side of the dock.

Where *fun* on the water *begins!*

Please leave us a **Google review**



We'd love to hear from
you and see your photos!



Phone

705.434.0359

1.877.434.0359



Email

info@canadadocks.ca



Address

3690 Adjala-Tecumseth Tl,
Beeton ON L0G 1A0

Rev 08 20.01.25

CanadaDocks.ca

