



INCLUDED IN KIT:

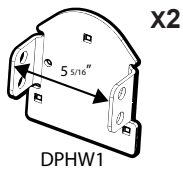

TOOLS REQUIRED:

9/16" SOCKET WITH RATCHET TO SUIT OR 9/16" BOX WRENCH

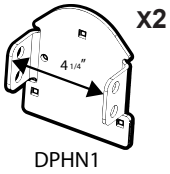





OR



LOCKING PLIERS







1

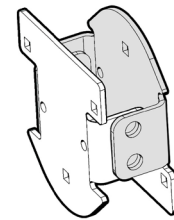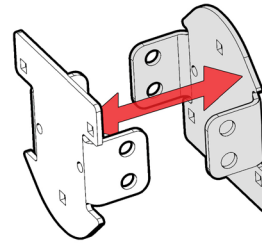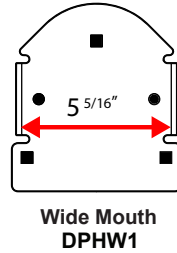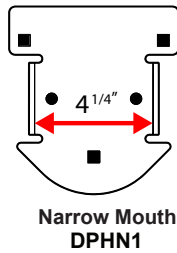

Each pair of hinges(DPH1) will be identified by a narrow and wide mouth (See above image).
The narrow mouth will fit into the wide bracket of each pair.


2

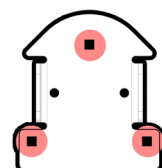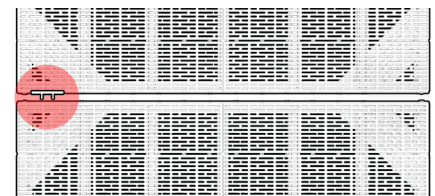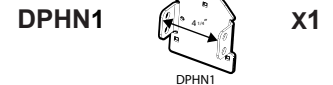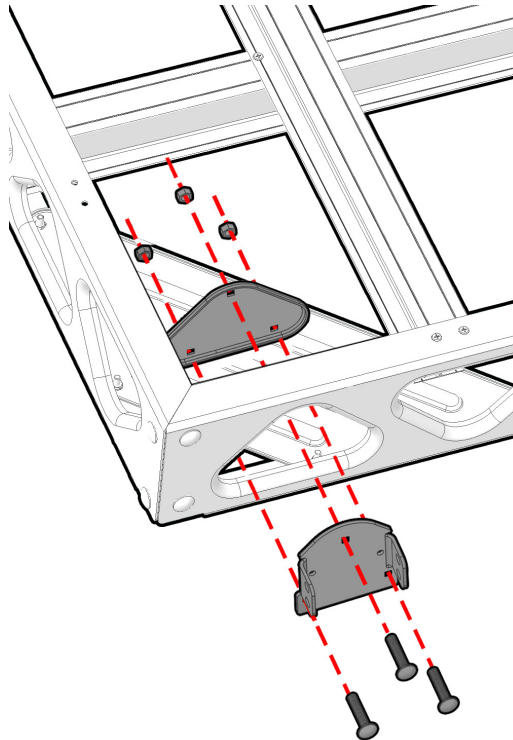

Connect the hinge assembly as shown above.

PLEASE NOTE: Some dock elements including decking have been removed from the current and proceeding images to better illustrate installation.

3

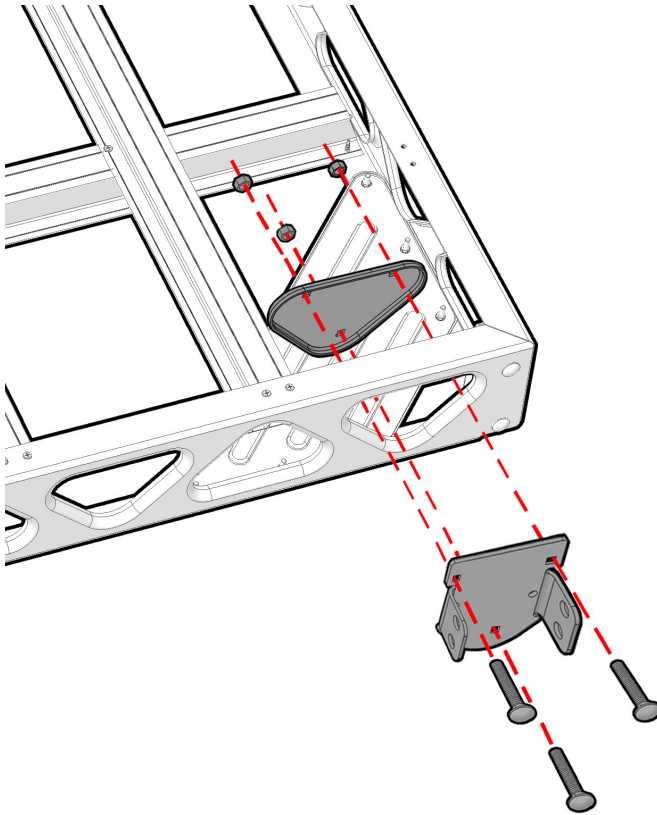

DPHW1



X1

TPU1



X1

CB15S




X3

NL38




X3

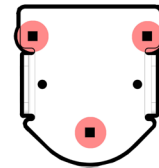

Connect the hinge assembly as shown above.

4

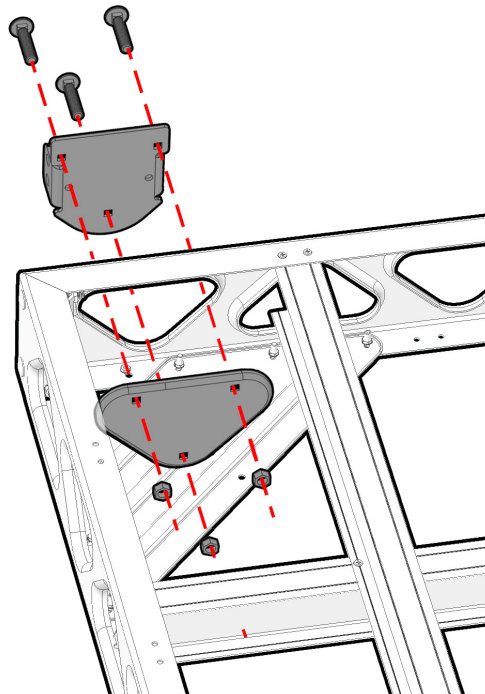

DPHW1



X1

TPU1



X1

CB15S





X3

NL38




X3

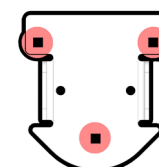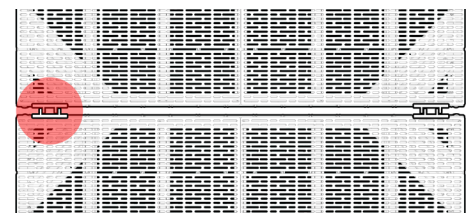

On the opposite dock connect hinge assembly as shown above.

5

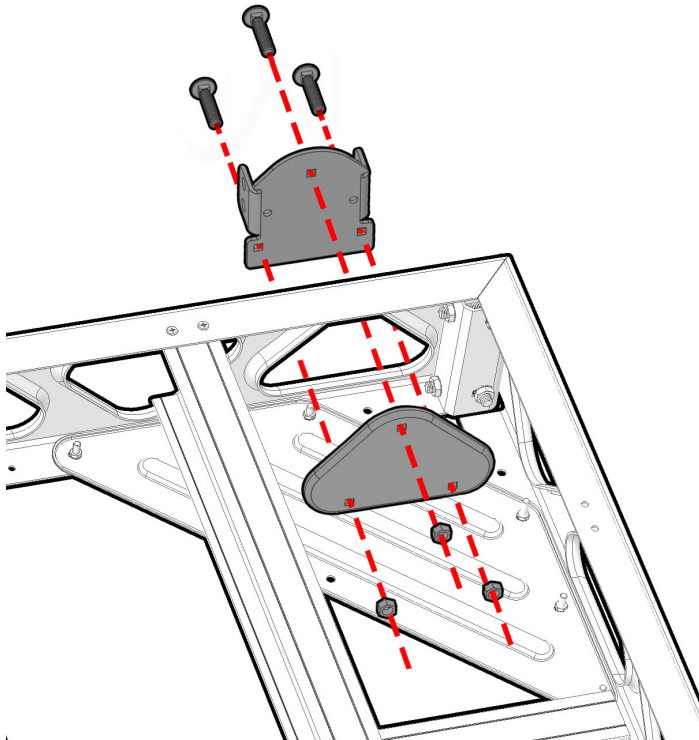

DPHN1



x1

TPU1



x1

CB15S





x3

NL38




x3

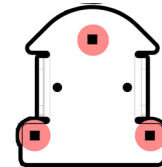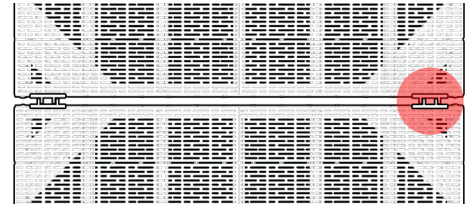


Connect the hinge assembly as shown above.

6

Edge of Dock

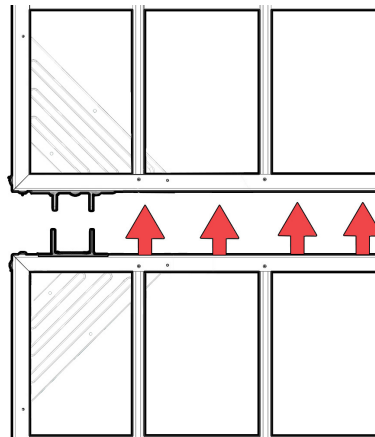


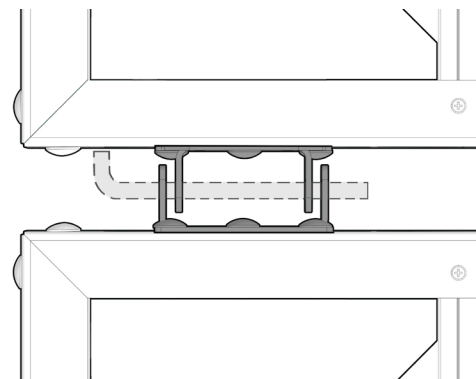

Edge of Dock



Once hinges (HP1) on both docks are assembled pull both docks close to each other. Place the docks so the edges of both docks are aligned with one another. Aligning the hinges on either side of the docks so they fit into each other. Ensure that the holes between both hinges line up with one another. Do the same for the hinges on the opposite side of both docks.

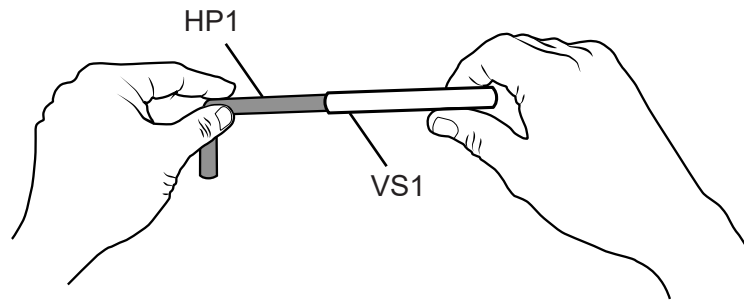7




VS1  X4
HP1  X4

An optional sleeve (VS1) has been included with your kit to dampen any movement and sound that may arise from hinge use. Slide the vinyl sleeve onto the end of **all** hinge pins (HP1).

8


Continued on next page

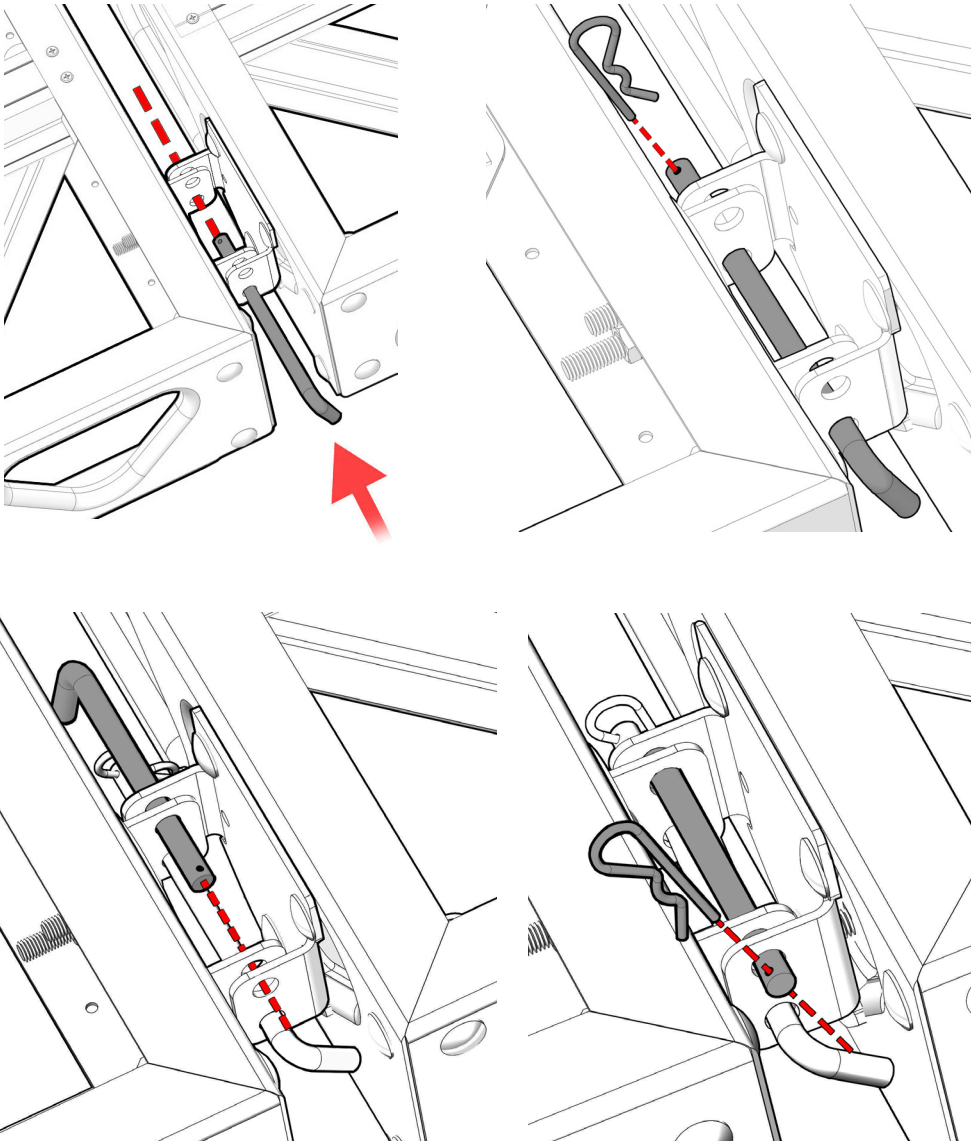CP1  X2

Connect pins.

8

Continued from last page

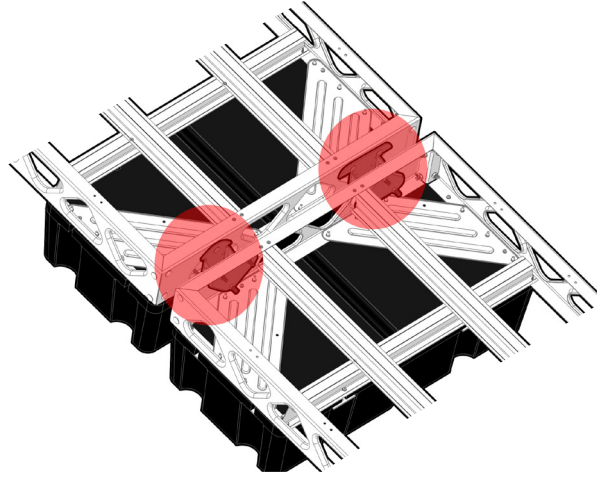

Repeat Step 8 for hinge assembly on the opposite side of both docks.

PLEASE NOTE: It may be helpful to use locking pliers to insert the cotter pin into the hinge pin.

9

SEPARATING DOCK SECTIONS

When separating dock sections follow the above directions in reverse removing the cotter pin (CP1) and then removing the hinge pins(HP1) from between the hinges.