

INCLUDED IN KIT:

UHK1



X2

CB15S



X2

QLB3

Double L-Bracket



X1

NL38




X4

TOOLS REQUIRED:




OR



- 9/16" socket with ratchet to suit or 9/16" box wrench

TYPICAL 4 DOCK CONFIGURATION AND ASSEMBLY

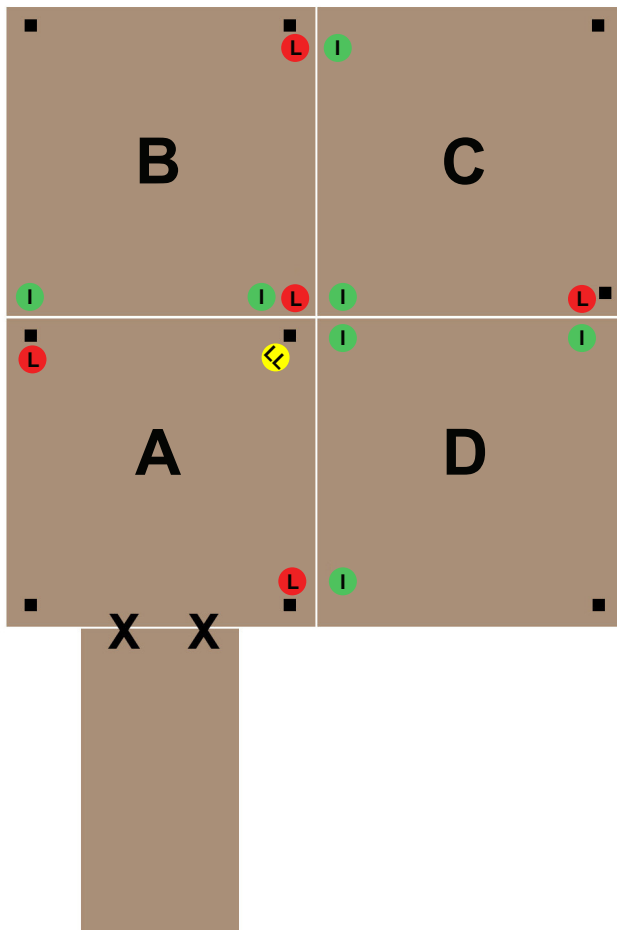

L Bracket
(QLB1)



I Bracket
(QLB2)





Double L Bracket
(QLB3)

■ Dock Leg

Any dock setup with four corners connecting will require a Double L Bracket Kit. The above diagram shows a typical dock setup for a Double L Quick link setup. You will be attaching a 4 legged dock(A) to three supported docks (B,C & D). The Double L Bracket is included with this kit. All other brackets shown must be purchased separately.

1

TYPICAL DOCK SETUP

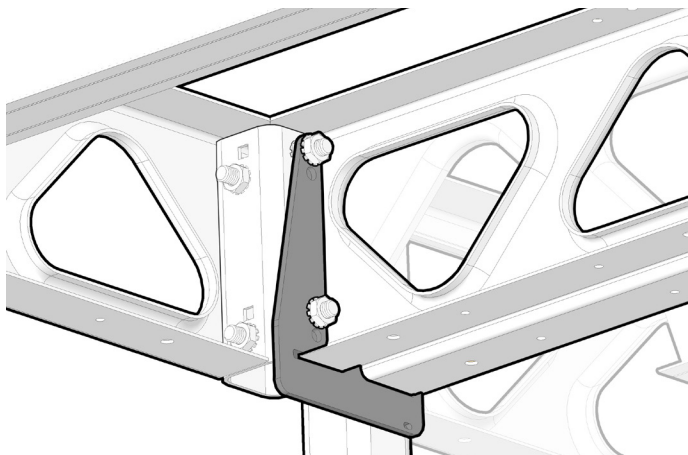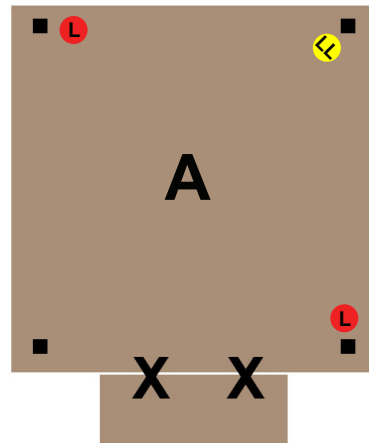

Parts available with
QuickLink Kit

QLB1




X2

NL38




X4

Position the "L" shaped bracket (QLB1) on top of current locknuts.
Fasten the L-Bracket with Locknuts (NL38). Repeat for all positions that are red.
PLEASE NOTE: In this image and any proceeding images some components have been removed to better illustrate assembly.

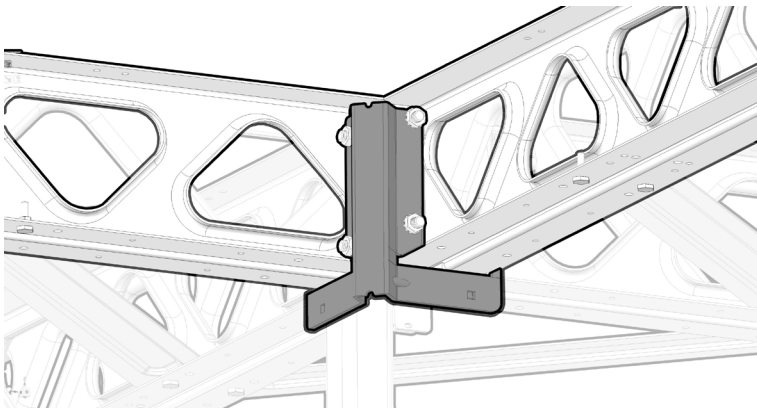

QLB3



X1



NL38



X4

Position the double "L" shaped bracket (QLDB1) on top of current locknuts.
Fasten the double L-Bracket with locknuts (NL38). Apply to all positions yellow.

2

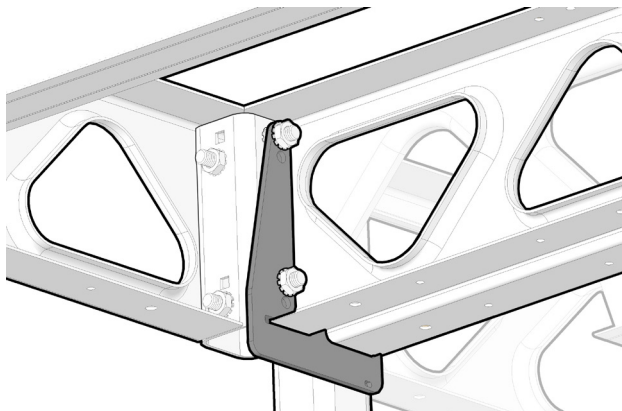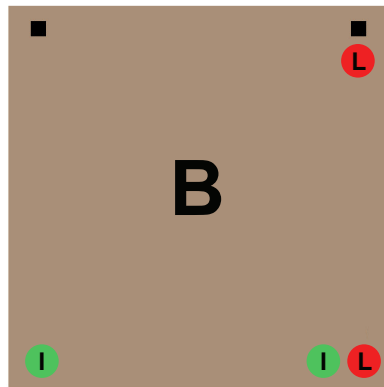

Parts available with
QuickLink Kit

QLB1




X2

NL38



X4

Position the "L" shaped bracket (QLB1) on top of current locknuts.
Fasten the L-Bracket with Locknuts (NL38). Repeat for all positions that are red.
PLEASE NOTE: In this image and any proceeding images some components
have been removed to better illustrate assembly.

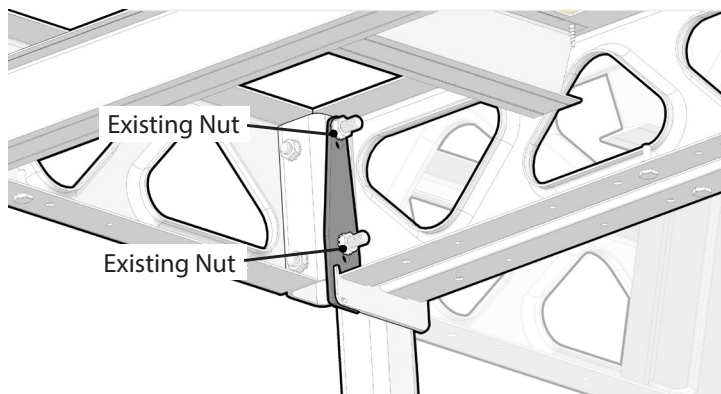

Parts available with
QuickLink Kit



QLB2





X2

Remove the existing locknuts. Position the Joining I-Bracket (QLB2)
on the bolts and fasten with existing nuts. Repeat for all positions that are green.

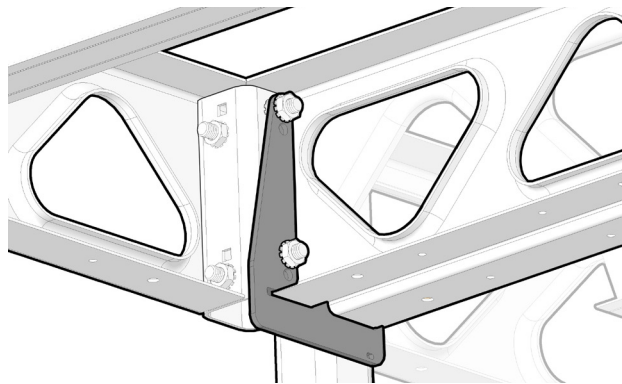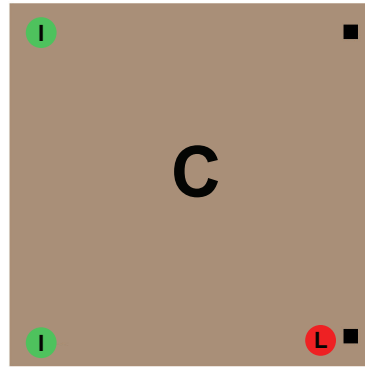
3



Parts available with
QuickLink Kit

QLB1		X1
NL38		X2

Position the L-bracket (QLB1) on top of current locknuts.
Fasten the L-Bracket with locknuts (NL38). Repeat for all positions that are red.


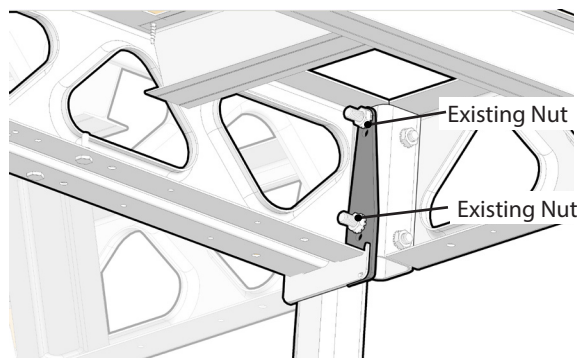


Parts available with
QuickLink Kit

QLB2		X2
------	---	----

Remove the existing locknuts. Position the Joining Bracket (QLB2)
on the bolts and fasten with existing nuts. Repeat for all positions that are green.

4

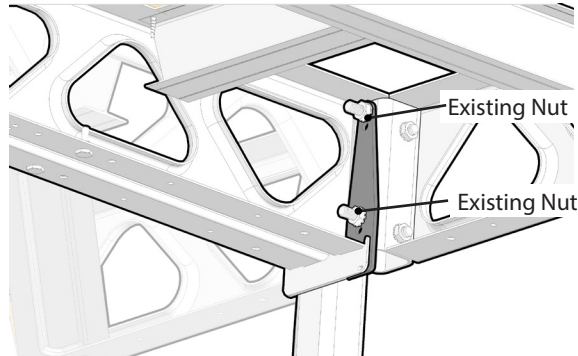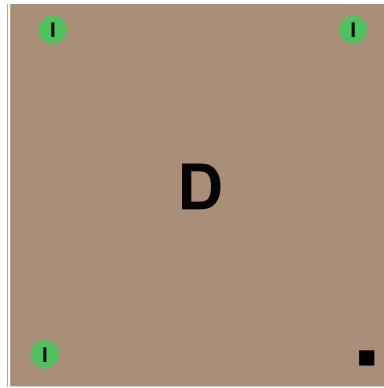

Parts available with
QuickLink Kit

QLB2




X3


Remove the existing locknuts. Position the Joining I-Bracket (QLB2) on the bolts and fasten with existing nuts. Repeat for all positions that are green.

PLEASE NOTE:


If you are adding an I-Bracket (QLB2) to an area that has an existing L-Bracket (QLB1) you may have to remove nuts and push the carriage bolts back in order to position the bracket over the hole.

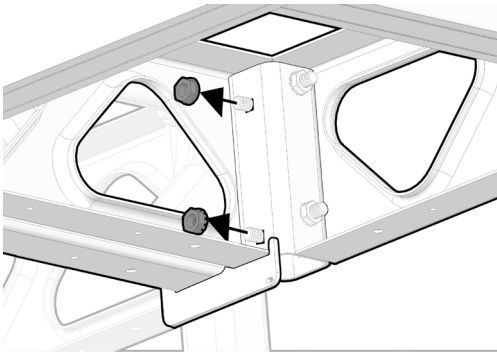


Remove nuts.

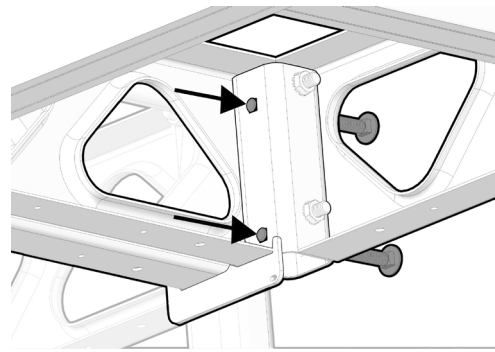


Push carriage bolts towards the outside of the frame..

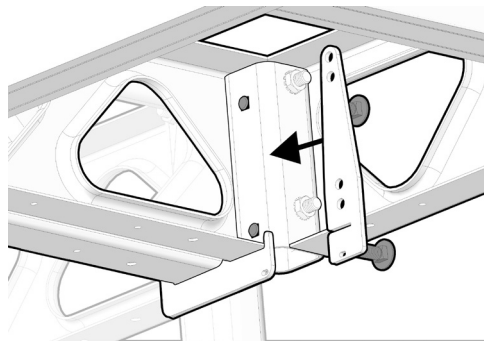

Slide I-Bracket (QLB2) between the L-Bracket(QLB1) and the leg.

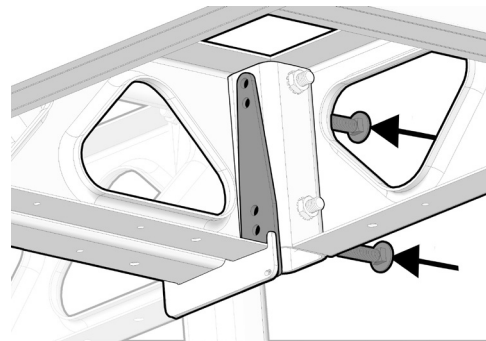

Align holes of I-Bracket (QLB2) with holes on frame. Slide the carriage bolts into the holes to fasten the I-Bracket (QLB2) .

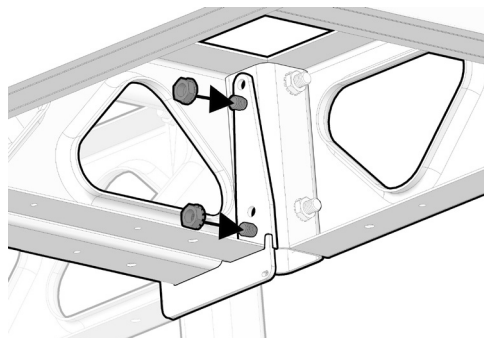

Fasten I-Bracket (QLB2) with existing nuts.

5

Some parts available
with **QuickLink** Kit

Each Connection Requires:

UHK1		X1
CB15S		X1

A-B For each connection between an L-Bracket (QLB1) and I-Bracket (QLB2) use a star knob (UHK1) and carriage bolt (CB15S) to fasten together. Align the holes of both brackets, insert the bolt (CB15S) starting from the outside of the dock frame and fasten with a star knob (UHK1). See Images A & B for details. Repeat for all L-Bracket (QLB1) and I-Bracket (QLB2) connections.

C-D Double-L Brackets (QLB3) will have a connection on either side fastening with an I-Bracket (QLB2). Align the holes of the connecting brackets, insert the bolt (CB15S) and fasten with a star knob (UHK1). See Images C & D for details. Repeat for other side of the L-Bracket (QLB3).

