



INCLUDED IN KIT:

CP1  Connector Plates **x2**

TBP1  Triangle Plate **x4**

CP15S  Carriage Bolt 3/8"x16 1 1/2" SS **x12**

NL38  3/8" Lock Nut **x12**

TOOLS REQUIRED:

9/16" SOCKET WITH RATCHET TO SUIT

OR


9/16" BOX WRENCH




1

Assemble the Dock Frames per instructions given.

2

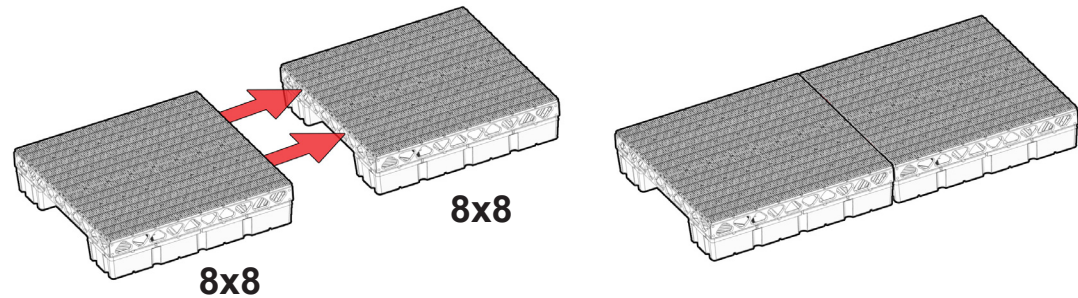


3

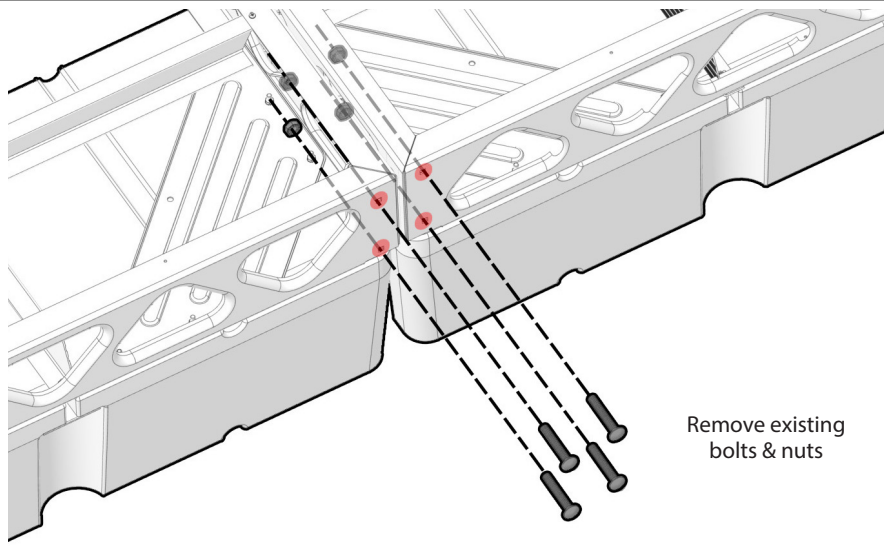



Remove existing bolts & nuts

4

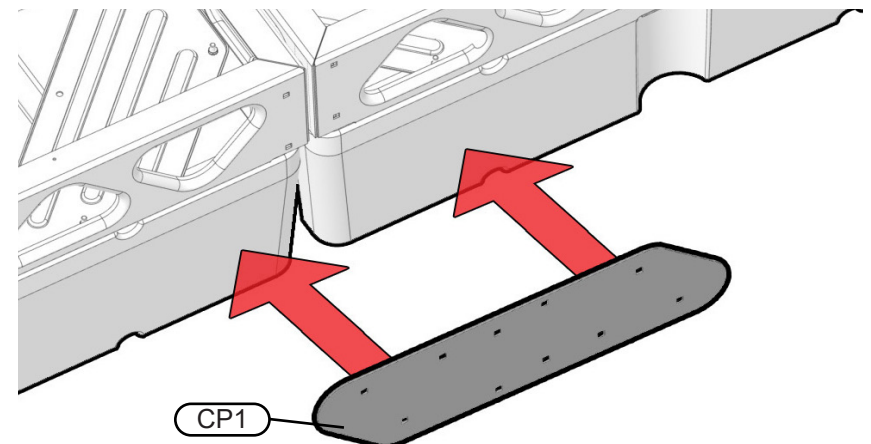

PLEASE NOTE: Some details such as decking has been removed to better illustrate assembly.

TIP: Adjust dock height to align holes. Pry bar may help. Mallet or soft faced hammer may be needed to encourage bolts into place.

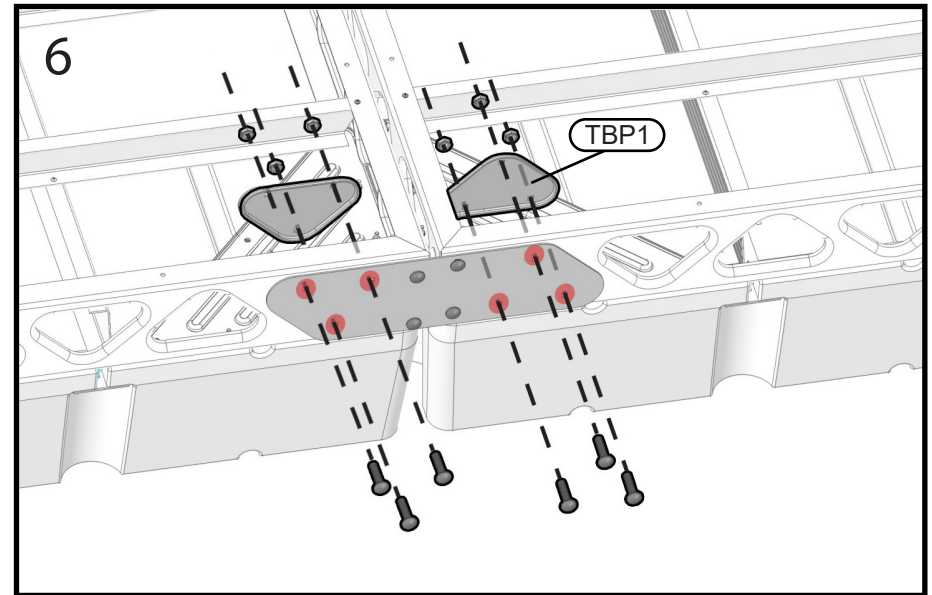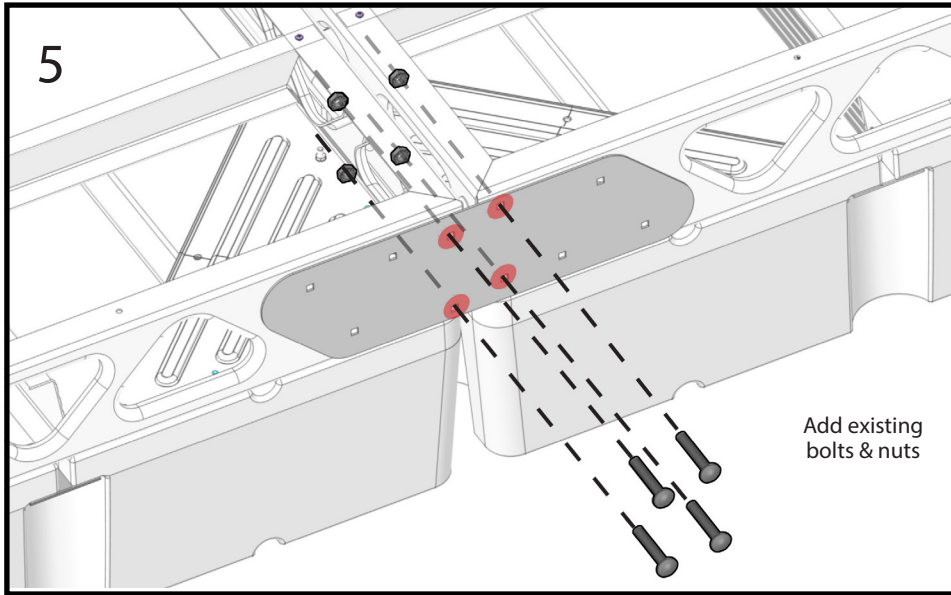

Follow steps 1-6 for the opposite side of the docks.

