

# CanadaDocks<sup>TM</sup>



**Where *fun* on the water *begins!***




## **Hinge Cover Kit 4ft or 8ft**

Read this manual and related assembly instructions before attempting to assemble the parts enclosed to ensure that your new CanadaDocks System is assembled safely and correctly.

## INCLUDED IN KIT:


HC4 (4ft)



1x


HC8 (8ft)

HBL1




1x

HBR1



1x

B25125



1x

## Tools Required:

5/16" SOCKET WITH RATCHET TO  
SUIT OR 5/16" WRENCH




OR



Depending on your dock formation the hinge cover and bracket installation locations are found below. The sections shown as **red** are where the hinge cover brackets will be installed based on the dock formation shown.

**NOTE:** Floating docks are shown but hinge cover install locations do not change if standing docks are used instead.


### 4x8 Dock Sections

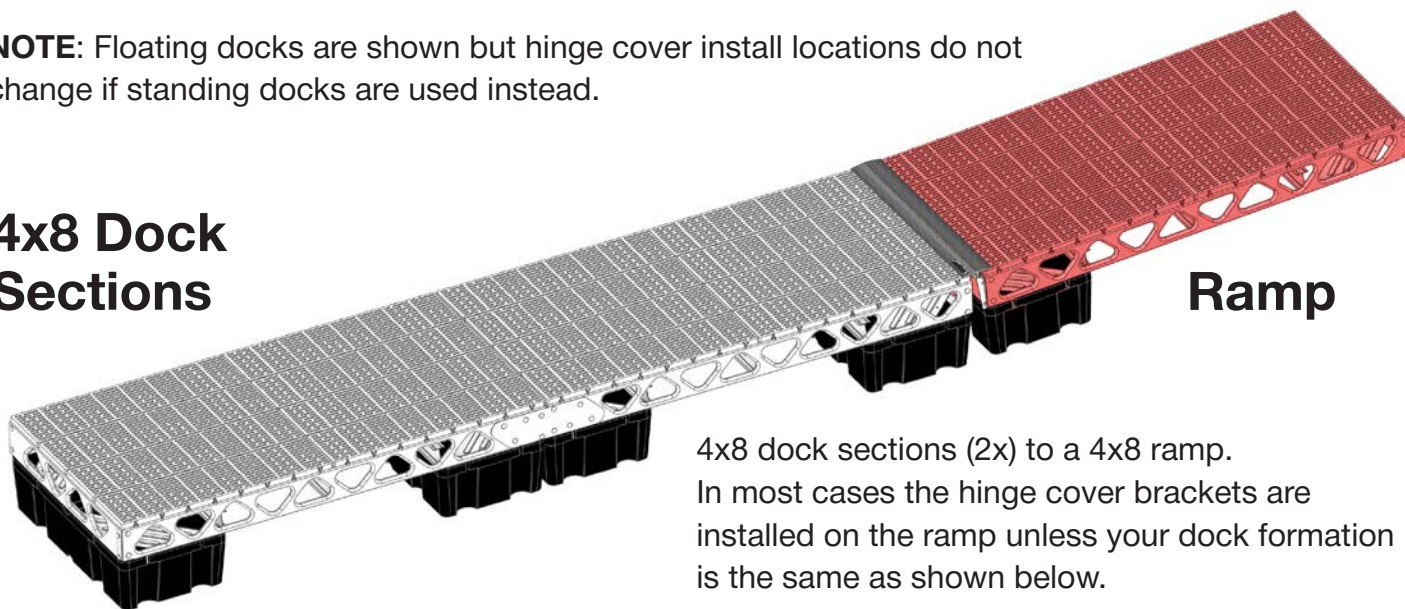

Ramp

4x8 dock sections (2x) to a 4x8 ramp.  
In most cases the hinge cover brackets are installed on the ramp unless your dock formation is the same as shown below.

### 4x8 Dock Section

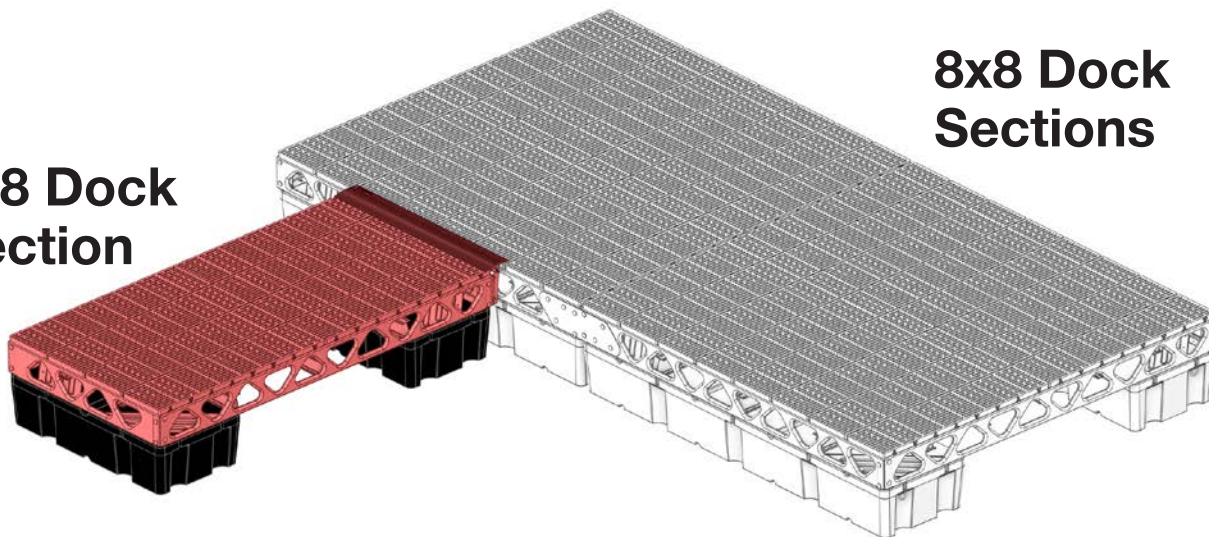


8x8 Dock Sections

# 1

## Hinge Cover Bracket Intall Locations





### 4x8 Section

(4ft Hinge Cover)

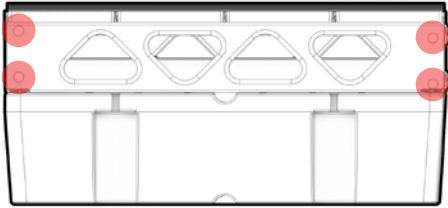

### 8x8 Section

(8ft Hinge Cover)

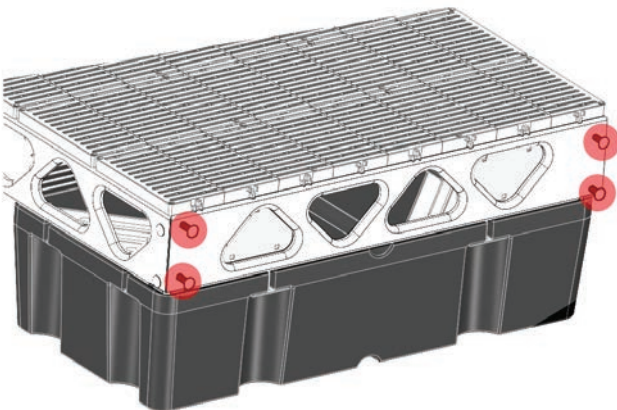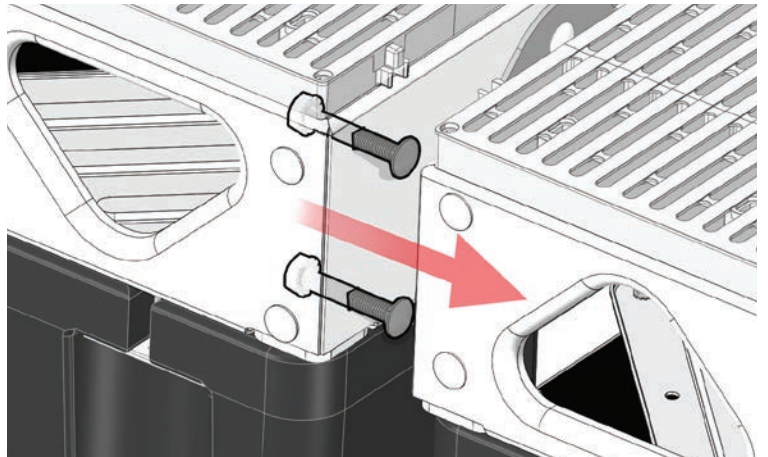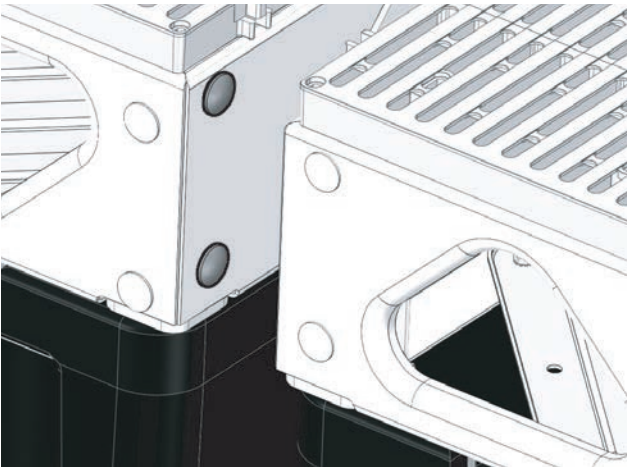
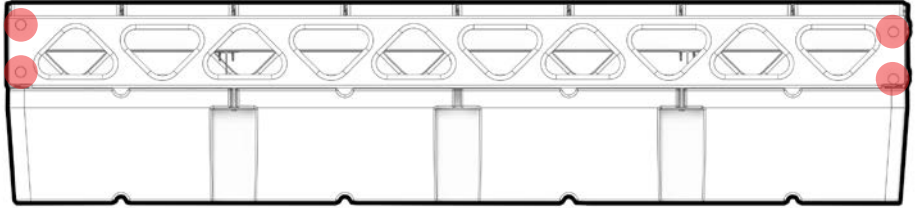


Using a socket or box wrench, loosen the carriage bolts on the dock section that you'll be attaching the hinge cover to (**see image above**).


**PLEASE NOTE:** Some components have been hidden to better illustrate assembly.



2

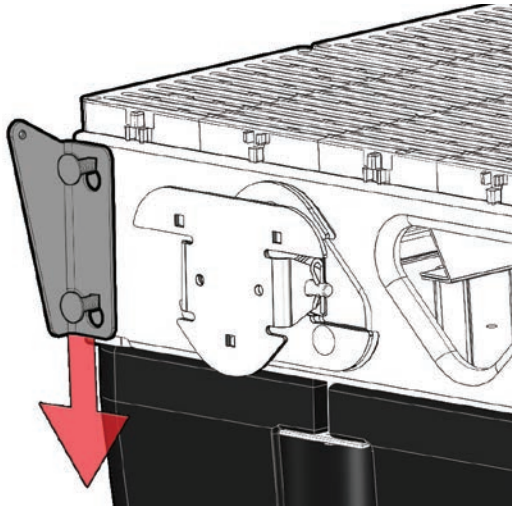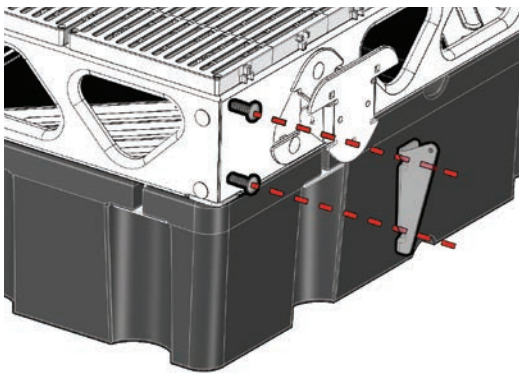

HBL1




1x

Narrow slot of bracket

Bracket resting position


Attach the hinge cover bracket (**HBL1**) to the previously loosened carriage bolts on the left side of the dock or ramp. Slide the bracket (**HBL1**) down on the carriage bolts until they are seated in the narrow (square) slots of the bracket.

3


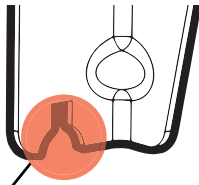


**PLEASE NOTE:** The notch cut-out at bottom of bracket indicates it is the right sided bracket

HBR1




1x

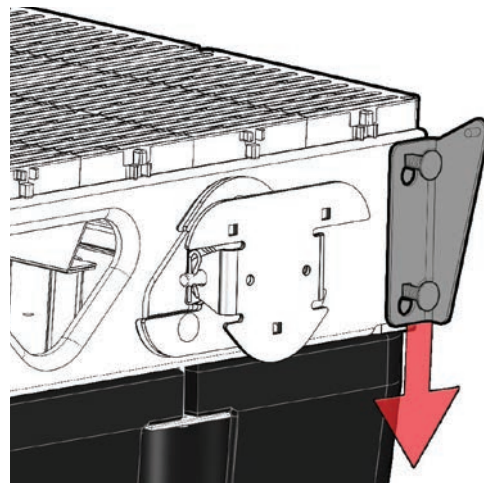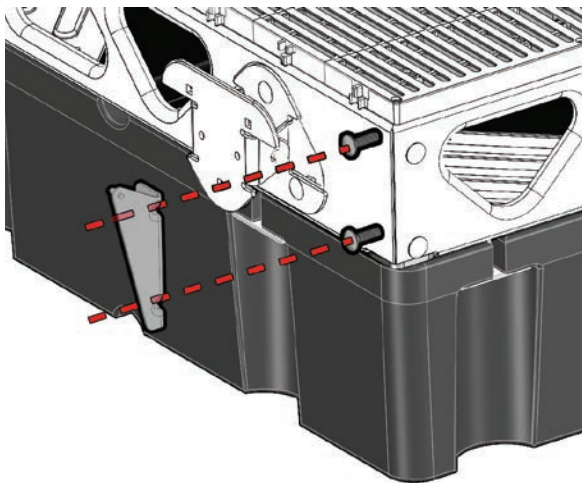

Repeat **STEP 2**, attach the right sided hinge cover bracket (**HBR1**) by loosening the carriage bolts and sliding the bracket (**HBR1**) down on the carriage bolts until they are seated in the narrow slots of the bracket.


4

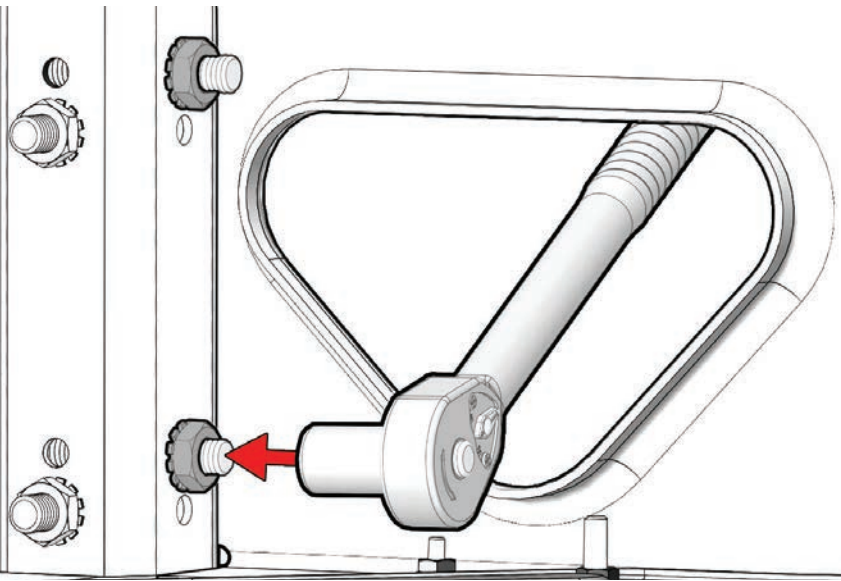

Re-tighten the carriage bolts on both brackets that were installed.

**PLEASE NOTE:** Some components have been hidden to better illustrate assembly.


5

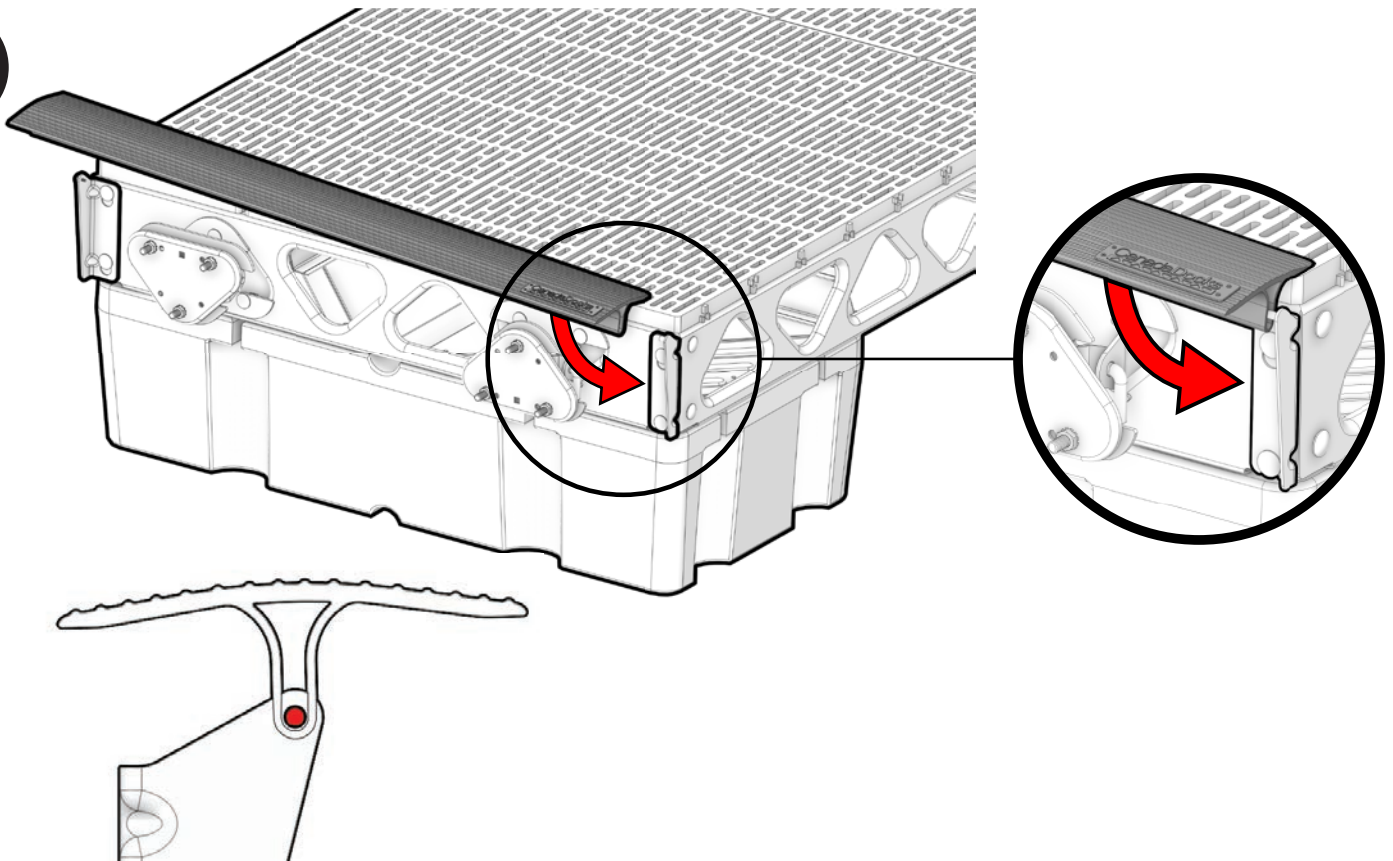

Position and slide the hinge cover onto the pin located at the top of the right sided bracket (**HBR1**).



6



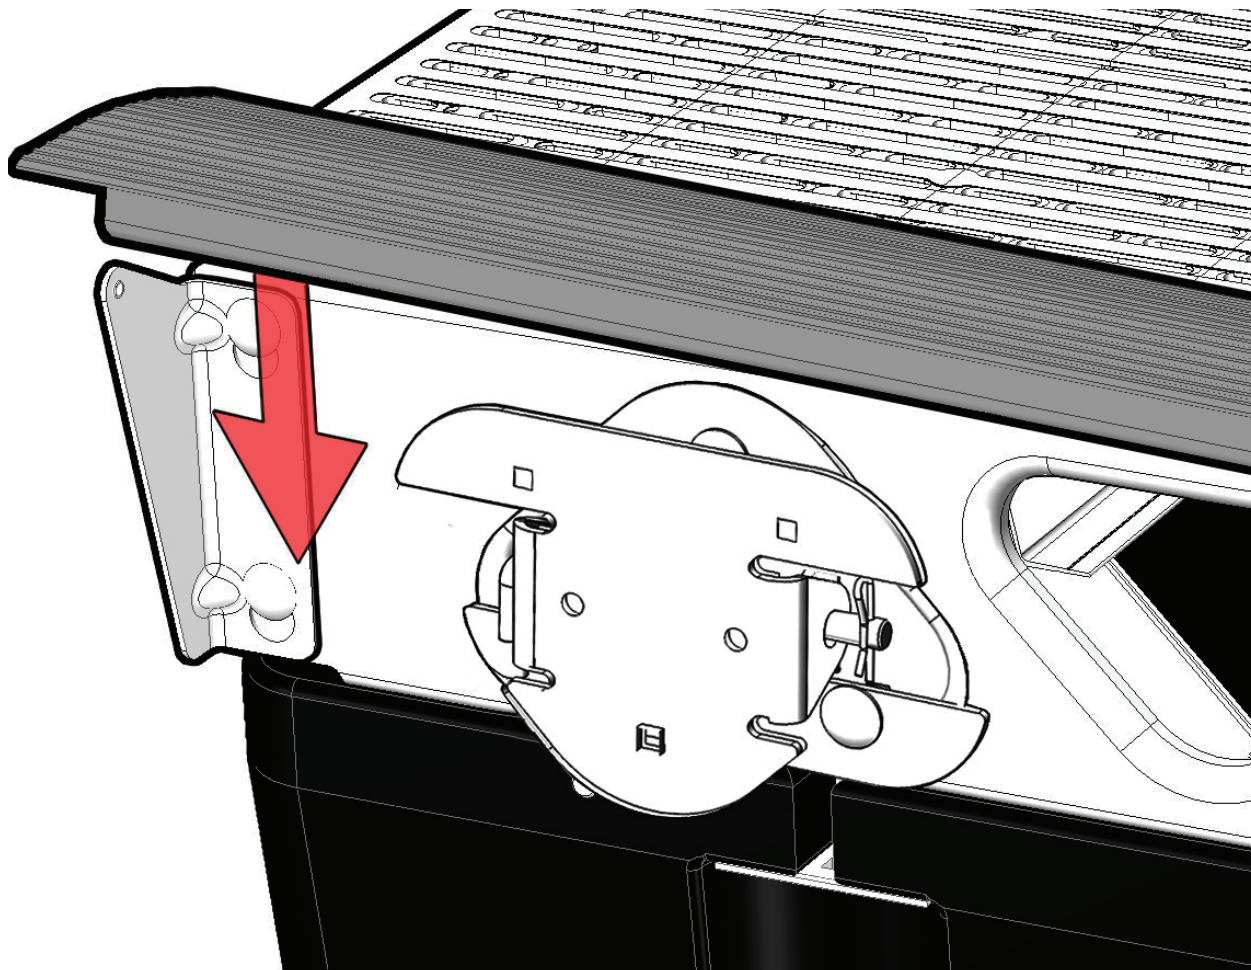


7

B25125




1x

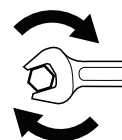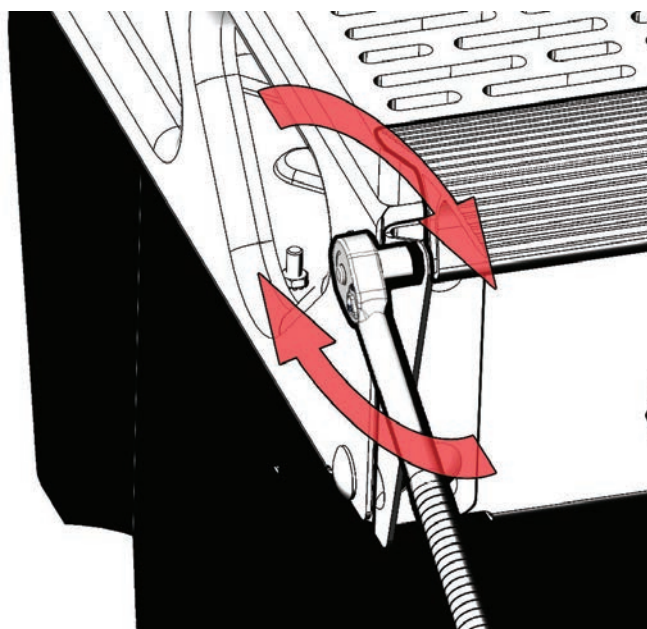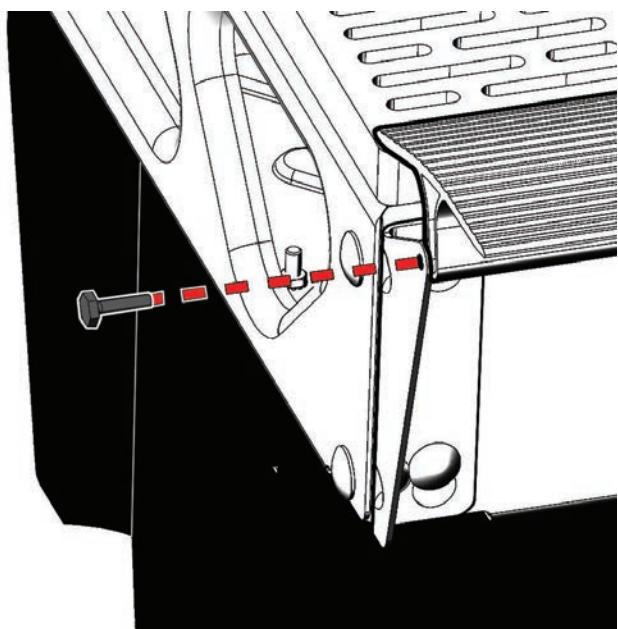

DO NOT OVERTIGHTEN

9

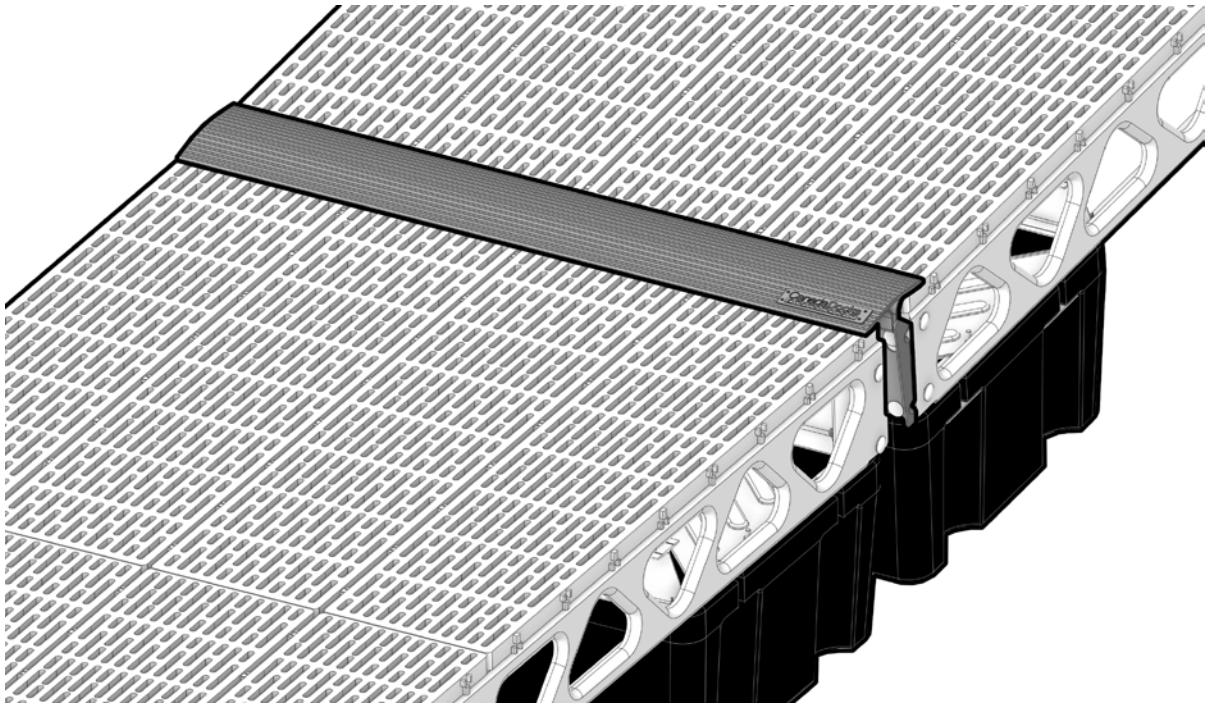

# Where *fun* on the water *begins!*

Please leave us a **Google review**



We'd love to hear from  
you and see your photos!



**Phone**

705.434.0359

1.877.434.0359



**Email**

info@canadadocks.ca



**Address**

3690 Adjala-Tecumseth Tl,  
Beeton ON L0G 1A0

Rev 10 10.22.24

**CanadaDocks.ca**



/CanadaDocks