

INCLUDED IN KIT:

SHN1



X2

SHW1




X2

TPU1



X4

HP1



X2

CP1



X2

CB15S



X12

NL38



X12


VS1





X2

TOOLS REQUIRED:


9/16" SOCKET WITH RATCHET TO SUIT or
BOX WRENCH





OR

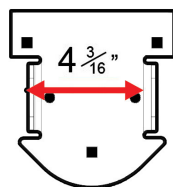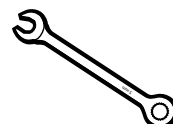

Narrow Mouth (SHN1)

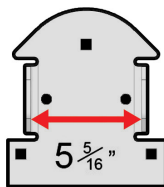


Wide Mouth (SHW1)

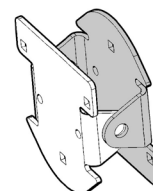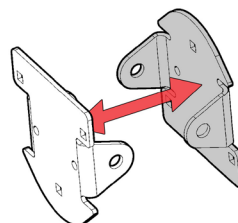

Each pair of hinges will be identified by a narrow and wide mouth (See above image).
The narrow mouth bracket will fit into the wide bracket of each pair.

1

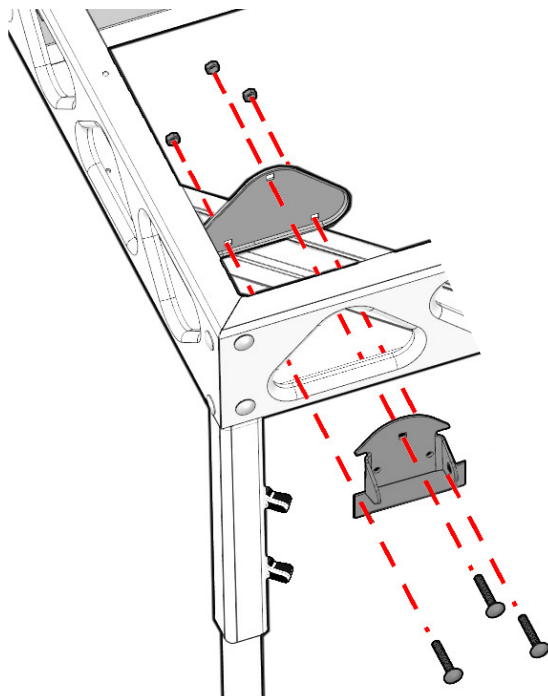

SHN1



X1

TPU1



X1

CB15S





X3

NL38




X3

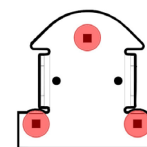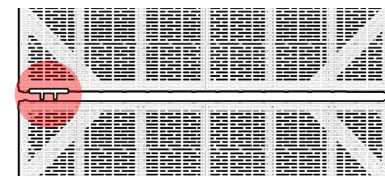

Connect the hinge assembly as shown above.

PLEASE NOTE: The decking has been removed from the above image and any proceeding images to better illustrate installation.

2

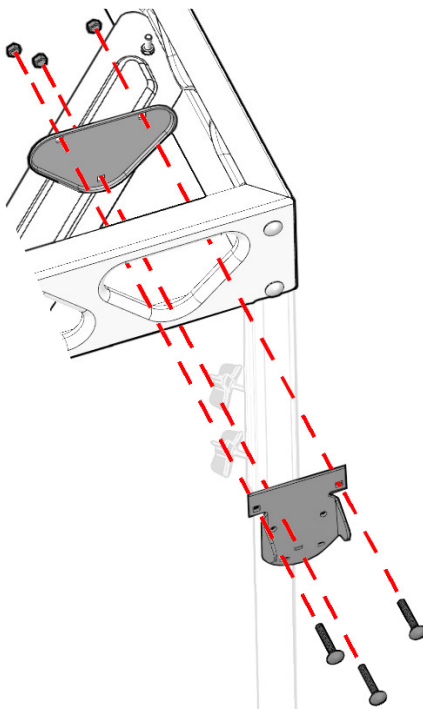

SHW1



x1

TPU1



x1

CB15S





x3

NL38




x3

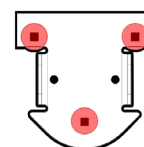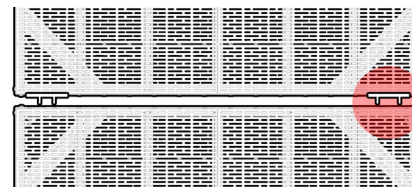

Connect the hinge assembly as shown above.

3

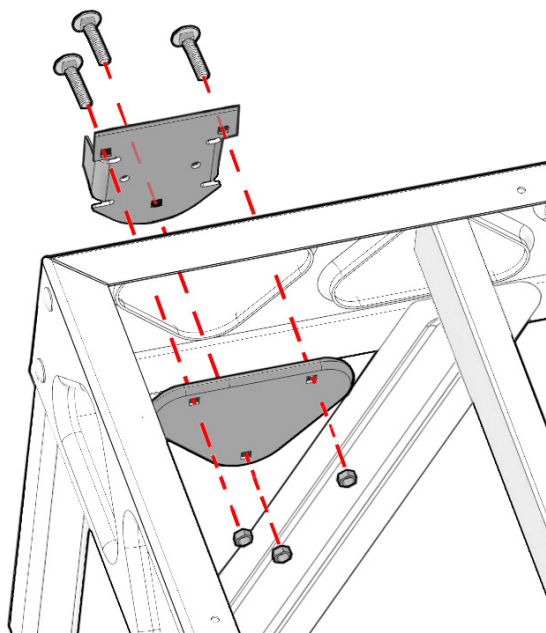

SHW1



x1

TPU1



x1

CB15S





x3

NL38




x3

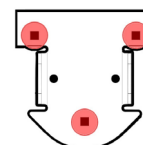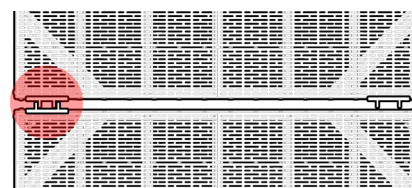

On the opposite dock connect hinge assembly as shown above.

4

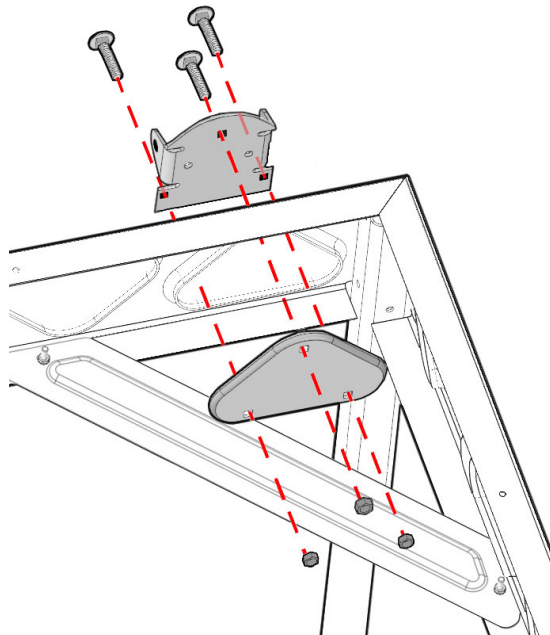

SHN1



X1

TPU1



X1

CB15S





X3

NL38





X3

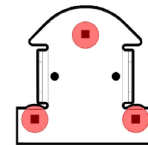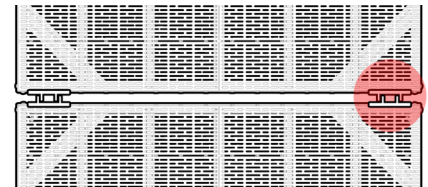


Connect the hinge assembly as shown above.

5


Continued on next page

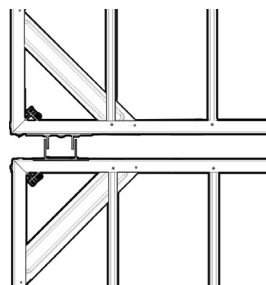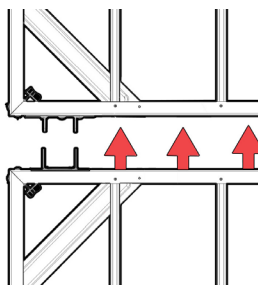




8x8 to 8x8

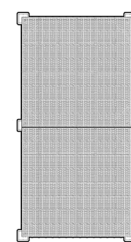

4x4 to 4x4





8x8 to 4x4

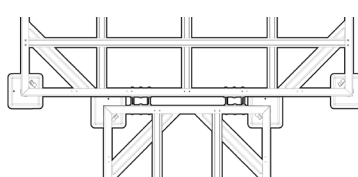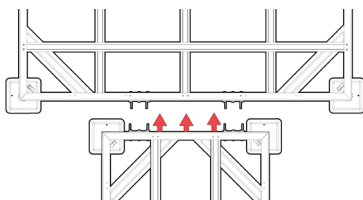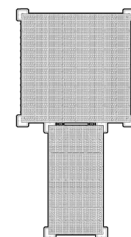


Once hinges (HP1) on both docks are assembled pull both docks close to each other. Place the docks so the edges of both docks are aligned with one another. Align the hinges on either side of the docks so they fit into each other (See images above). Ensure that the holes between both hinges line up with one another. Do the same for the hinges on the opposite side of both docks.

5

Continued from last page


VS1  X4
HP1  X4

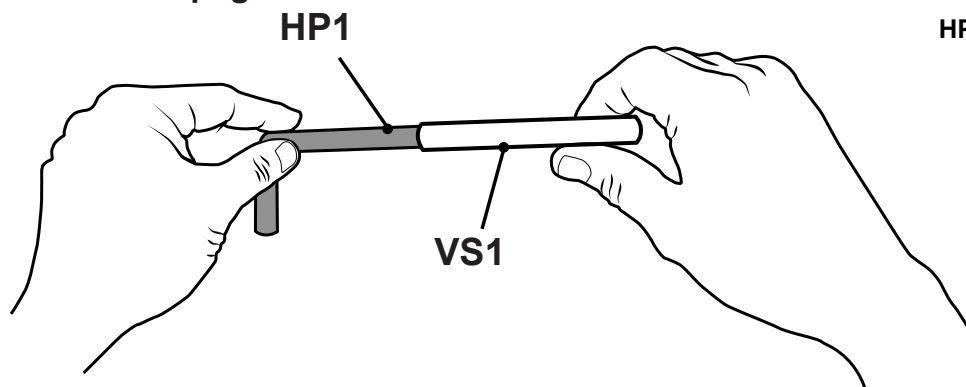

An optional sleeve (VS1) has been included with your kit to dampen any movement and sound that may arise from hinge use. Slide the vinyl sleeve onto the end of the pin (HP1).

6

CP1  X2

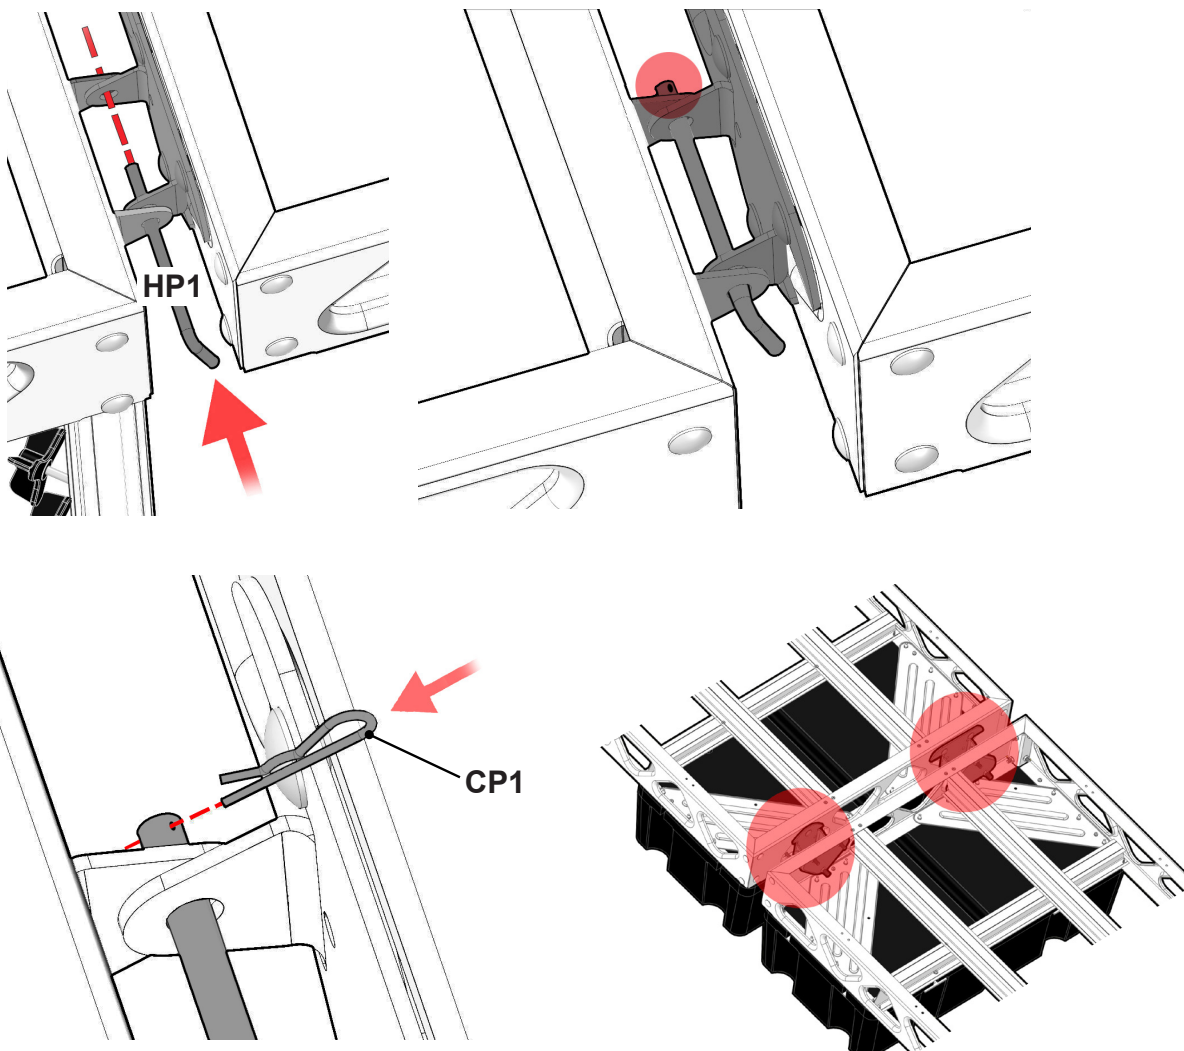

Fasten hinge as shown. Repeat **Step 6** for hinge assembly on the opposite end of the dock.

PLEASE NOTE: It may be helpful to use locking pliers to insert the cotter pin into the hinge pin.

When separating dock sections follow the above directions in reverse removing the Cotter Pin (CP1) and then removing the Hinge Pin (HP1) from between the hinges.