


INCLUDED IN KIT:




TOOLS REQUIRED:

9/16" SOCKET WITH RATCHET
TO SUIT
OR
9/16" BOX WRENCH




1

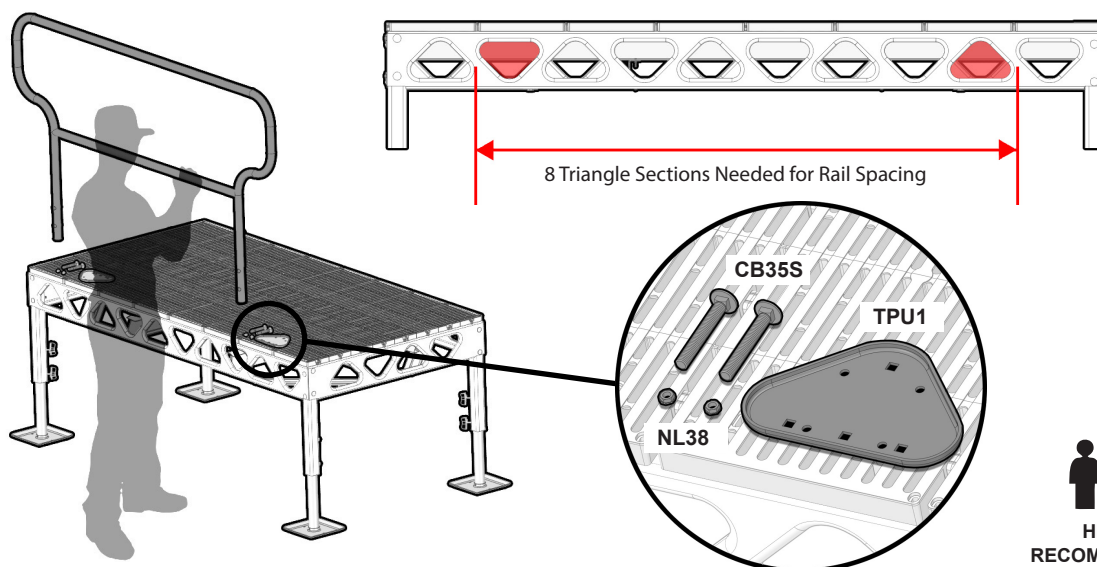

Find an area on your dock that will have 8 triangle sections between the railing. Organize and set all the hardware you will need (Items TPU1,CB35S,NL38) onto the decking near each point of fastening. Using the help of another person, hold the end of the railing level near the triangle cutout where it will be installed.

2

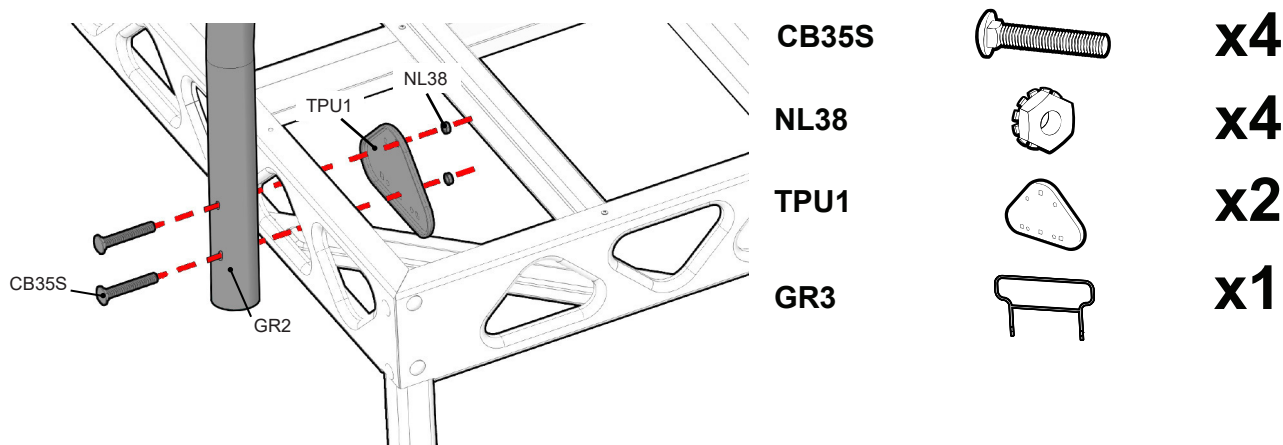

With one person holding the railing level place the **Triangle Backing Place(TPU1)** on the inside of the truss triangle cutout and fasten. Do this for both ends of the Hand Railing frame.

PLEASE NOTE: Decking has been removed from the image above to better illustrate assembly where the Triangle Backing Plates are positioned in the frame.

3

