

CanadaDocksTM











Where *fun* on the water *begins!*







5 Step Techstar Ladder

Read this manual and related assembly instructions before attempting to assemble the parts enclosed to ensure that your new CanadaDocks System is assembled safely and correctly.


INCLUDED IN KIT:

TLB1		1x	B5165		2x	TLU1		2x
CB35S		8x	NN516		2x	W3		8x
W516		4x	NL38		8x			


Tools Required:

9/16" SOCKET WITH RATCHET TO SUIT OR 9/16" WRENCH		OR	Power Drill with 13/32" Bit	
#3 Phillips Bit or Phillips Screw Driver			Safety Protection	

1

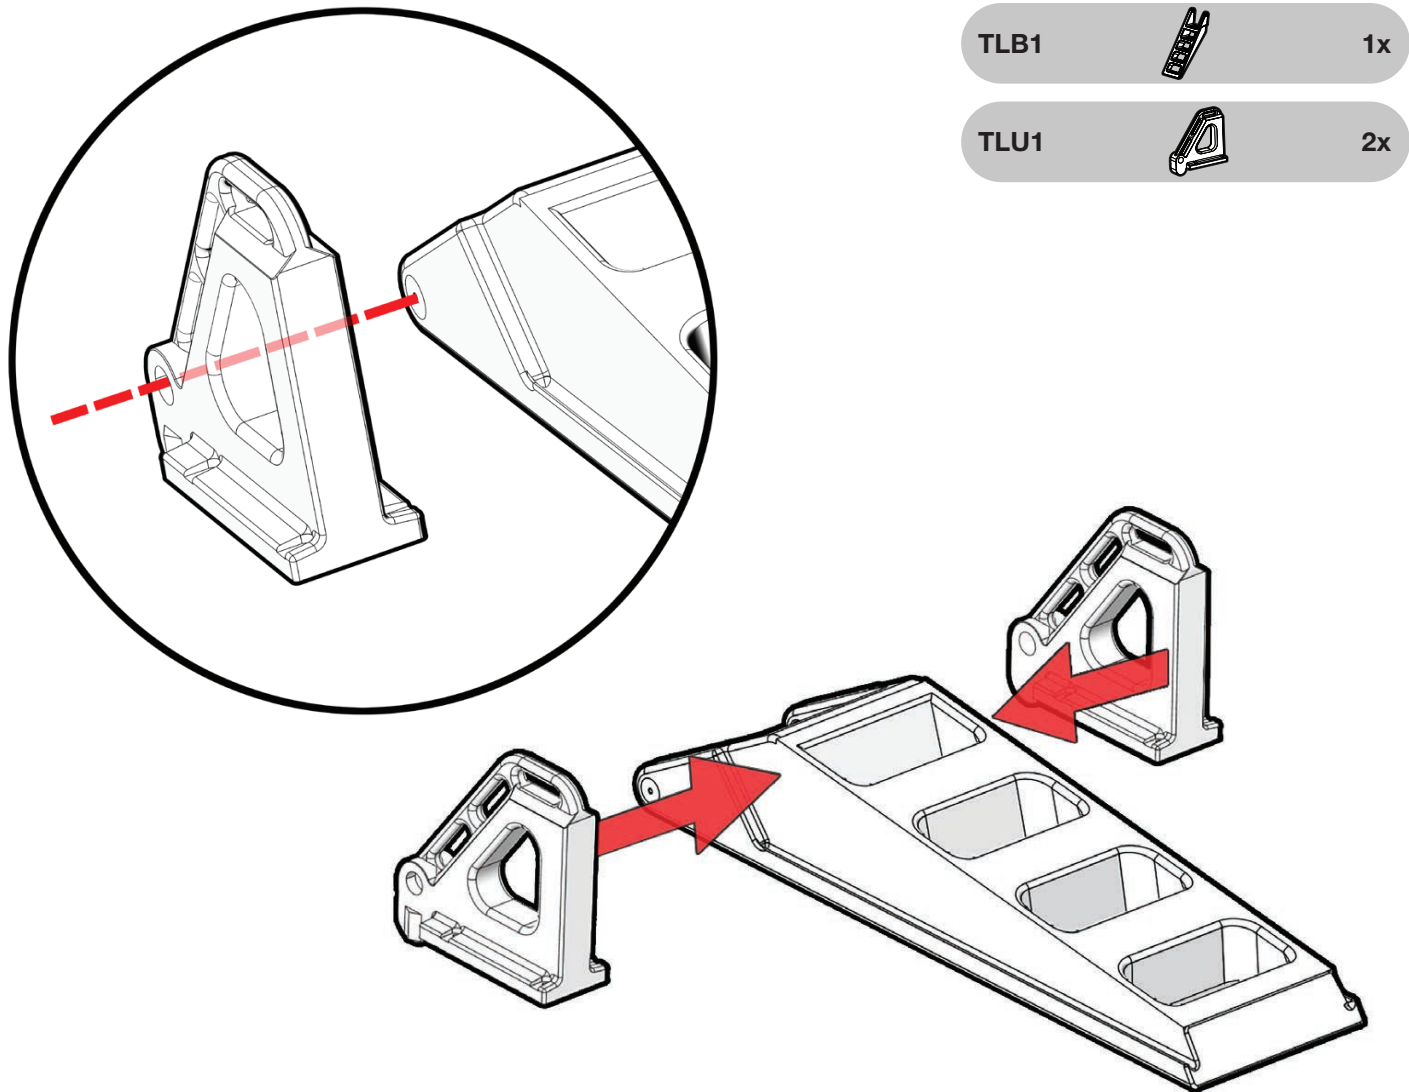

2

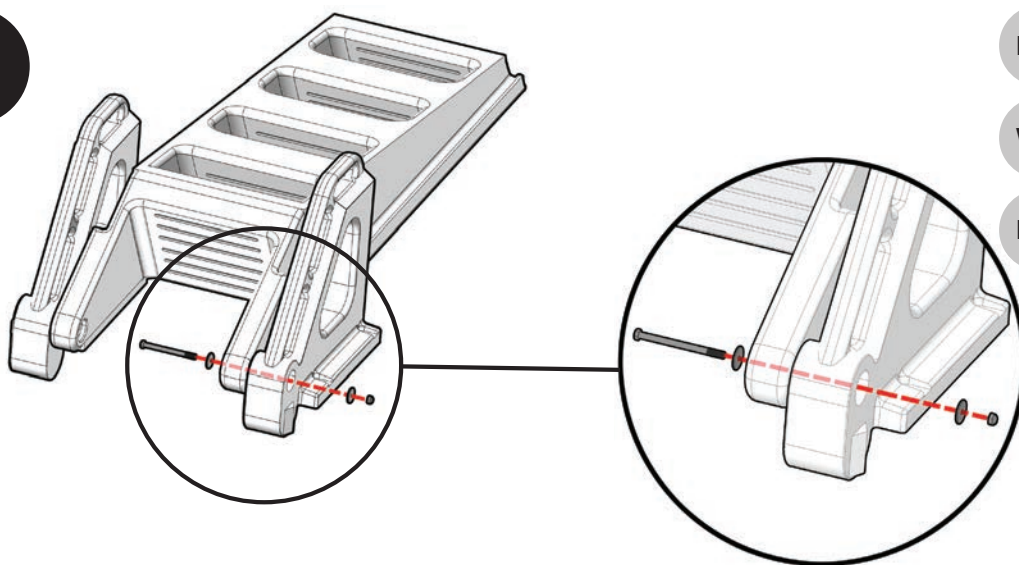


B5165  1x

W516  2x

NN516  1x

3

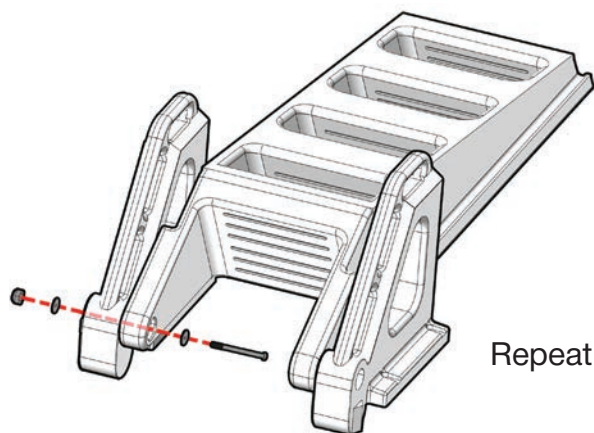


B5165  1x

W516  2x

NN516  1x



Repeat **STEP 2** on the opposite side.

4

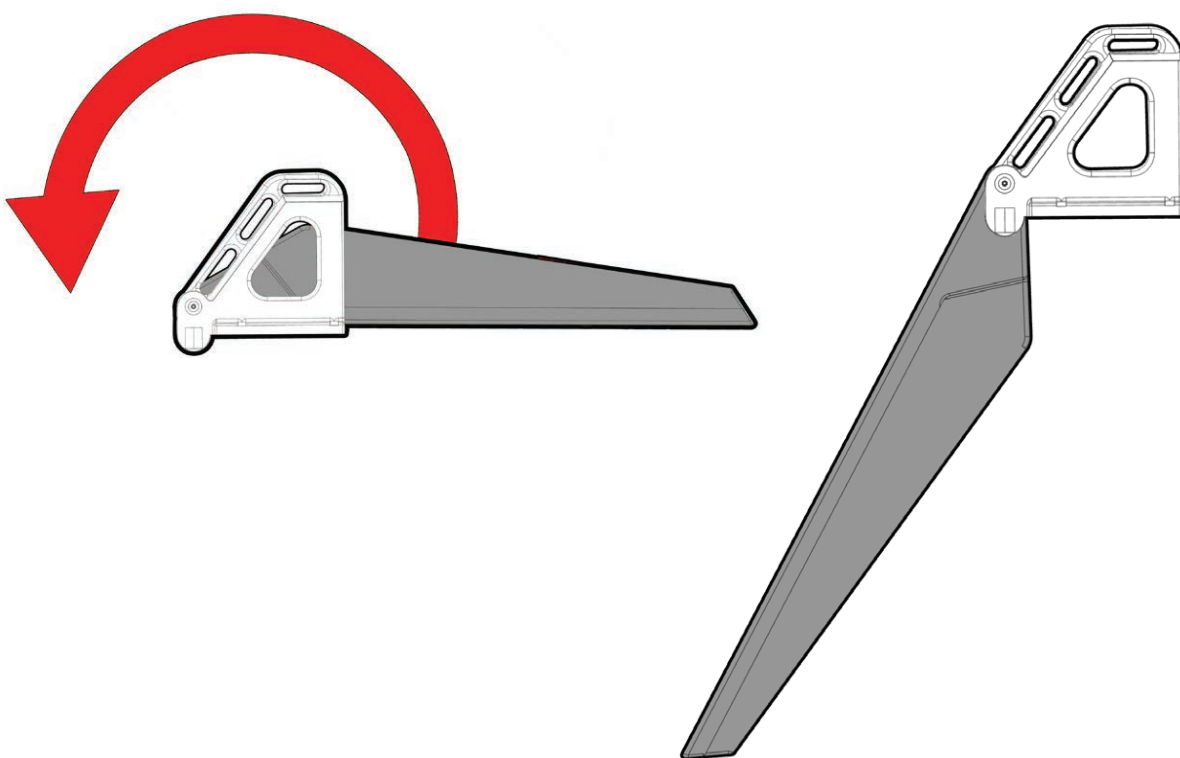


5

Ensure the ladder isn't obstructed by anything and is flat against the truss.

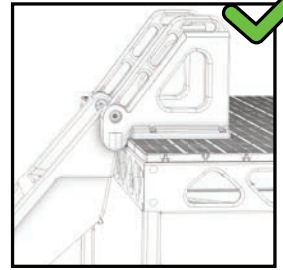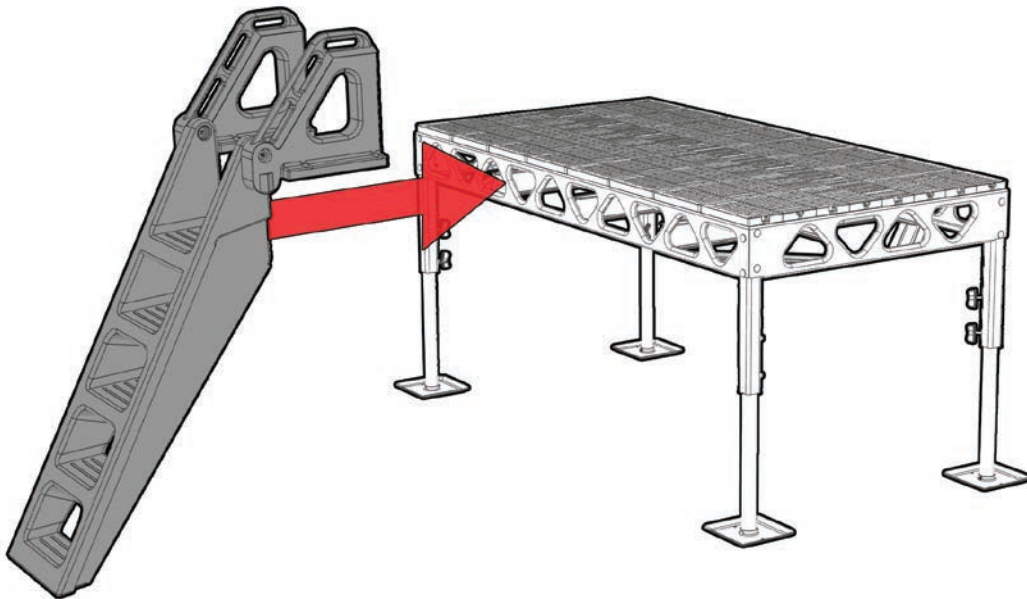


No Obstructions

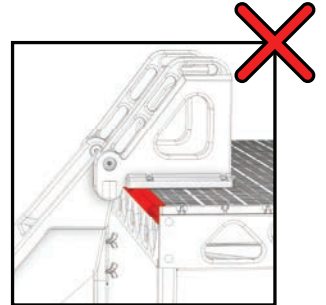

P-Bumper is obstructing the ladder.

PLEASE NOTE: The ladder can be added anywhere along the perimeter of the dock. If the holes do not line up between the ladder and the dock, simply drill through the ladder frame holes and the dock decking with a 13/32" drill.

6

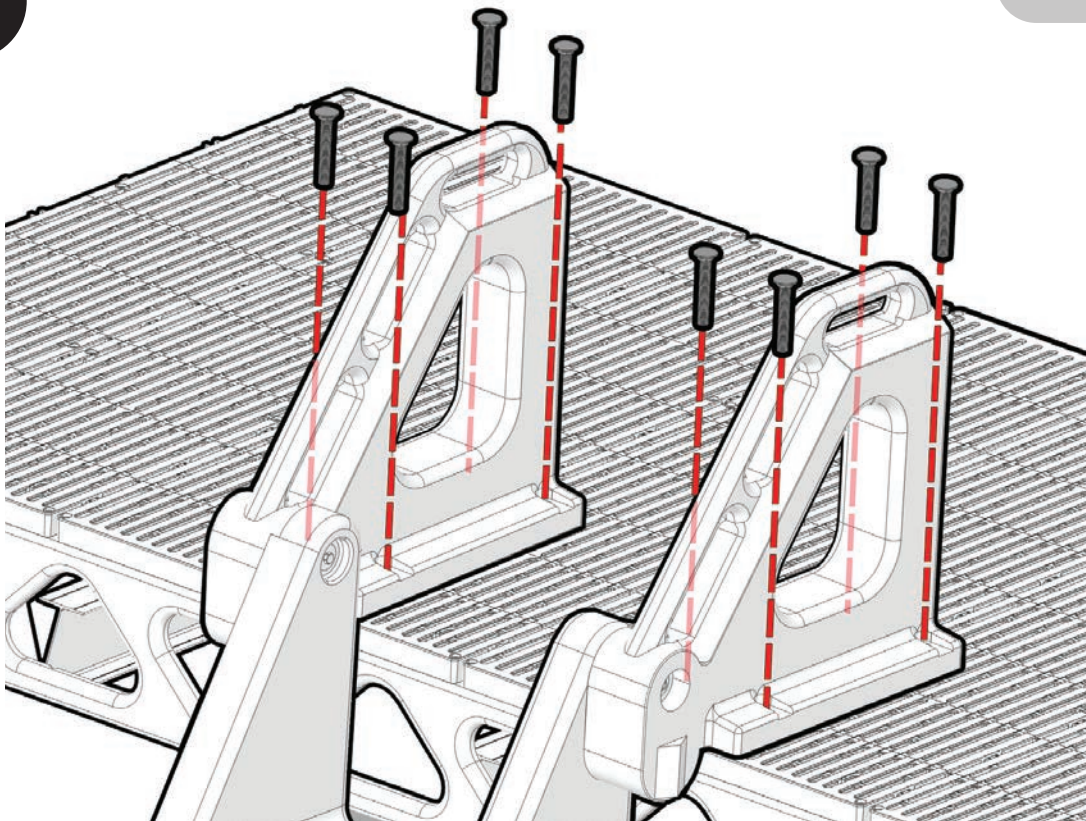

CB35S



8x

7

From the underside of the dock, complete the assembly by fastening the carriage bolts (**CB35S**).

W3




8x

NL38




8x

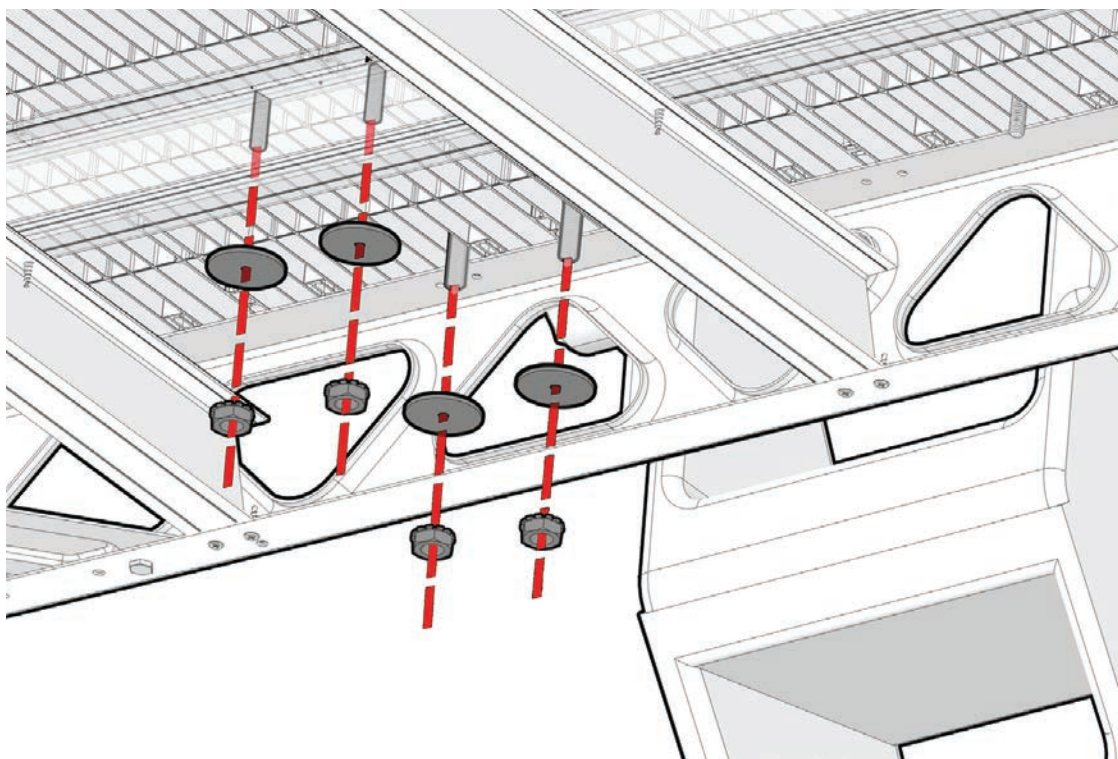

8

Slightly loosen bolts from **STEPS 2-3** until the stairs can move freely between flip-up and downward position.

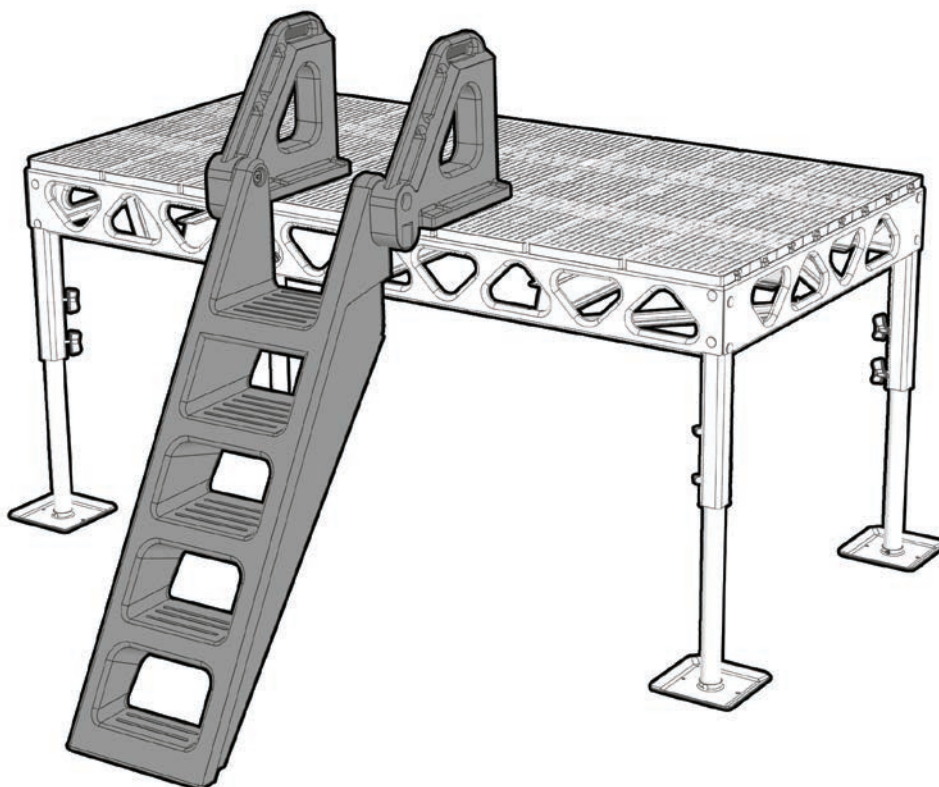

NOTES:

NOTES:

Where *fun* on the water *begins!*

Please leave us a **Google review**



We'd love to hear from
you and see your photos!



Phone

705.434.0359

1.877.434.0359



Email

info@canadadocks.ca



Address

3690 Adjala-Tecumseth Tl,
Beeton ON L0G 1A0

Rev 06 10.10.24

CanadaDocks.ca

