



INCLUDED IN KIT:

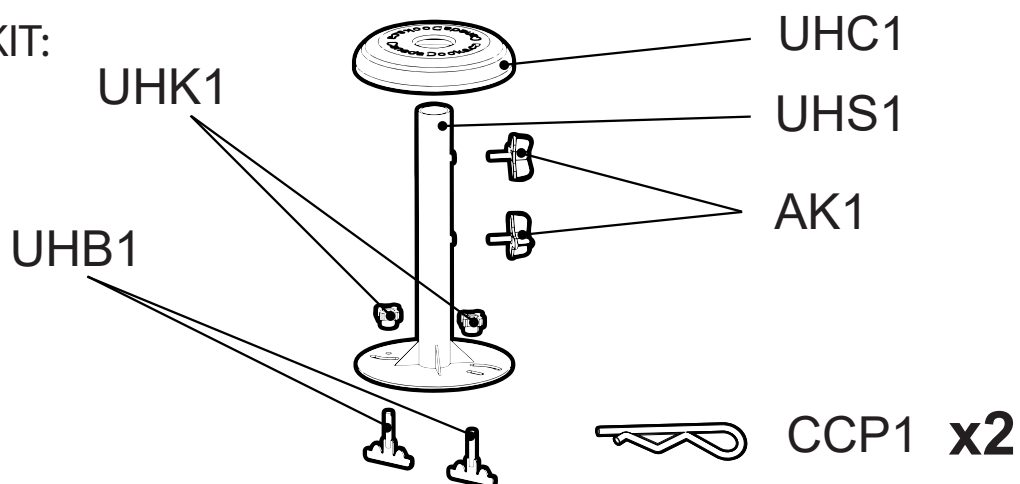


TOOLS REQUIRED:

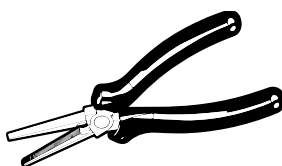


Needle nose Pliers

1


Assembling The Base

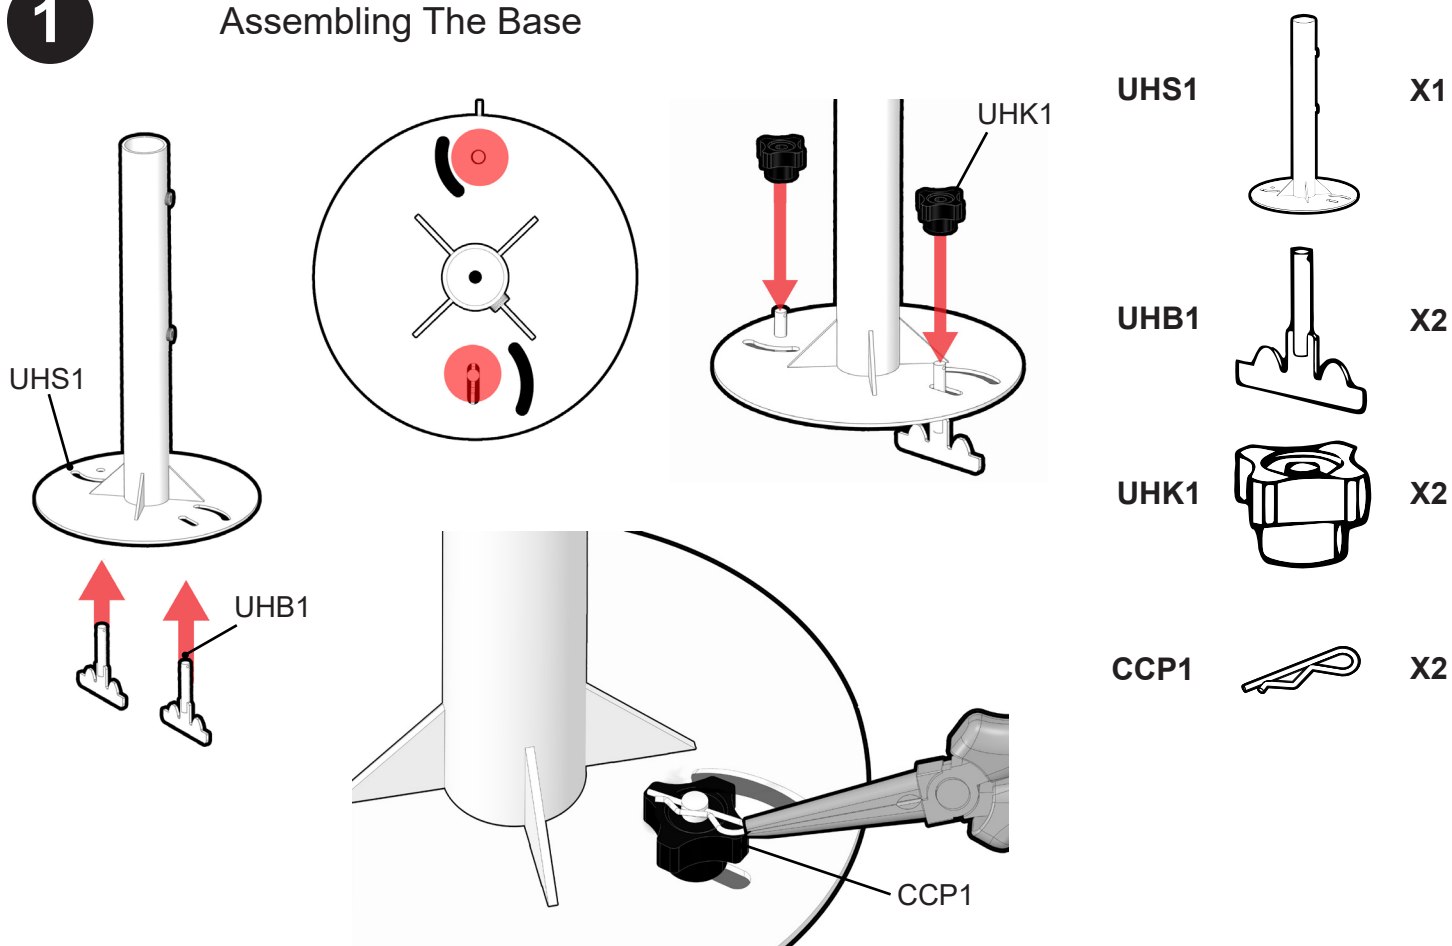

2

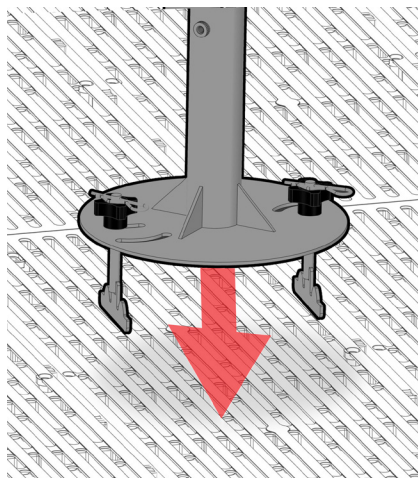


3

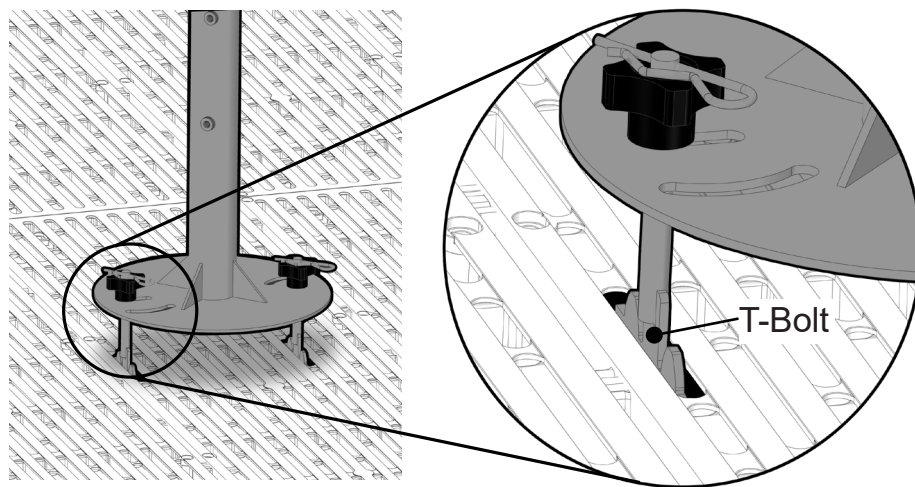


Align both T-Bolts (UHB1) so they fit inside the decking slots.


4

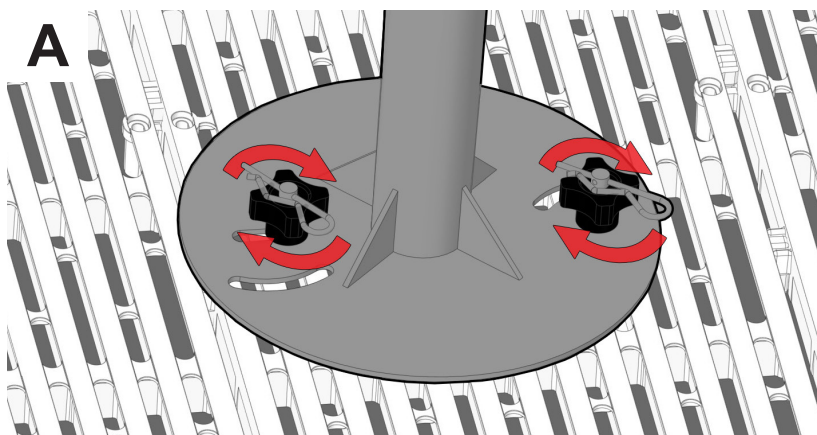


Turn the knobs until the T-Bolts are touching the fins of the decking (See image B).

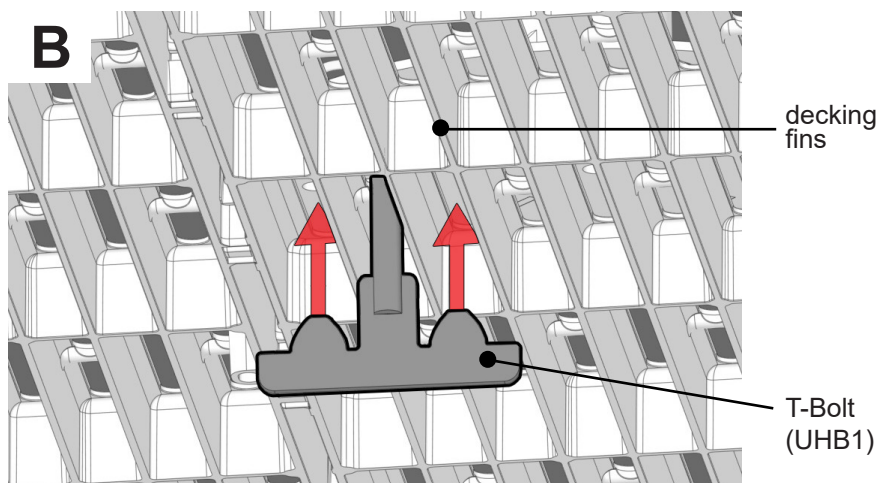

5

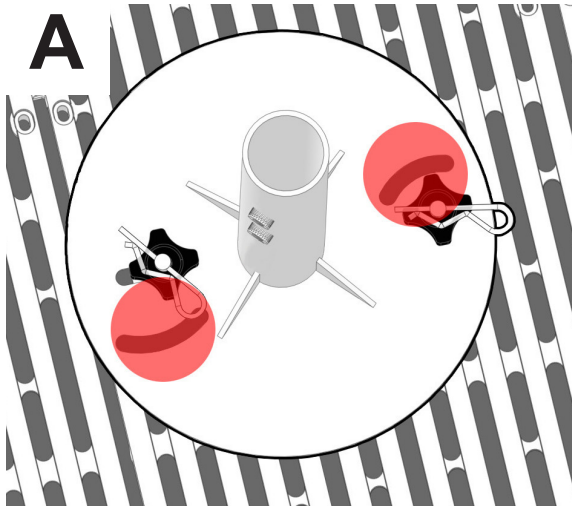


B

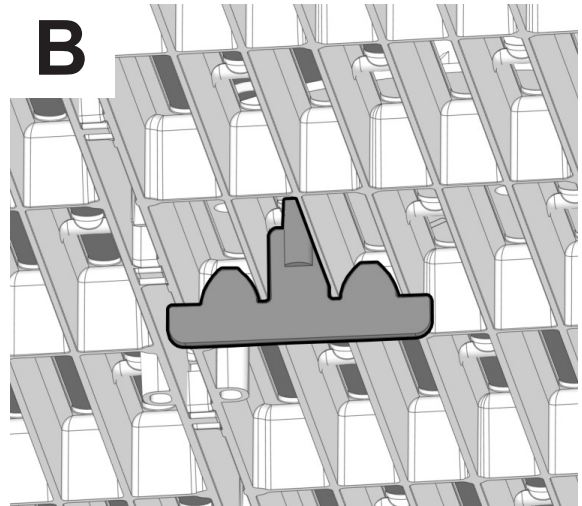


Use the curved windows (see image A) to ensure the T-Bolts align with the fins of the decking.
When the T-Bolts are aligned with the fins of the decking tighten the knobs.


6

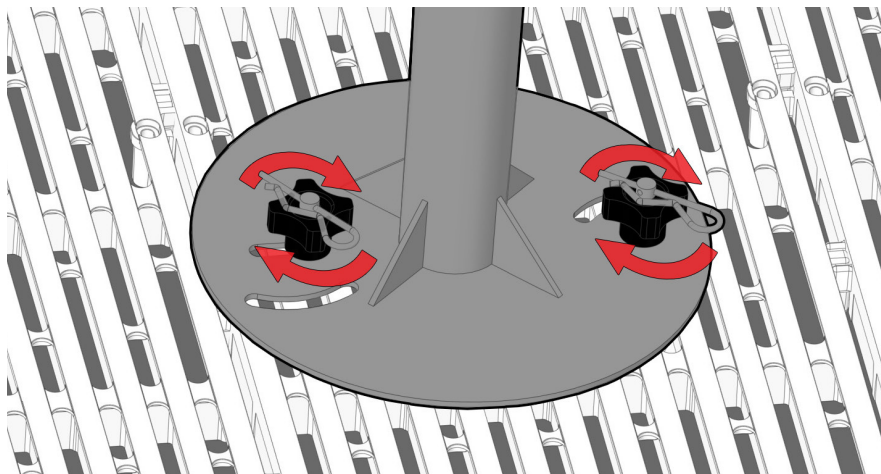


7

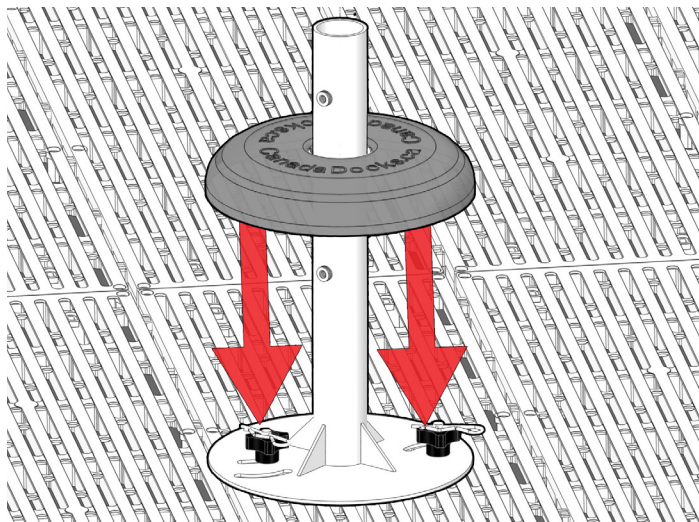

8

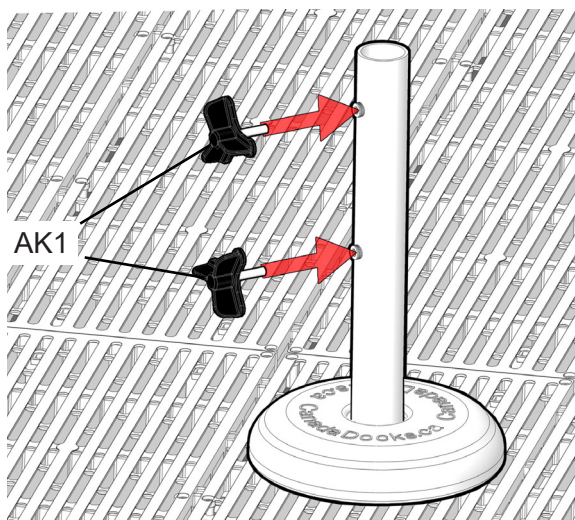


UHB1

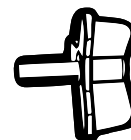


X2

9

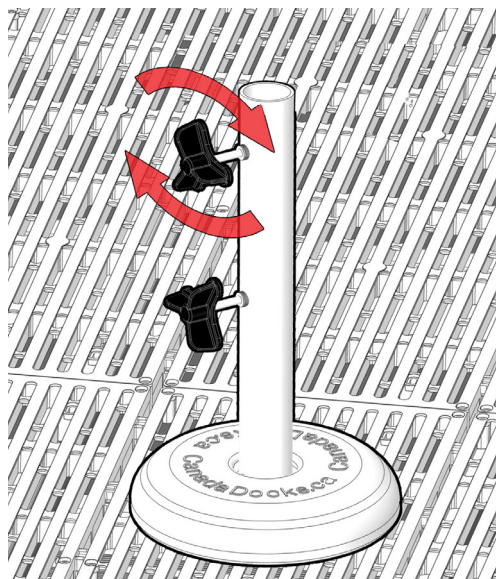


Install the Adjustment Knobs (AK1) but keep loose to accommodate the Umbrella Shaft (See Step 10).

10

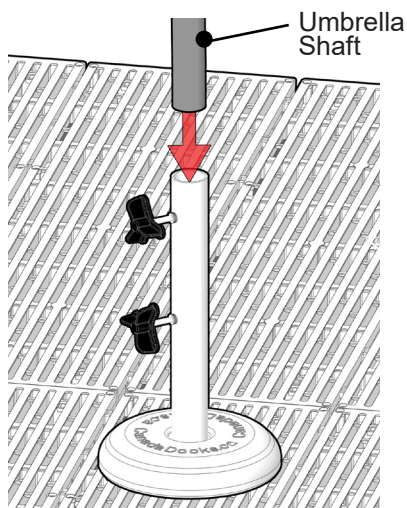

11

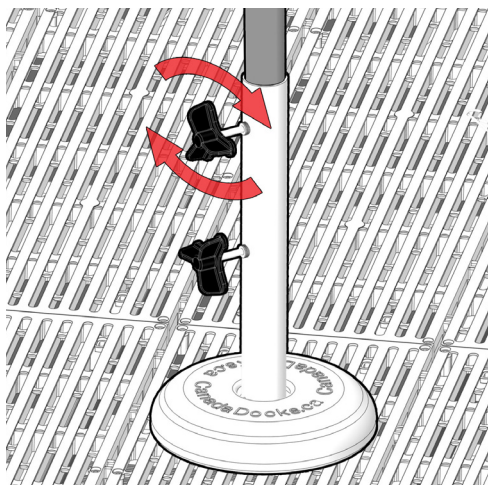

Tighten both knobs.

12

