

CanadaDocks™



Where *fun* on the water *begins!*



Vertical Bumper Kit Installation

Read this manual and related assembly instructions before attempting to assemble the parts enclosed to ensure that your new CanadaDocks System is assembled safely and correctly.

INCLUDED IN KIT:

VB2




1x

NF38



2x

TR3



2x

TPU1



1x

NL38



2x

Tools Required:

9/16" SOCKET WITH RATCHET TO
SUIT OR 9/16" WRENCH



MARKING TOOL




1

VB2




1x

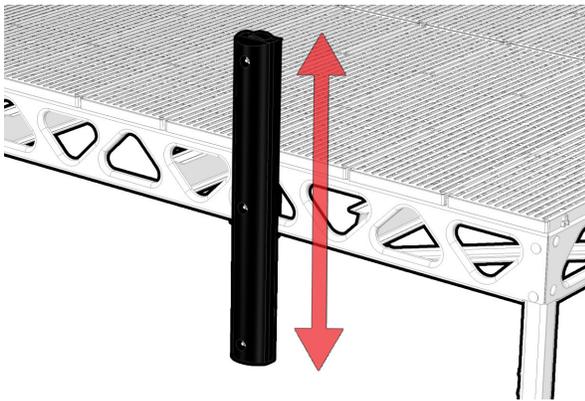

Hold the float to the side of the dock to estimate the height of your bumper.

2

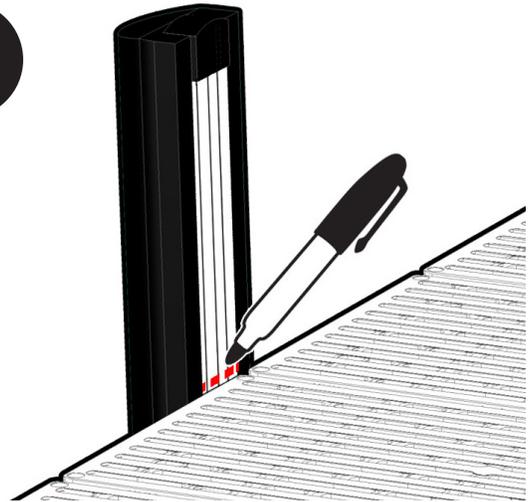

Mark the bumper level with the dock.

3




3"




From your original mark, measure 3 inches down and create a new mark.

4

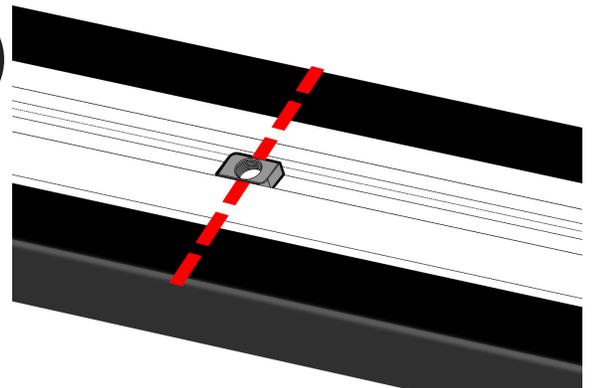


Place the square nut in the slider along the new mark.

5

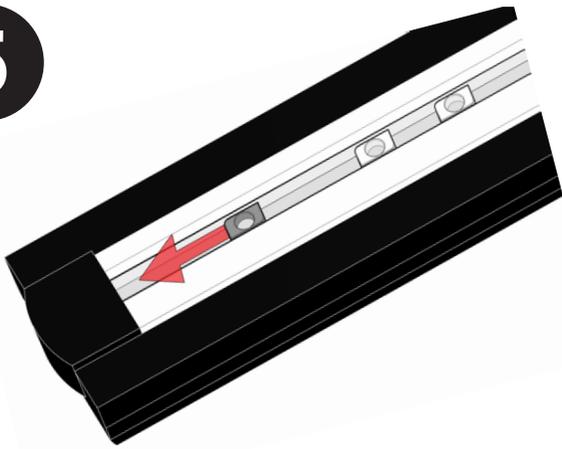


Only two square nuts are needed for fastening the vertical bumper to the dock. If your bumper has more than two nuts in the slot, you can hide the extras under the black sleeves at the end.

6

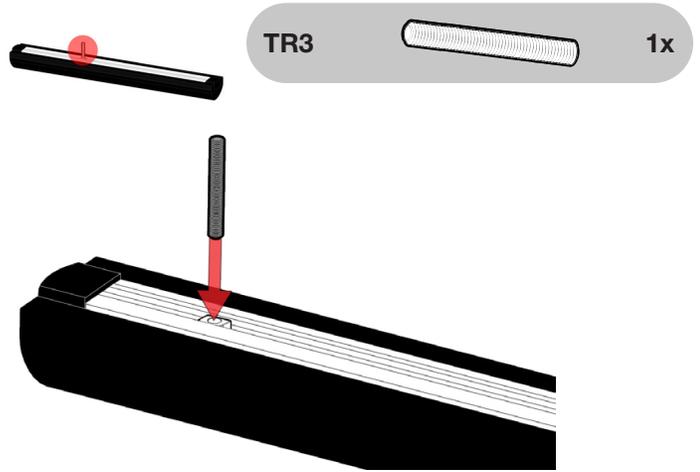


Insert the rod into the square nut.

7

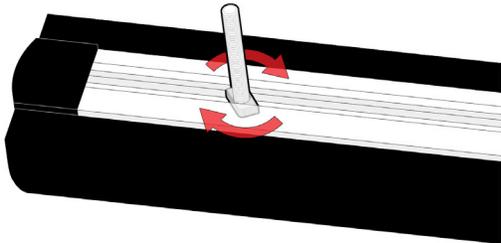

Twist the square nut inside the aluminum channel of the bumper until it locks to ensure it will not fall out. Hold your finger on the nut to prevent it from becoming misaligned. Tighten the rod.


8

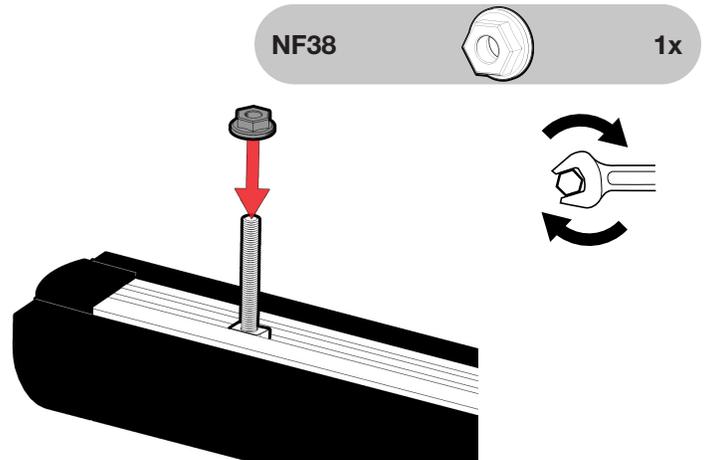

Fasten the flange nut (**NF38**) onto the rod. Hold the square nut to ensure it stays in play while tightening the assembly.

9


TR3 1x

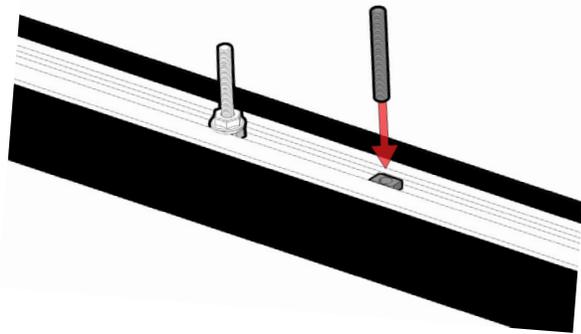

Insert the second rod like in **STEP 6**.

10


NF38 1x

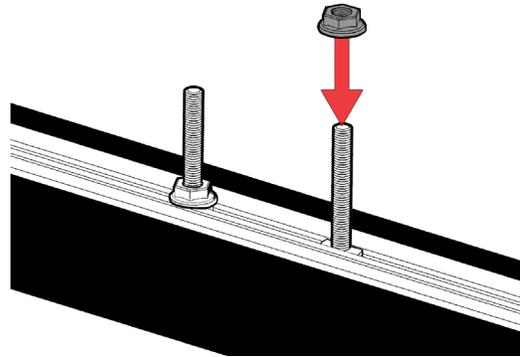

Fasten the flange nut (**NF38**) onto the rod. Keep loose so you may slide the bolt along the channel for the next step.



11

TPU1 1x

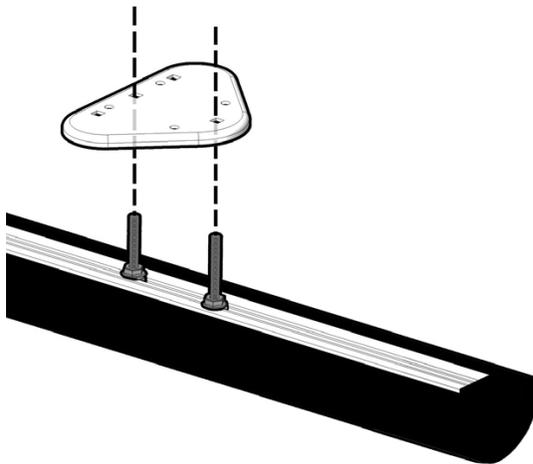


Align the rods so that they fit onto the holes of the triangle backing plate.

12

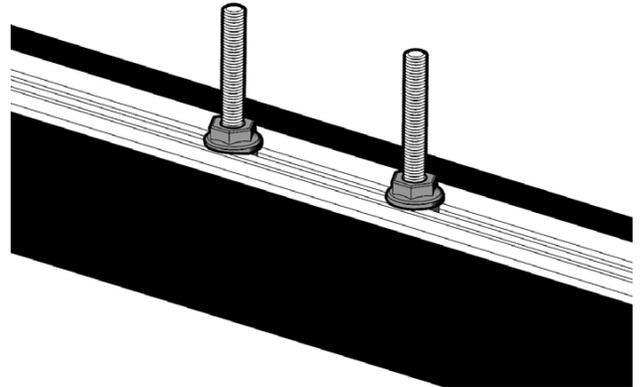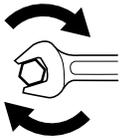


Tighten the flange nuts in place.

13

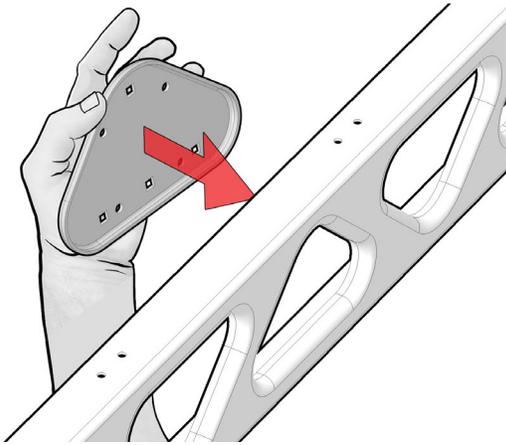

Find an appropriate location to mount the vertical bumper and place the triangle plate on the back of the truss.


14

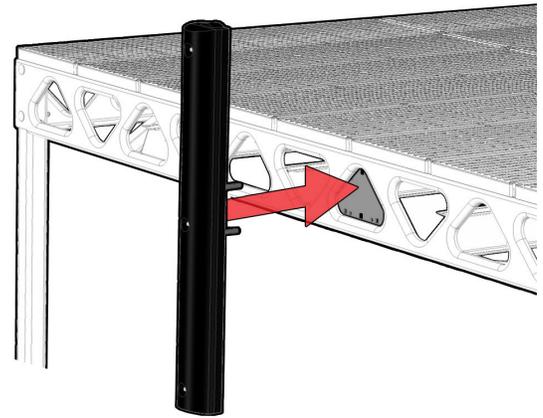

Feed the bolts on the bumper through the backing plate while holding it in place.

PLEASE NOTE: Some components on the dock from the image above have been hidden to better illustrate assembly.

15

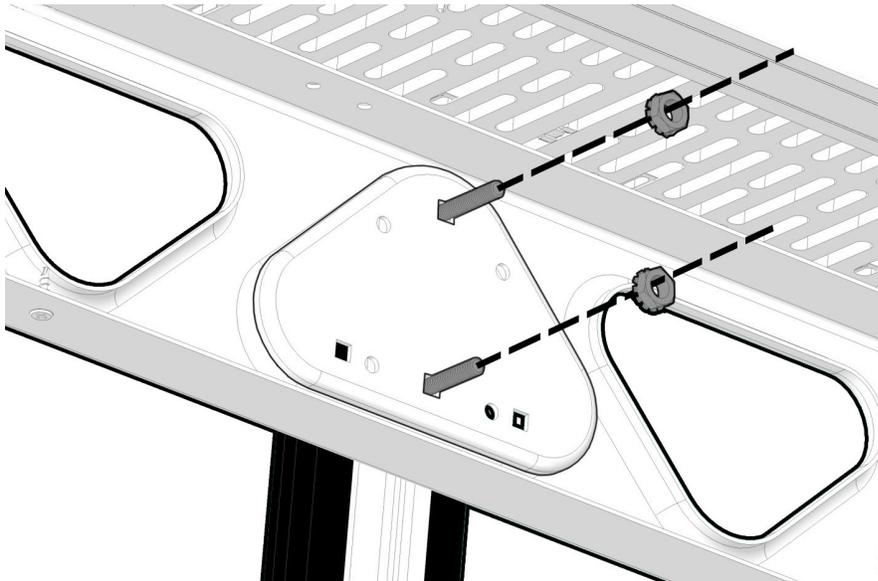

Using the lock nuts (**NL38**) fasten the assembly onto the dock as seen above.

NL38



2x

NOTES:

NOTES:

Where *fun* on the water *begins!*

Please leave us a **Google review**



We'd love to hear from you and see your photos!



Phone

705.434.0359

1.877.434.0359



Email

info@canadadocks.ca



Address

3690 Adjala-Tecumseth Tl,

Beeton ON L0G 1A0

Rev 09 13.11.24

CanadaDocks.ca

