













INCLUDED IN KIT:

SDRC1	Connector Plate		X1	NNS1	Nylock Nut 1 Inch		X4
SDRC2	Connector Plate		X1	W151116	Washer		X4
SDH2	Hinge		X2	CB15S	3/8x1½ Carriage Bolts		X24
SDSP	Steel Plate		X4	NL38	3/8" Lock Nut		X24
SDHC1	Half Connector		X4	SDRP	Rubber Plate		X4
TPU1	Universal Backing Plate		X4				


TOOLS REQUIRED:

- 15/16" socket with ratchet/box wrench to suit or medium adjustable wrench
- 15/16" socket with ratchet/box wrench to suit or medium adjustable wrench

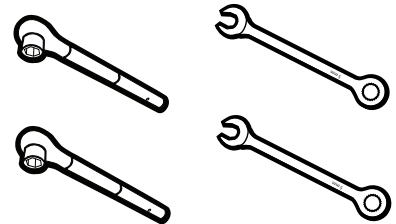

1

SDRC1




X1

W151116



X2

SDRC2



X1

NNS1




X2

SDRP




X4

CB15S



X12

SDSP



X4

NL38



X12

SDH2




X2

SDHC1




X2


A

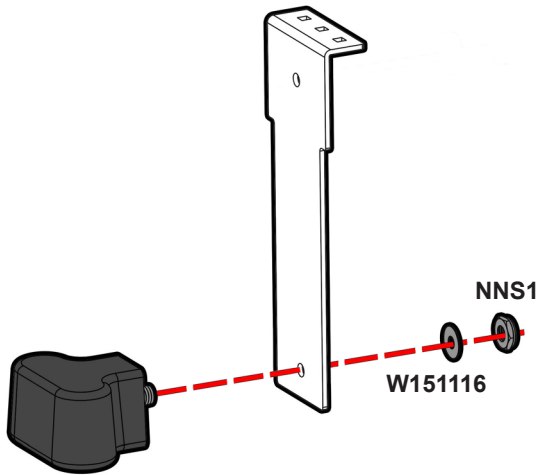


B

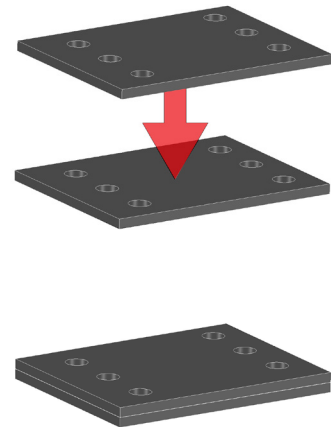


C

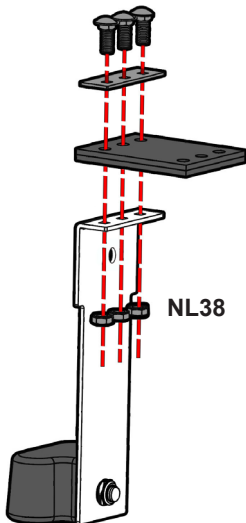

D

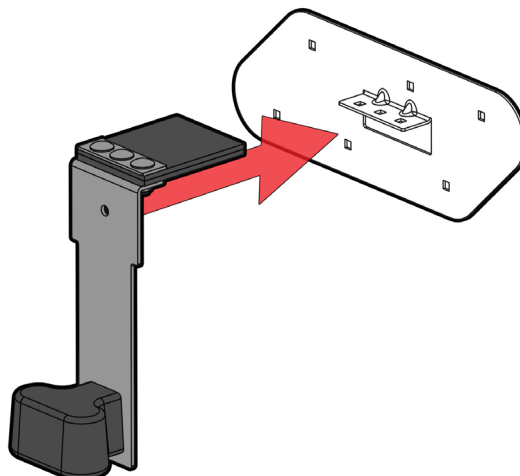

E

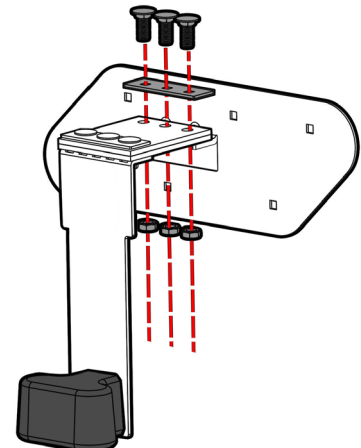

Follow Step 1 for both brackets.

2

TPU1



X4

CB15S




X12

NL38





X12


HINGE ASSEMBLY




X2

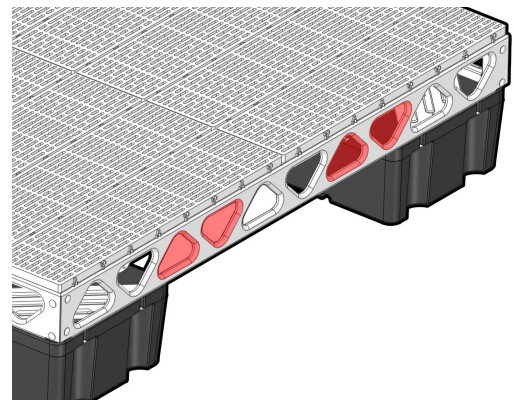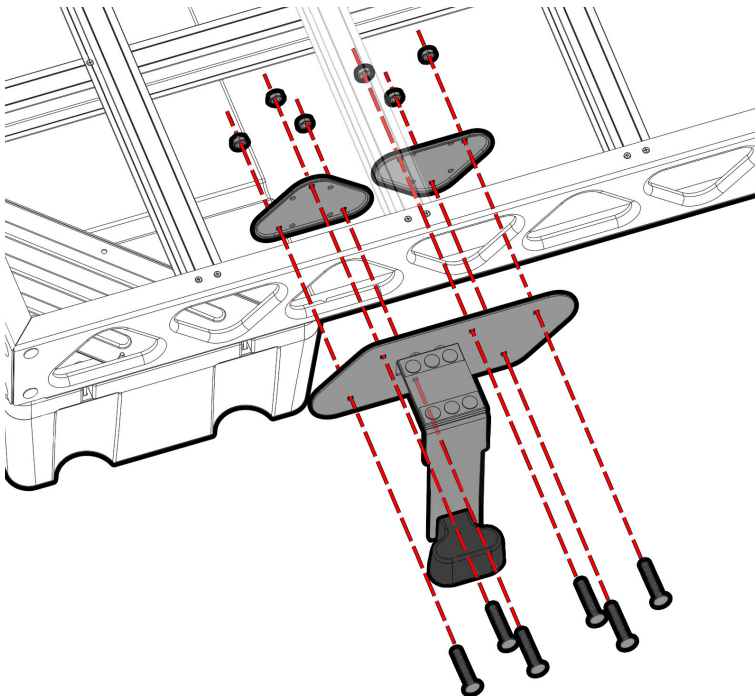

A

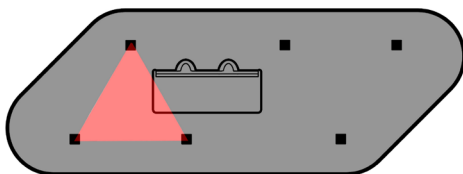


B

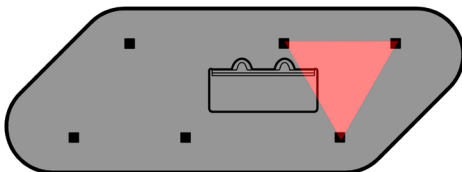

A






B

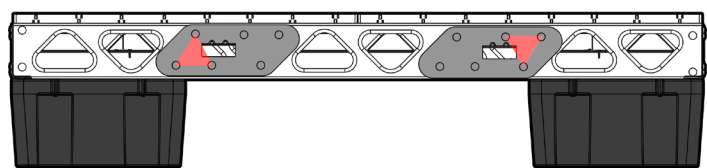


Both Connector plates in your kit have a bracket that is positioned differently. Connector A should be installed on the left side of the dock. Connector B should be installed on the right side.

PLEASE NOTE: Some elements on the above images have been removed to better illustrate installation.

3

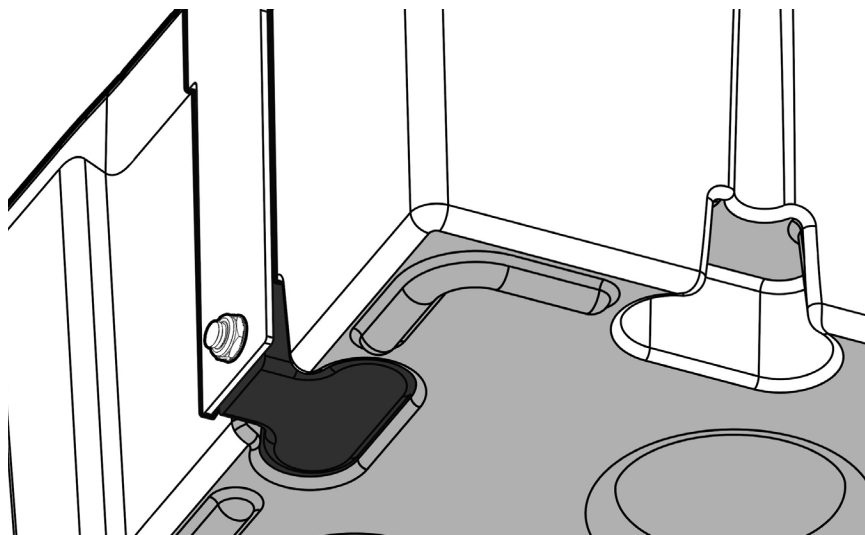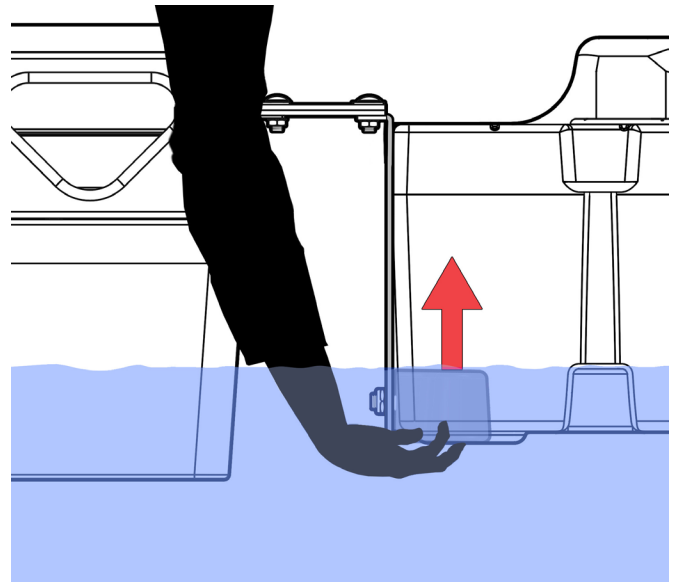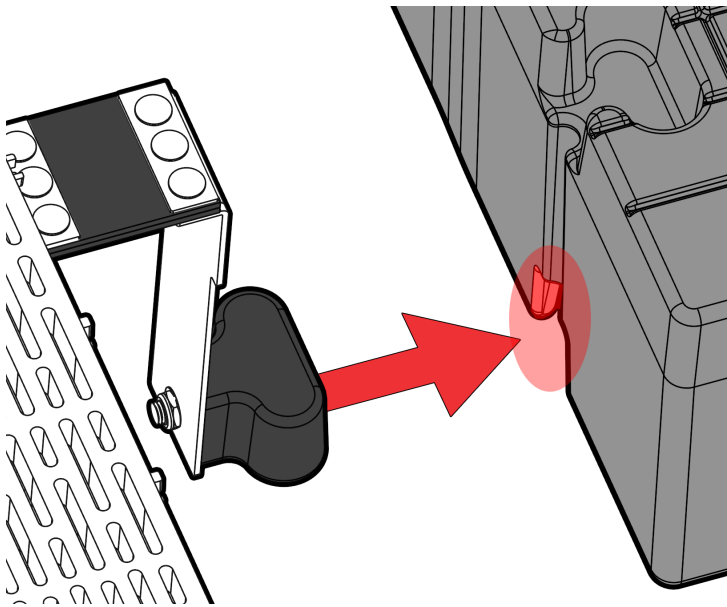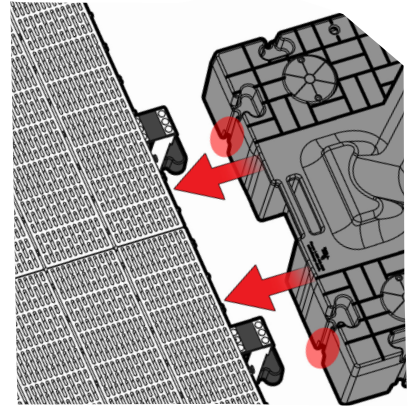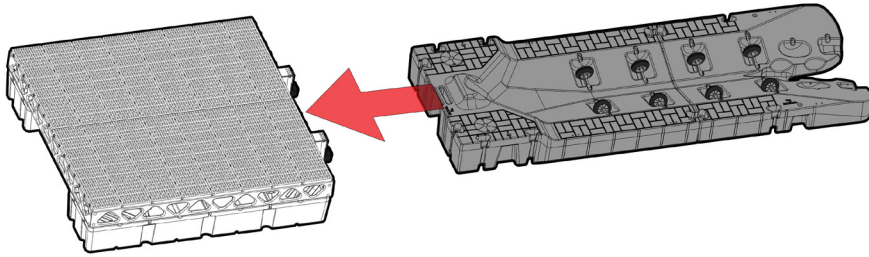

4

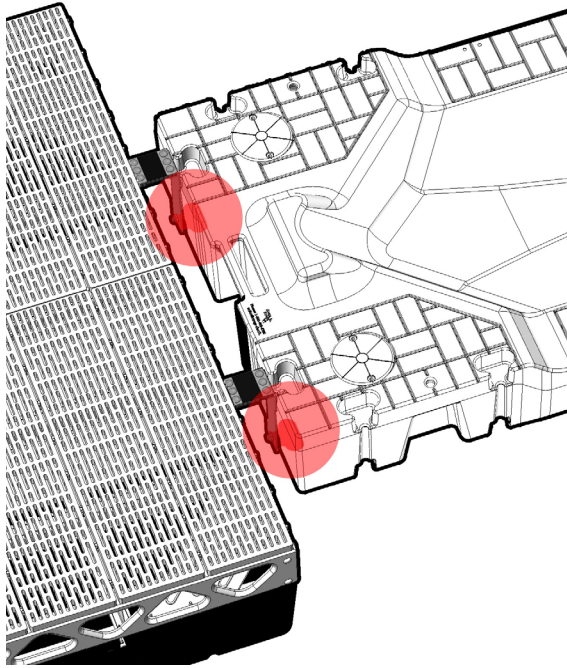

NNS1




X2


W151116



X2

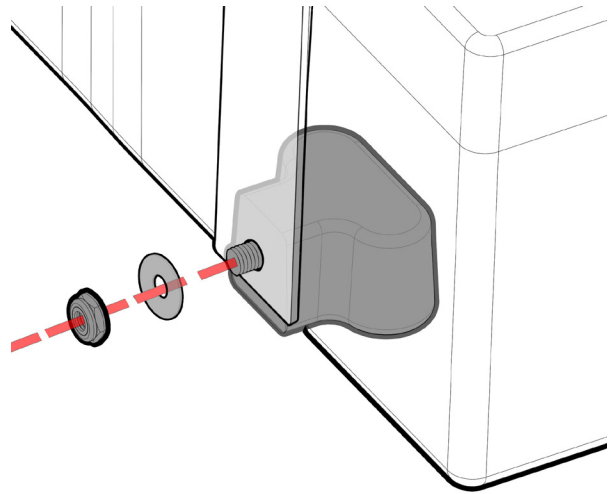


5

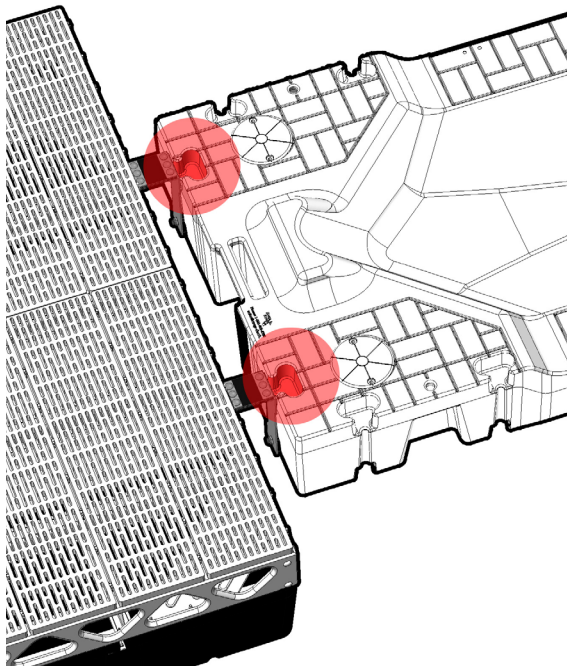

SDHC1



X2

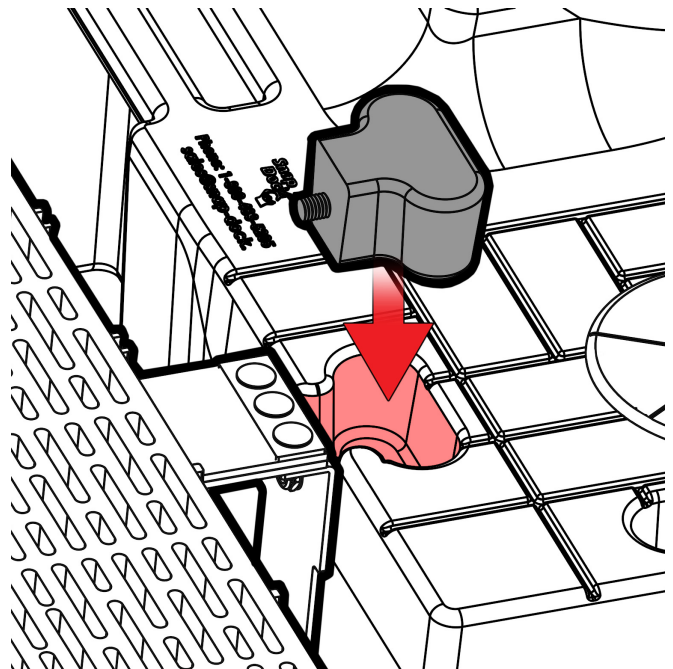

6

NNS1





X2

W151116



X2

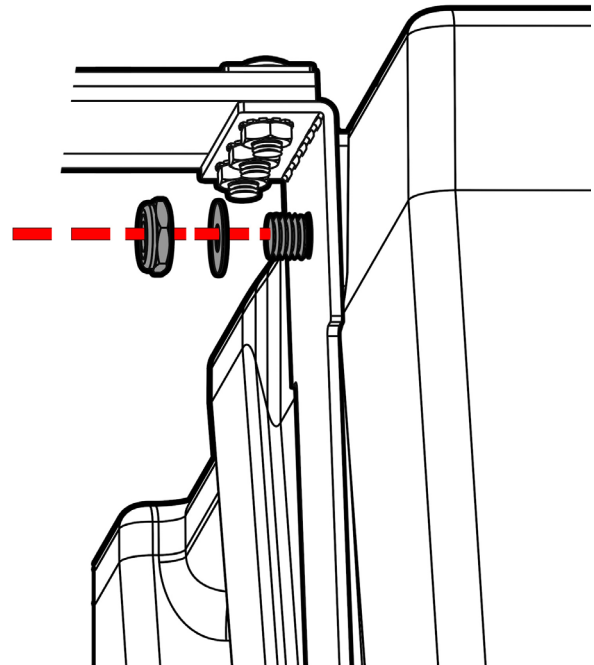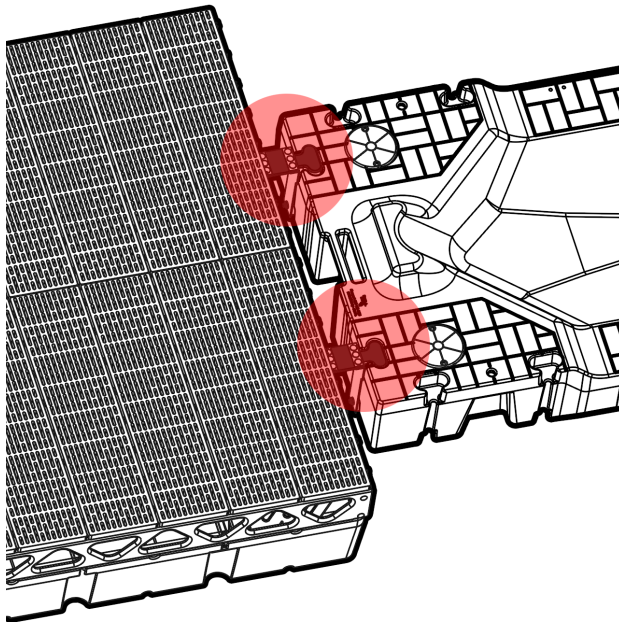

7

